

Smart TV



《Fast usage instruction》

Content

Power on

1. Connect power
2. Connect television
3. Connect mouse

Use

4. Connect internet
5. Fix resolution of the screen
6. Fix voice
7. Install and delete the apps
8. Use the video calling

Update software

 
Power on

Connect power

1. Put the plug of the adapter into the socket , and connect the power supply to Smart TV V3

Connect television

1. Connect the Smart TV V3 to TV set with the HDMI cable
2. Mount the Smart TV V3 on the top of the TV set , then toggle the switch button to ON
3. The Smart TV V3 can begin to work normally
4. Wait until the Smart TV V3 totally powered on , the TV screen will show the primary desktop (see below picture)

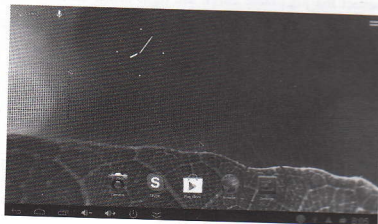

If it does not work , please check the connection of the power or the connection of the HDMI cable between the HDMI port of the TV and the HDMI port of the box

Connect mouse

1. The mouse is used to control pc, however it is the same usage as it is used with the Smart TV V3 . An ordinary wired mouse is enough.
2. Or a standard 2.4G wireless mouse or an air mouse will be much convenient to operate the Smart TV V3 .Insert the dongle of the mouse to the usb port of the device .

Note:After normally power on,click the mouse once on the left(not twice) to run the programme or select on the menu.

Use

Connect internet

A: Connect internet with WIFI

Smart TV V3 is equipped with Wi-Fi. It can be connected to the Internet through Wi-Fi. For the first use, set the Wi-Fi wireless net .

1.Click "Setting" once.



2. In the menu "Setting->Wi-Fi ", select " Wi-Fi ", switch icon from " OFF " to " ON ", choose Wi-Fi router name.



3. After keying in the code(if there is),select "Connection" to finish connection. The Wi-Fi icon will appear after finishing all the actions.

B: Connect internet with RJ45 Ethernet

 
Smart TV V3 is equipped with Ethernet . It can be connected to the Internet through Ethernet . For the first use, set the Ethernet net .

1.Insert the ethernet cable to the ethernet jack of the Sunvell V3

2.Click "Setting" once .




3. In the menu "Setting->Ethernet", select " Ethernet ", switch icon from " OFF " to " ON ".

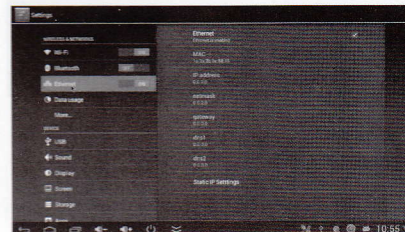

4. For seconds , the Ethernet icon will appear after finishing all the actions.


Fix resolution of the screen

 If the HDMI output of TV screen is not complete, entering "Display-output settings" and fix the resolution of the screen by mouse. Entering "output settings-Resolution", and set it as automatic selection.

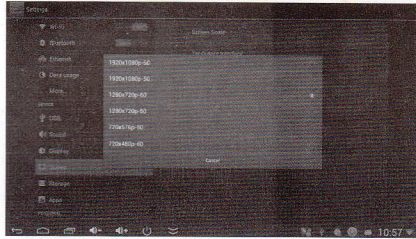

Fix voice

 
Click the mouse once on the voice icon to up and down the voice.

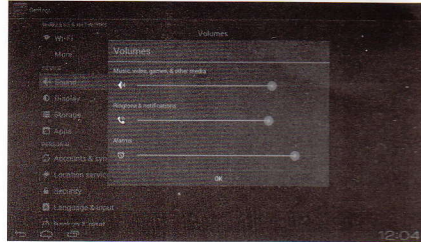


Install and delete the apps

Install the apps:

 1. Click the icon apps , all installed apps will appear.

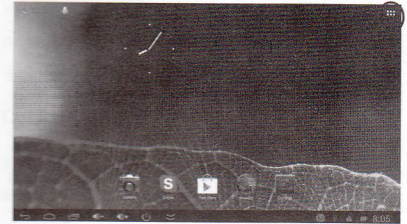

 
2. Choose "Play Store" (or to use another "android market" to install apps.)

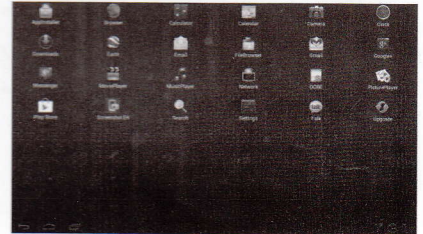

3. If it is the first time to run the "Play Store", then it needs to key in a Google gmail account as a " Play Store" account.

Delete apps:

 1. Running "Setting->Apps", the downloaded and installed apps will appear. Click the "DOWNLOADED " icon , the apps and it's information desktop will appear. Then click "Unloading"

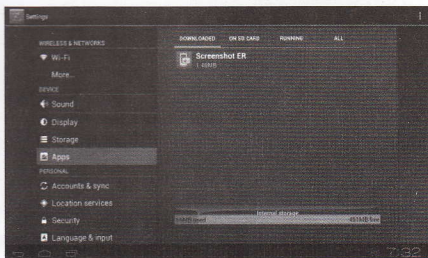

Use the video calling

1. Click the icon of the skype .
2. Key in the ID and the password on the skype .
3. Choose the video calling function .

Update software

1. Copy the update file into the TF Card and keep the power on ..
2. Insert the TF card into the box , and update information will appear , then click the " YES" , and the V3 will reboot , then the updating is finished.

Common problems:

1. If the mouse is connected ,but it's icon is not showed on the screen,please check the connection of the mouse. (Some not standard mouses are not suitable for Smart TV V3 , please contact the mouse supplier)
2. If the wireless net is already setted , but you can still not able to connect the net,please check the right below corner whether the icon is totally full grid. If the signal is weak, please contact the net supplier.
3. Some apps are designed specially for cellphone,so they can not completely showed.
4. If some apps can not work, it may be the reason that they are not optimized for Android 4.x .