

快速指南

USER MENU

Quick Guide

INDEX

DECLARATION.

I 、 INITIAL OPERATION

- 1. OS INTERFACE**
- 2. MANAGEMENT SOFTWARE ICON**
- 3. DELETE ICON**
- 4. DRAG TO THE DESKTOP**
- 5. RETURN, HOMEPAGE, PROGRAM PROPERTIES**
- 6. STATUS BAR**
- 7. PROGRAMME TOOL BUTTOM**
- 8、 PROGRAMME, TOOLS ICON MANAGERMENT**

II 、 SETTING

- 1. WIFI SETING**
- 2. USB TO RJ45 LAN ADAPTER SETTING**

III 、 INSTALL/DELETE APK(PROGRAM)2

- 1. UNKNOWN SOURCE APK(PROGRAM) SET UP**
- 2. INSTALL APK(PROGRAM)**
- 3. DELETE APK(PROGRAM)**

IV 、 PICTURE,VIDEO,FILING

MANAGEMENT,WEBPAGE. 13

- 1. SET UP MEDIA FILE SEARCHING FUNCTION**
- 2. HOW TO PLAY HIGHT DEFINITION MEDIA PLAYER**
- 3. FILEING**

MANAGEMENT:COPY,CUT,DELETE,RENAME

- 4. MUSIC PLAYER**
- 5. VISIT THE WEBSITE**

V 、 LANGUAGE AND INPUT

- 1. SELECT LANGUAGE AND USUAL INPUT METHOD**
- 2. KEYBOARD AND MOUSE**
- 3. SWITCH INPUT METHOD**

VI、 QUESTION AND ANSWER

DECLARATION

The user manual includes all the information of safe and correct operation instruction. To avoid accident and product damaged, please make sure go through all the content carefully before using the product.

Please keep the product away from high temperature, humid and dusty environment.

Do not drop or crash the product.

Do not cut off the device when it is formatting or upgrading, otherwise it will cause operation system error.

Do not dismantle the device. Do not clean it by alcohol, thinner and Benzene.

We keep the right to upgrade and modify the product.

Disclaimer: We only take the responsibility to provide the product warranty and after service. The users have to take care of their data in the device by themselves. We do not responsible for any date lost or related lost.

The product is not water-proof.

I. INITIAL OPERATION

1. Connect the TV set or LCD monitor by HDMI cable (in package). Set up the TV data receive mode to HDMI port. (Refer to TV set user manual)

 
Suggest using 2.4G wireless mouse and keyboard. Plug 2.4 G receiver on USB Host

connector. Or plug on USB OTG port by port converter. If only mouse plugged, the device will provide soft keyboard in operation system. If the device detected the physical keyboard, the soft keyboard will be hiding by OS automatically.


Mouse left button for "ok", right button for "return", rolling for page up and down. Hold left button to pull icon or copy & paste file. Hold middle button for Properties.

2. OS INTERFACE

Connect power supply and devices, the booting information will show up within 1 min.

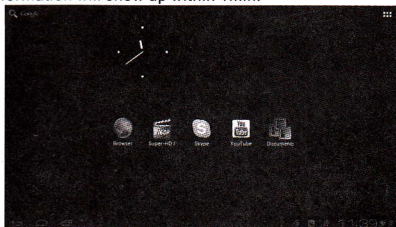

 3. Hold any icon and pull it could move it to any position you like.

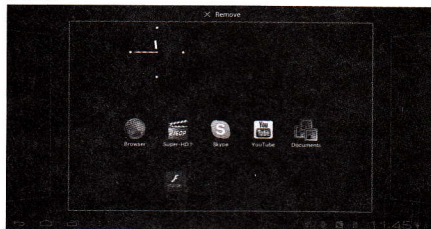


4. DELETE ICON

Hold the icon and throw it into the red mark "X". It will be removed.

Hold the icon and throw it into the red mark "X", it will be removed.

5. DRAG TO THE DESKTOP

 Hold the arrow on any blank space of the desktop, move it to left or right could move to next desktop. Rolling the mouse is same operation.

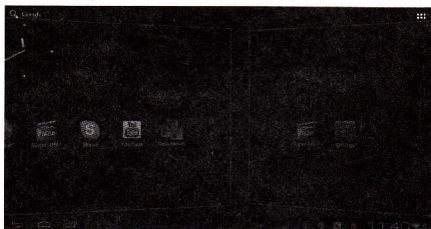



6. Return button: Click to return to the upper level directory. Homepage button: Click it anytime to return to homepage. Program button: Click to check the entire running program. Properties button: Click it will show up different menu in different software. It is similar function with Windows properties button.


7. status bar



 
The right bottom corner is status bar. It shows the status of T-flash Card, USB connection, Time, Wi-Fi and Download and..... and so on.

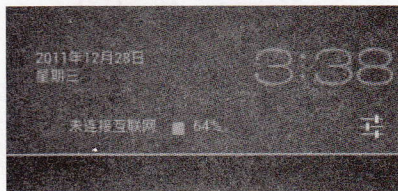

 Click status bar, the hide menu will bound up. Click this icon , it will show up more options.

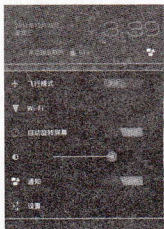


8. PROGRAM TOOL BUTTON

 
It shows up right top corner of desktop .

II. PROGRAM, TOOLS ICON MANAGEMENT

Click to show up the installed program and setup tools icon.




If the first desktop page files with icon, then pull or rolling mouse will move it to second desktop page. You could launch these program or set up directly  or hold this icon and throw them to desktop to make shortcut. Click it WIDGETS, then hold any button to make shortcut on desktop.,

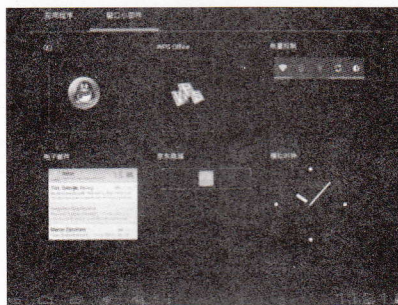


III. SETTING

 Setting it is Tool bar . Click to show it up.

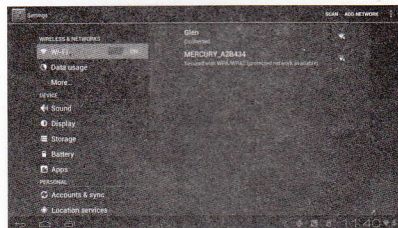


1. Wi-Fi setting

 Tif the first desktop page files with icon,then pull or rolling mouse will move it to second desktop page.
 You could launch these program or set up directly
 or hold this icon and throw them to desktop
 to make shortcut.
 Click it WIDGETS,then hold any button to make shortcut
 on desktop.,

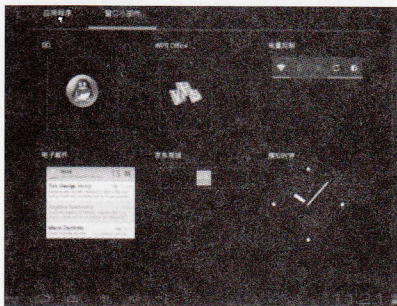


III、SETTING

 Setting it is Tool bar .Click to show it up.

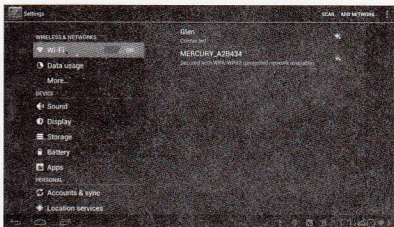


 1.WI-FI setting

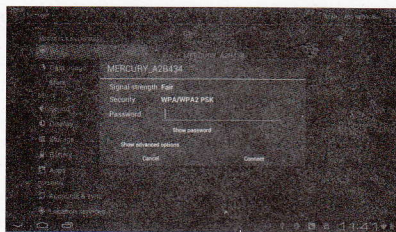

2. USB to RJ45 LAN adapter setting

 
If there no WI-FI and have to use cable to access internet,Please buy USB2.0 LAN Adapter.And plug it on USB or OTG ports.
 Connect RJ45 LAN Cable;click "SETTING"- "MORE"-
 "ETHERNET"-tick"USE Ethernet".

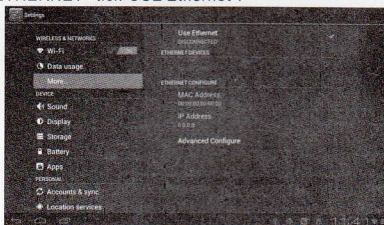

IV、INSTALL /DELETE PROGRAM


1. set up "unknown sources"

 Please install Google market program as priority.If have to install Google un-define program, Please click setting-security-"unknown sources"

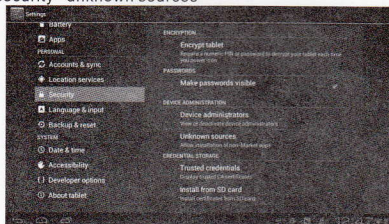


2. INSTALL APK(PROGRAM)

Please download different application software from APK. After program downloaded, just click it to


install. You could also install Android program from other Storage device. (Downloaded program will show up on status bar. Please click DOWNLOADS to find download software package. Then click to install. 

3. DELETE APK(PROGRAM)

 - Click "setting" - "Apps", it will show up all the installed program list.
- Click "Uninstall" icon need to delete.
- Click uninstall button will be ok.

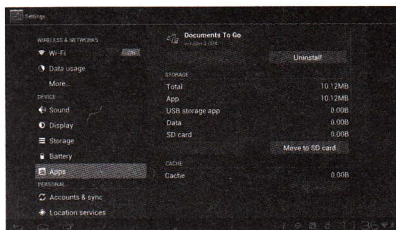


2. HOW TO PLAY HIGH DEFINITION MEDIA PLAYER


 Click below Icon, the tool will display Video and Audio files as category.

3. FILE MANAGEMENT: COPY, CUT, DELETE, RENAME

 The device has strong function for filling. Classification of manage documents in Storage, SD Card and External HDD. Please click "SETTING" - "FILE MANAGE". After running file manage tool, click or hold object file or folder, it will display the menu as below:

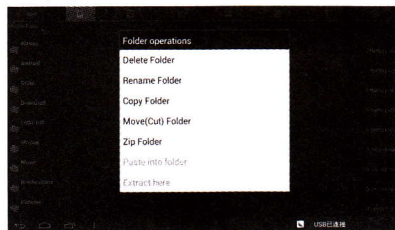

 
Please select copy, cut from the menu. There read frame will show up on the top of screen. Click and hold the object folder. (Attention: Must be folder)

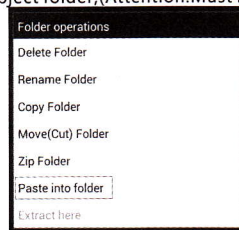

V. PICTURE, VIDEO, FILLING MANAGEMENT, WEBPAGE

1. SET UP MEDIA FILE SEARCHING FUNCTION

 2. The device has the media searching function, but running this function will slow down the system speed. Setting SD card and USB device searching function, please referring to following picture:

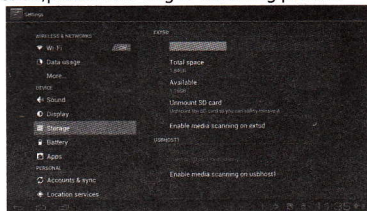

4. MUSIC PLAYER

Click "SETTING" - "MUSIC" 

5. VISIT THE WEBSITE

Please set up WIFI to access to internet. There is

Android default browser. Or other browser is also available to download. Click "Setting" to "Browser"

 


Android displays all the web pages labeled at the top of the browser. Click "+" to add new page. Click "X" to close page.

六、LANGUAGE AND INPUT

1. Select language and usual input method


The device includes 54 different languages. Please click "Setting" - Language and Input. Different areas where you please select the suitable input software according. And make some setting under this item.

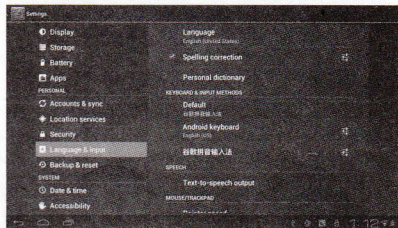

2. KEYBOARD AND MOUSE

Device will show up the soft keyboard if it is only connected with mouse.

 And the soft keyboard will be hiding once the hardware keyboard is detected by the device.

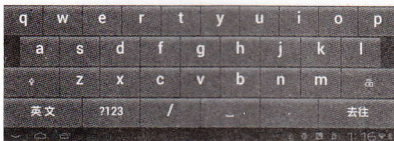

3. SWITCH INPUT METHOD

Please click below icon to select input method:



It will display all the options as below picture. Please select the suitable one.



VII. QUESTION & ANSWER

Screen flicker or unstable working: please check if the HDMI cable has been connected tightly.

Can not start device: please download OS file from official website to refresh the device OS. Make sure all the important data has been backup before process it. If the issue still can not be solved, please contact the distributor which you bought from.

Keep restarting system automatically: please check if the device get enough power supply. Sometime, external HDD cause power shortage. Please plug additional power supply for external HDD or other external devices.

Can not find in SD card or pen drive: Please check all the connection of the device. And make sure have tick item of SD and USB HOST in "setting" Refer to 6.1