# **Operating Guide**

## **Product Display**



#### Instructions for use



Power up the device: Connected to the external power supply, Hold down the right power button of the device, which is located at the lower right corner. Turn on the TV, use the TV remote control or mouse, operating TV menu, select the source to the HDMI. (For details, see the TV manual)

#### Main Menu

After booting into the main system interface, as shown below:



- Through the remote control or move the mouse cursor, press the remote control to confirm key or click left mouse button, open the program.
- In the main interface, click on the button, enter all application interface.

## Wi-Fi Settings



- Open the Applications tab In the main interface, then click "Settings"
- · After Choose: "Wireless network" click "Wi-Fi", click on "Wi-Fi settings".
- Click connect to network, that will be can connected, if the network requires a password, enter the correct password in the password bar, WALN shows "Connected."
- Network settings after completion, return to the main interface, then, you can
  use the network, and can be in the browser's address bar, enter the desired
  website address.
- Open the webpage, click or sliding webpage, click the link to open the linked page.

#### Browse the file or folder



- In Desktop state, click the application bar icon, enter into the application field, click into the" resource manager."
- In the file list can be clickable sliding, rolling.
- ·Click on the required file or folder, can open the file or folder.
- ·Click the status bar of the back button to return to the level folder.
- ·Click the Home button on the status bar, you can return to the home page.
- Long press a file or folder, can popup a menu, for example: "Copy, delete, move, paste, rename" and other additional options. If you do not execute the operation, click on the Cancel button. directly

#### **USB Connection**



Connect USB line interface, plug in the machine of right side USB interface, the other point is inserted in the computer USB interface connection, drag down the status bar, and then show USB connection status, that will be appear "USB connection", prompting USB connection.

If successful, your computer will be appear a new removable disk.

On the computer desktop to open "My Computer", double-click the new removable disk, where the data can be copied, deleted by machine

Disconnect: Click the bottom left of the screen arrow to the removable disk icon, pop up a small window safe deletion mobile disk.

## Install / uninstall software



·Smart TV Box operating system default for Android 4.2 version, install the software required to process the format is\*. Apk format.

Smart TV Box supports many popular third-party application software formats

Smart TV Box can be installed or uninstalled you need software.

·To install an application, the need to\*. Apk format copied to your Smart TV Box, then open" resource manager", click to install\*. Apk file.

Installed application, will appear in the application bar.

·If want to installed software, click"setting" enter into "application process" bar, then Clck: "application", click on the software you want to ininstall, then click unstall.

# Other Application



#### Multimedia

·Smart TV Box can support HD video playback, photo viewing, and music.

· Firstly. need to play music, video, photos copy to the mini SD card or storage in mobile hard disk.

·Click the application icon, after enter, click on the corresponding icon, such as "video" "picture" "music" into the corresponding interface.

·Click the file of play, it can be play. file.

## Specifications of appendix

Configuration Parameters			
Product Type	Dual core/ Quad Core Android TV Box	Memory	8GB standard, 16G、32GB optional
CPU	RK3066/RK3188	Storage	copy to the micro SD (TF) card or storage in mobile hard disk
Main Frequency	Cortex-A9, Up to 1.8GHZ	Operating system	Above Android 4.2
Inner memory	1GB DDR3/2GB DDR3		
The main function			
User interface	Using the Android system interface style	Music	Can be connected to the Internet, listen to music online
Browser	Browse webpage	Picture	Supports variety of image formats browsing (jpg \ png \ bmp)
Video	Can be connected to the Internet, watching video online	Flash	Supports flash 11.1
Audio	MP3/WMA/APE/FLAC/AAC/OGG/AC3/WAV	Storage Expansion	Micro SD(TF) memory card and mobile hard disk expansion
Interface definitions and specifications			
USB	USB 2.0*4	External Antenna	2.4GHz WiFi and Bluetooth Antenna
SD card	Micro SD (TF) card	Remote control	Support IR remote control and 2.4G wireless Control
HDMI	Connecting high-definition TV, the output audio and video signals.	AV output	Audio Stereo、Video CVBS output
RJ45	Connection the wired network	Voltage parameters	5V-2A DC
Appearance description			
Display	Through the HDMI output display	Product Dimension L×W×H(mm)	115*115*30 (mm)

<sup>\*</sup> Note: Use Micro SD(TF) card, if you want to pull out the TF card, safe operation is the select Settings - > memory - > unload TF card

Disclaimer Note: product appearance, technical parameter, function, price, please take the actual product and the product specification, nameplate shall prevail, as a result of technology to update the changes, without notice.