# ATLANTIC YACHT

R/G LUXURY RAGING BOAT

NO.3837

艇長:700mm

艇寬:199mm

艇高:195mm


Length: 700mm Width: 199mm

Height:195mm


套件内容: 快艇本體(已組裝完畢) 8.4V(7.2V)鎳鎘充電電池 專用充電器

Content of the kit: Main body of racing boat (assembled), 8.4V(7.2V) nickel cadmium rechargeable battery, Dedicated charger


# INSTALLATION OF BATTERY AND CABIN COVER

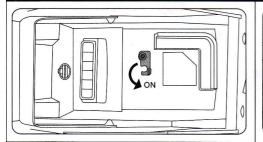


- 1. 將旋鈕按箭頭所標示的方向旋轉, 松開船艙蓋.
- 1. Turn the knobs in show, and unlock boat cover.

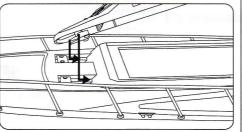


- 2.如圖所示,取出船艙蓋。
- 2. Take out the cover board of boat in shown.

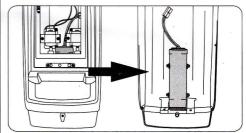


- 3. 將鎳鎘電池放在船體后部的定位内, 并確認其不 會晃動。
- 3. Please put nickel cadmium battery into the back the boat and make sure it does not shake.

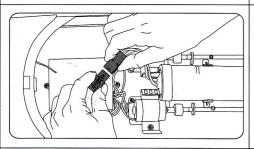

- 4. 電池與接收機上的插口連接好。
- 4. Please connect battery with the socket part of receiver.

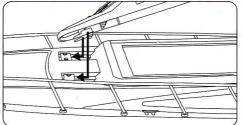


- 5. 蓋上船艙蓋板, 前部插銷插入船體。
- 5. Please close the cover board of boat, with its front bolt inserting into boat body.

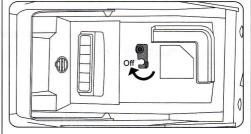


- 6. 將旋鈕按箭頭所標示的方向旋緊, 鎖好船艙蓋。
- 6.Turn the knobs in show, and finally lock boat

### SWITCH

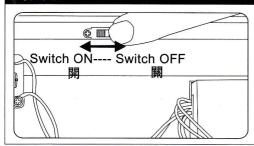

- 7.將開關推至打開位置后打開遥控器電源,手不要放在螺旋槳附近,并確認螺旋槳周圍沒有障礙物,防止
- 7. Please push switch to the location of "ON", power on remote controller. Please do not put your hand near screw propeller. Please make sure there is no obstructer near screw propeller so as to prevent injury caused by fast spinning of screw propeller.


## 充電 CHARGING

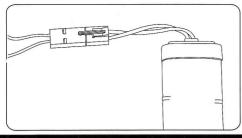

- 8. 電池充電時請使用本套材内的專用充電器,充電時使用220V電源,充電時間5小時。 注意:請小心維護電池,充電前盡量將電池電量放空,按標准充電時間爲電池充電,以延長使用壽命, 避免不當使用造成的損壞。
- 8. Please use the dedicated charger of this kit for battery charging. Charging voltage is 220V and charging time is five hours.


Note: Please take good care of battery. Please completely discharge battery before charging. Please charge battery for standard charging time so as to prolong service life of battery and avoid damage of battery caused by improper use.

# 操作 OPERATION

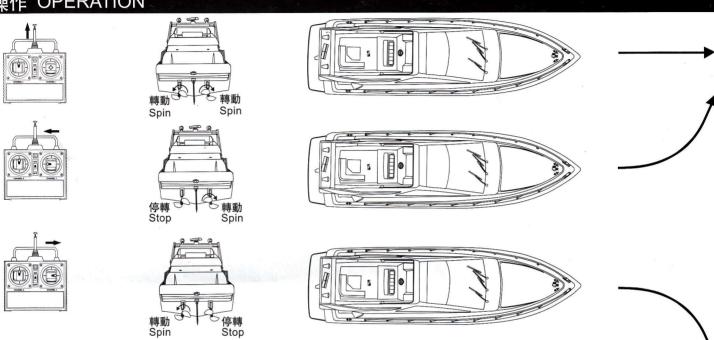

- 9. 將遥控器左手柄向前推,兩個螺旋槳同時旋轉快艇前進。將右手柄向左推,左槳停, 右槳工作快艇左轉。右手柄向右推,右槳停,左槳工作快艇右轉。
- 9. Please push left shaft of remote controller forward, the two screw propellers will spin simultaneously and the racing boat will move forward. Please push right shaft leftward, the left screw propeller will stop spinning and right screw propeller working racing boat will turn left. Please push right shaft rightward, the right screw propeller will stop spinning and left screw propeller working racing boat will turn right.
- 10.確認發射與接收均正常可靠,周圍無相同頻率的遥控器在工作后,將快艇放入水中。
- 注意! 1.14歲以下的使用者必須在成人的指導下操作。
  - 2.禁止在游泳或有人游泳的水面中航行,以免傷人。
  - 3.下水航行前先觀察水中有無雜物,如果雜物過多,快艇航行時可能會被纏住螺旋槳停航,建議不要在此類水面操作模型。
- 10. Please put your boat on water after making sure that transmission and receiving work well and no remote controller of the same working frequency operates nearby.
- Note! 1. User under 14 years old shall follow the guidance of adult.
  - 2. Please do not play the racing boat on swimming pool or water with people swimming in so as to avoid injury.
  - 3. Please observe if there is dirt in water before playing. If there is too much dirt, the screw propeller will stop spinning as it is unwound by the dirt. We suggest you not playing the boat on such water.
- 11.長時間不使用本模型時,請把船身內兩根銅管均請適量注油,以備下次使用。
- 11. If this article is not used for a long time. Please inject oil in the two copper tubes in boat body for future use.
- 12.本模型産品遥控半徑80米,請注意不要超出遥控範圍,發生失控現象。
- 12. The remote control radius of this article is 80 meters. Please make sure the boat does not go out of remote control range.
- 13.模型表面避免陽光長時間暴曬及沾染油污,以免損壞漆面。使用后可用中性洗潔精加清水衝洗。
- 13. Please keep this article away from sun light and oil pollution. Please clean it by water with moderate abluent.


# 方向左右偏差 THE DEVIATION OF THE DIRECTION & THE LEFT AND RIGHT

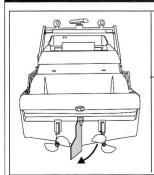

A When the autoboat does not fly straight forward, but fly to the right side,

賽艇不直行,而是向右偏行.

Adjust the rudder to the left slightly. 將方向舵稍向左調整

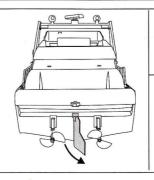

A When the autoboat does not fly straight forward, but fly to the left side,

賽艇不直行,而是向左偏行.

Adjust the rudder to the right slightly. 將方向舵稍向右調整