

Animal

New Technology Products

This is a new,cute,funny tarantula. It is applicable to iphone/ipad/ipod/Android system



Applicable to the Android system capacitive touch screen mobile phone
















Instruction manual

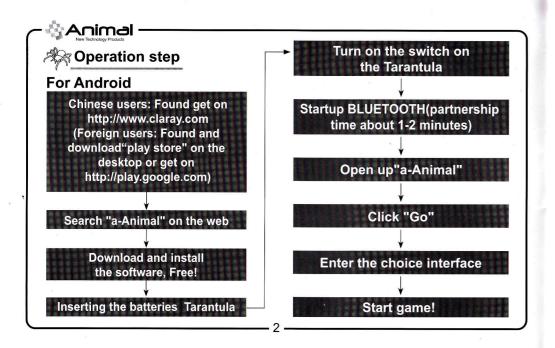


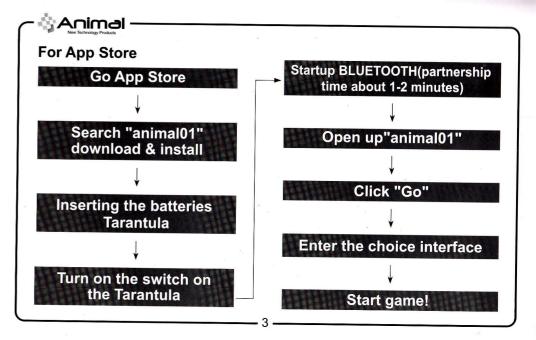

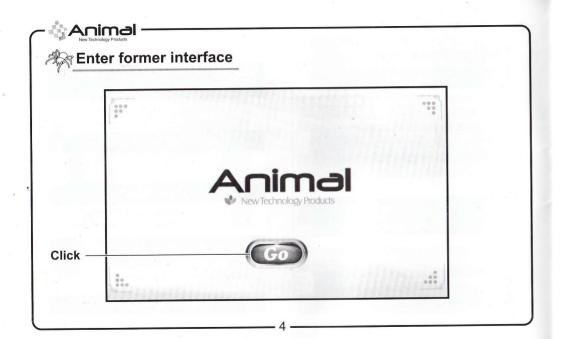

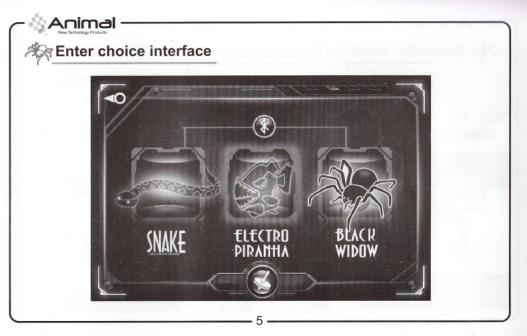

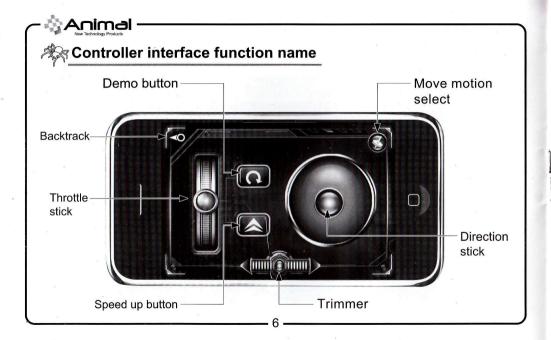


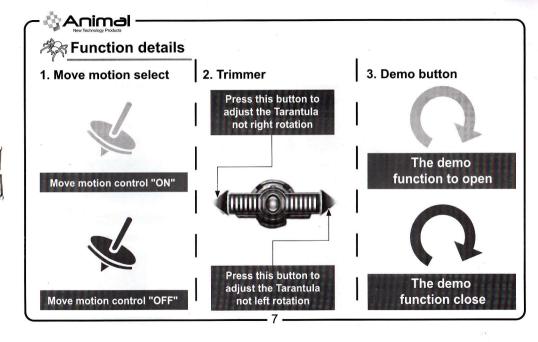



Inserting the batteries

Un-screw the battery cover using a philips head Screwdriver and remove. Insert 4x AA batteries, into the head section, following the polarities indicated on the internal printed sticker. Re-screw the battery cover and replace the head section. Turn the tarantula upside down.

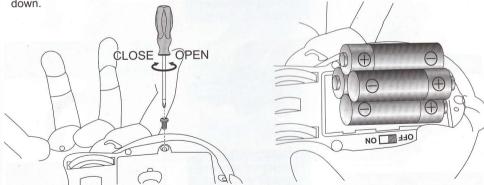





Control methods

Control range: The control range of the Tarantula is about 6 meters. Please avoid to overstep this control range, otherwise the Tarantula will be out of control.

1. Forward

3. Turn left

When you push up the throttle stick, the tarantula is moving to forward.

When the direction stick is moving to left,



the tarantula will turn left.



2. Backward

When you push down the throttle stick, the tarantula is moving to backward.





4. Turn right

When the direction stick is moving to right, the tarantula will turn right.





 




Move motion control

Switch to "move motion" mode, swing your hands as the following indicating direction.


1. Turn left







 2. Turn right







4. Backward

:Animal



Support list

- All Apple's product, Android
- Iphone, ipod touch, ipad, Android system

2

Acautions

- 1. When the battery in the transmitter or the Tarantula runs low, the control distance will be reduced.
- 2. The biggest control radius of the Tarantula is 6 meters, please uses in 6 meters area, otherwise the Tarantula will be out of control when it overstep this area.
- 3. If the Tarantula was damaged, distortion, please repaired in time. If operate the Tarantula of the such damage, May cause otiose get hurt.

-1



- 4. Do not make the Tarantula crashing, this may damage the Tarantula.
- 5. Turn the Tarantula off before cleaning. Wipe the tank with a soft, dry cloth. Ensure there is no hair or lint caught between the rear or front wheels and the drive shafts. Clean carefully with your fingers or a pair of tweezers.
- 6. Non-rechargeable batteries are not to be recharged.
- 7. Rechargeable batteries are only to be charged under adult supervision.
- 8. Rechargeable batteries are to be removed from the toy before being charged.
- 9. Different types of batteries or new and used batteries are not to be mixed.
- 10. Batteries are to be inserted with the correct polarity.
- 11. Exhausted batteries are to be remove from the toy.



- 12. The supply terminals are not to be short-circuited.
- 13. The battery chargers are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.



Trouble shooting

Symptom	Cause	Correction
Product can't move.	ON/OFF switch is OFF. Weak battery. DO not startup a bluetooth	Set switch to "ON". Put new battery. Startup BLUETOOTH
Suddenly stop.	Weak power.	Change the battery.