

POVOS® 奔腾

PR2021I/PR2022I/PR2023I

Hair Straightener

直发造型器

Operating instructions

使用说明书

Before operating this unit, please read the instructions completely and save them.

在使用前，请仔细阅读此说明书并妥善保管。



图示

Figures

1

英文

English

2

中文

Chinese

8

 
保修卡

Guarantee Certificate

14



1

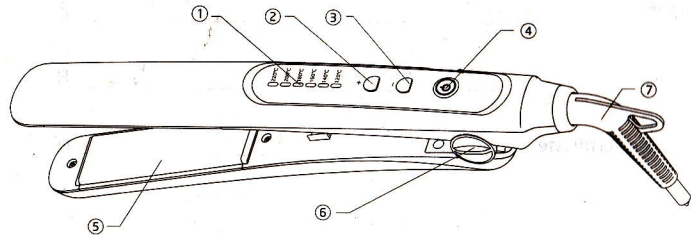

Thank you purchasing the POVOS hair straightener. Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new POVOS straightener. Before operating this unit, please read these instruction completely, please keep the manual for handy reference.

Parts identification(see fig.1)

- | | | |
|-------------------------------|-------------------------|---------------------|
| ① Temperature indicator | ④ Switch | ⑦ Swivel power cord |
| ② Increase Temperature button | ⑤ Ceramic-coated plates | |
| ③ Decrease Temperature button | ⑥ Lock | |

Before use

Hair straightener is suitable for mains voltage 220V-240V~ 50Hz, rated power 40W. The ioniser inside emits negatively charged ions that surround your hair. Icons help to keep your hair in good condition, making it shiny, smooth and frizz-free.

How to use

1. Connect the plug to a power supply socket.
2. Depress the switch more than 3 seconds, turn the hair straightener on, right now 160°C temperature indicator blinks, the straightener heats up. At the same time generate negative ions.
3. Hand hold hair straightener, release lock, unlock the straightener.
4. Comb your hair and take a section that is not wider than 5cm for hair straightening.
5. Place it between the hair straightener plates and press the handles firmly together.
6. Slide the hair straightener down the length of the hair in a single motion (Not more than 5 seconds) from root to end, without stopping to prevent overheating.
 - ◆ To create flicks, turn the hair straightener half-circle inwards (or outwards) when it reaches the hair ends. Hold the hair straightener in that position for 2 to 3 seconds, and then release it.
7. Repeat steps 4 to 6 until you achieve the desired look.
8. Hair straightener will be turned off in 60 minutes without any operating condition.

Button function

1. Press switch more than 3 seconds straightener on, press switch more than 3 seconds hair straightener off.

2. Each press "+" or "-" button once, the temperature rise or fall 20 °C.
3. Press "+" more than 3 seconds button three seconds, all buttons lock.
4. Press "-" more than 3 seconds button three seconds, remove all buttons lock.

After use:

1. Switch off the hair straightener and unplug it.
2. Place it on a heat-resistant surface until it cools down.
3. Clean the hair straightener plates by dry cloth.
4. Release lock to "🔓", lock the straightener.
5. Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop.

Important

1. Always ensure the voltage to be used corresponds to the voltage stated on the unit.
2. Always switch the hair straightener off before putting it down, even if it is only just for a moment.
3. As hair straightener reach high temperatures, keep them out of the reach of children during heat-up, use and cool-down to avoid burnings.
4. Do not unplug by pulling on the cord. Always grasp the plug and unplug it from the

outlet.

5. Do not use the dryer near gas or other inflammable materials (such as benzene, paint thinner, sprays, etc.).
6. Avoid touching the hot parts of the straightener.
7. When hot, do not place on surfaces that are not heat-resistant
8. There is electric components inside the handle, so when you use it please draw straight the handle parts and make sure the appliance can not touch when shower or SPA.
9. The straightening is not recommended to use in bathroom. When used in a bathroom unplug the appliance after use since the proximity of water presents a risk even when the straightening irons is switched off. For additional protection, we advise you to install a residual current device (RCD) with a rated residual current not exceeding 30A in the electrical circuit supplying the bathroom. Ask your installer for advice.
10. Do not wind the mains cord round the hair straightener. If the mains cord is damaged, you must have it replaced by POVOS, a service centre authorised by POVOS so on in order to avoid a hazard.

11. Do not use the straightening irons with wet hands or in the bath or shower.
12. This hair straightener is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
13. Only use the hair straightener on dry hair. Do not use the straightener on artificial hair.
14. Do not apply any accessories that is not offered by POVOS onto this appliance.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Guarantee & service

1. We grant two years guarantee on the product commencing on the date
2. Within the guarantee period we will correct, free of charge, any defects in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.
3. To obtain service within the guarantee period, hand in or send the complete appliance with

your sales receipt to an authorized POVOS Customer Service Centre.

This guarantee does not cover:

- 1) Damage due to improper use.
- 2) Normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance.
- 3) The guarantee becomes void if repairs are undertaken by unauthorized persons and if original povos parts are not used.

Technical specifications

Model No : PR2021I/PR2023I/PR2023I

Power source : 220V-240V~ 50Hz

Rated power: 40W

This product is intended for household use only.

The unit is applied to the Chinese standard GB4706.1 , GB4706.15, GB4343.1 and GB17625.1