 


# POVOS® 奔腾

PS2203/PS2206/PS2208

 
 
 
电动剃须刀 Rechargeable Shaver

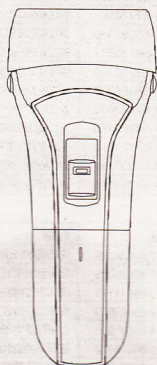

## Operating instructions 使用说明书

Before operating this unit, please read the instructions completely and save them.  
在使用前, 请仔细阅读此说明书并妥善保管。

3





4

PS2203/PS2208




  5

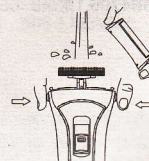


2

 
1 PS2206

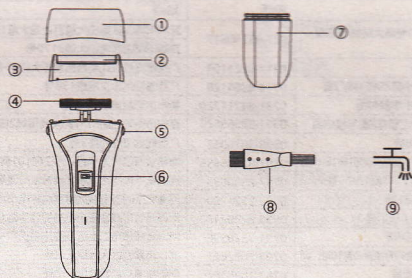

2 PS2203/PS2208

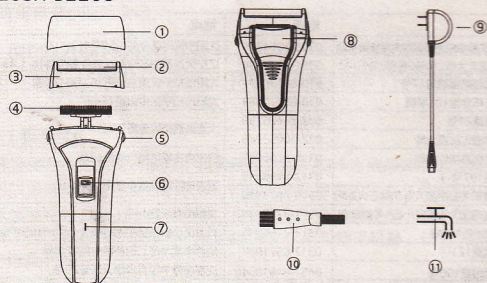 


6

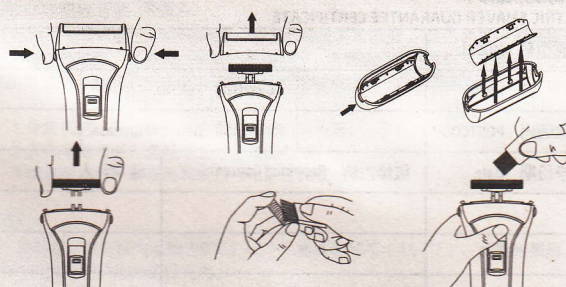 

7


 
PS2203/PS2208

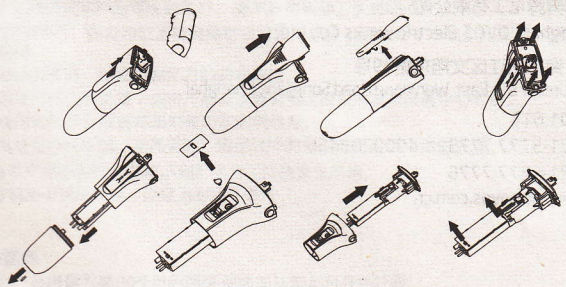

1

  3



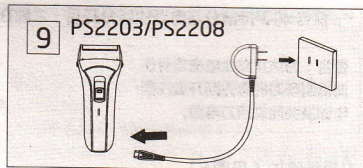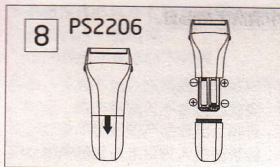

**Warning - To prevent electric shock or personal injury, disconnect the power cord from the shaver and turn the shaver off before cleaning.**

Thank you purchasing the POVOS wet/dry shaver.

Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new POVOS shaver.

Before operating this unit, please read these instruction completely, please keep the manual for handy reference.

#### Before use

This wet/dry shaver can be used for wet shaving with shaving lather or for dry shaving. You can use this watertight shaver in the shower and clean it in water. Treat yourself to wet lather shaves for at least three weeks and notice the difference. Your POVOS wet/dry shaver requires a little time to get used to because your skin and beard need about a month to adjust to any new shaving method.

#### Parts identification ( PS2206, see fig.1)

- |                     |                             |                      |
|---------------------|-----------------------------|----------------------|
| ① Protective cap    | ④ Inner cutter              | ⑦ Battery cover lock |
| ② System outer foil | ⑤ Foil frame release button | ⑧ Cleaning brush     |
| ③ Foil frame        | ⑥ Switch lock button        | ⑨ Washable           |

#### Parts identification ( PS2203/PS2208 , see fig. 2)

- |                     |                             |                  |
|---------------------|-----------------------------|------------------|
| ① Protective cap    | ⑤ Foil frame release button | ⑧ Adaptor        |
| ② System outer foil | ⑥ Switch lock button        | ⑨ Cleaning brush |
| ③ Foil frame        | ⑦ Charge status lamp        | ⑩ Washable       |
| ④ Inner cutter      | ⑧ Trimmer                   |                  |

4

#### Using your shaver(see fig.3)

1. Remove the protective cap.
2. Switch the shaver on by pushing the switch upwards.
3. Hold the shaver at right angle(90°) to your skin. Start out shaving by applying gentle pressure to your face. Stretch your skin with your free hand, move the shaver back and forth in the direction of your beard. You may gently increase the amount of pressure as your skin becomes accustomed to this shaver. Applying excessive pressure does not provide a closer shave.
4. Switch the shaver off by pushing the switch downwards.
5. To prevent damage to the foil and inner cutter, replace the protective cap every time you are finished using the shaver.

#### For wet shaving

Put a thin layer of shaving foam on your face which works as a lubricator. Shaving foam is the most suitable among many other shaving aids(gel,soap,cream,etc). Do not put a thick layer of shaving foam as it may affect shavers performance. If the shaving head is clogged with foam, simply rinse it under running water.

#### Using the trimmer (Only PS2203/PS2208 , see fig.4)

Slide the trimmer handle up to open the trimmer. Place the trimmer at a right angle ( 90 ) to your skin and move it downward to trim sideburns.

#### Cleaning and maintenance(see fig.5)

1. For cleanliness and convenience, we recommend that you clean your shaver with water and a liquid hand soap. Regular cleaning will keep your shaver in good condition while preventing odors or bacteria from developing, and maintain the cutting performance.
2. With the system outer foil in place, apply some hand soap onto the outer foil. Turn the shaver on and pour some water over the outer foil. After about 10-20 seconds, turn the shaver off, remove the system outer foil and clean it with running water. Wipe off any moisture from the shaver with a dry cloth and remove the protective cap to allow the system outer foil to dry completely.
3. Clean the outer foil and the shaver body with the long side of the brush. Clean the inner cutter with the short side of the brush. Do not use the short brush to clean the outer foil.



**Warning:** Before washing the shaver body. You need to separate it from the charger.

5

#### The cutting system maintenance(see fig.6)

It is recommended that you replace the outer foil at least every year and the inner cutter at least every two years to maintain your shaver's cutting performance.

- Replacing the system outer foil : Squeeze the system outer foil release buttons and lift the system outer foil upward to remove it. To insert the new system outer foil, press down until snaps into place.
- Replacing the inner cutters : Squeeze the foil frame release buttons and lift the foil frame upward to remove it. Remove the inner cutter one at a time by grasping it firmly at both ends and pulling straight away from the shaver. To insert the new inner cutter, hold the cutter one at a time at both ends and press downward until it snaps into the shaver.

#### PS2206

##### Replacing batteries(see fig.8)

1. Open the battery cover in the direction of the arrow, insert two AA LR6 batteries into the battery slot according to the symbol ⊕ and ⊖. Mount the battery cover.
2. Do not combine an old battery with a new one, or use different types of batteries together.
3. If the shaver will not be used for a long time, please remove the batteries.

#### PS2203/PS2208

##### Charging (see fig.9)

1. Connect the power cord to the shaver, and plug the power cord to an AC outlet. The charge status lamp will glow red when the shaver is being charged.
  2. You can fully charge the shaver in 8 hour if it seems to be losing speed
  3. Before traveling, charge it fully if you will not be taking the adapter with you.
- When charging, always a red light, you will be available eight hours with this shaver.
  - If the shaver is charged more than 10 hours frequently, the battery capacity will be reduce.
  - Do not operate this shaver when charging.

6

#### Recycling the battery (see fig.7)

Batteries contain substances that may pollute the environment. The batteries in this shaver is not intended to be replaced by consumers. However, the batteries may be replaced at an authorized service center.

1. The procedure described below is intended only for removal of the rechargeable battery for the purpose of proper disposal.
2. Only in the battery completely exhausted before the battery removed.
3. Do not remove the battery after the shaver and power will be connected together.

#### Caution

1. Do not charge the shaver when the temperature is below 0°C (32°F) or above 40°C (104°F), where it will be exposed to direct sunlight or a heat source, or where is a lot of moisture.
2. The outer foil is very thin. If handled improperly, it can be easily damaged. To avoid personal injury, do not use the shaver if it has a damaged foil or inner cutter.
3. Both the foil and the blade have a limited service life. To keep a better result, we suggest you to replace the outer foil and the inner cutter at regular intervals.
4. Wash the shaver in tap water. Do not use salt water or boiling water. Also, do not use cleaning products that are designed for toilets, bathrooms or kitchen appliances. Do not submerge the shaver for a long time.
5. Do not wipe any part of the shaver with thinner, benzene or alcohol. Clean the shaver's body by using a cloth dampened with soapy water.
6. Do not take the housing apart as this can affect the watertight construction.
7. If the shaver is not working properly, have it inspected at the place of purchase or an authorized service center.
8. Always use your shaver for its intended use, as described in this manual.
9. Please make sure that the old batteries are disposed of at an officially assigned location.
10. Do not leave this shaver within the reach of children.
11. Please keep the manual handy for reference.

#### Guarantee & service

1. We grant 30 months guarantee on the product commencing on the date of purchase.
2. Within the guarantee period we will correct, free of charge, any defects in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.
3. To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorized POVOS Customer Service Centre.

7



This guarantee does not cover:

- 1) Damage due to improper use.
- 2) Normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance.
- 3) The guarantee becomes void if repairs are undertaken by unauthorized persons and if original parts are not used.

### Technical specifications

Model No. : PS2206

Motor voltage : 2.4V

Battery specifications: AA LR6 X2

This product is intended for household use only.

Model No. : PS2203/PS2208

Power source : 100-240V~ 50/60Hz

Motor voltage : 1.2V

Charging time : 8 hours

This product is intended for household use only, the unit is applied to the Chinese standard GB4706.1 appendix B, GB4706.9.

感谢您购买奔腾品牌电动剃须刀。

我们的产品质量可靠、功能完善、设计优异，希望您对我们的奔腾品牌剃须刀感到满意。使用前，请仔细阅读本说明书，请妥善保管，以备随时参考。

### 使用前

用户可以将本干湿两用剃须刀配合剃须膏湿剃或直接用于干剃。由于本剃须刀具有密封防水功能，您可以一边沐浴，一边剃须，同时可以将剃须刀放入水中清洗。使用剃须泡沫湿剃3个星期后，您便会体验到与众不同的效果。由于您的皮肤和胡须约需要一个月时间才能适应任何一种新的剃须方式，因此用户需要稍花时间来习惯使用奔腾干湿两用剃须刀。

### 各部件名称 (PS2206, 见图1)

- |       |        |        |
|-------|--------|--------|
| ① 保护盖 | ④ 内刀头  | ⑦ 底盖   |
| ② 外刀网 | ⑤ 开闭按钮 | ⑧ 清洁刷  |
| ③ 外刀架 | ⑥ 开关推板 | ⑨ 可水洗标 |