


Digital lighting products

TP-1201

Specification

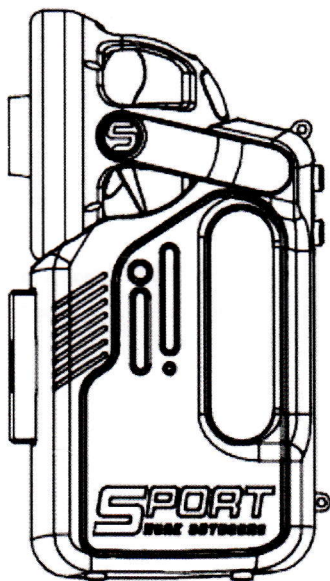

Read The Instruction Manual Carefully Before Using This Product; If You Have Problems In The Installation Or Operation, Please Contact Dealer Or After Sale Service.

Product Is Designed For The Built-in Rechargeable Battery Or Ac Converter
verts The Dc 5v 1000ma. With The Other Voltage Can Make The Product
re Or Fire.
ne Power Supply Before The Machine Off.

and using 35 degree or 0 degree above or below the temperature;
 do not put the machine in the near sources of heat, moisture, water and liquid
 or a solar direct emission landlord;
 do not put the machine near on TV, speakers and other produce strong magnetic
 fields;
 do not use enhanced learning material cleaning products;
 do not automatically repair (if you need to repair, please get the designated
 service center);
 if the system is not working properly or damaged to continue operation (the
 power off, unplug the power and advisory services);
 do not wear earphones at high volume case;
 do not place objects into the hole, slot machine etc.;
 do not let the children without adult care in operating the machine under the
 supervision of.

Important notes:

- Do not dispose of batteries in a fire;
- As a result of electrostatic discharge to the fault, only needs to adjust the potentiometer (may need to connect the power) to continue normal operation.

Opening The Packaging Will First
Machine With A 5v Output Charger Or
Computer Packing In Domestic Grain
Usb2. The Other End Of The End
Inserted Into The Charger Or Computer
Insertion Machine Microusb Jack To
Electric Machine.

Requiring Attention When Using The Charger:
 • Must Use The Specified Charger, Otherwise It
 May Cause Damage To The Machine.
 • When The Machine Is Not Used For A Long Time,
 Charge It Every Three Months For A Sufficient Charging
 Time.

careful:

When The Battery Is No Power, The Power Motor Lights Flash. Automatically Shut Down

2- In The Off State To The Machine When Charging, The Power Indicator Light Orange Red Light Flash, After A Long Bright Red Light.

Use Headphones you Can Connect An Earphone To The Earphone Jack, So As Not To Disturb The Others. headphones (Not Supplied) when The Earphone Plug Are Inserted Into The Jack, The Built-in Loudspeaker Will Automatically Shut Down. If The Headset Does Not Fully Insert, The Sound May Be Intermittent, Or Can Only Hear One Ear To The Voice Of. note: To Prevent Damage The Hearing Before Using The Headset, Please Turn Down The Volume, And Then Insert The Headset, Wearing Headphones Will Be Gradually Transferred To The Appropriate Volume Size.

E-1

1. Fan
2. Flashlight
3. Lamp
4. Tf Card Slot
5. Usb2.0 Jack
6. The Earphone Jack
7. Microusb Jack
8. The Power On / Off

9. MODE mode button
10. the volume + / A
11. play / stop button
12. the power indicator light
13. the volume - / the next song
14. flashlight / lamp button
15. fan button

Torch / Lamp Button

Press This Button Can Be Flashlight Can Switch Lighting Mode, Click The Switch Mode, Changan Closed

Can Operate This Function In The Standby Mode, Press The Power Key On Standby, The First Torch / Lamp To Enter The Flashlight Mode; According To Second Time Enters The Low Light Mode; Click Third Times In Distress (SOS) Mode; Click Into The Lamp Ring Pattern Fourth Times; Click Fifth Times To Enter The Red Lamp Circle Model; This Loop, Long Press Close.

Can Operate This Function In The Standby Mode,
Press The Power Key To Boot, Press Button To Open
The Fan Fan. Then Turn Off The Fan.

This Machine Can Be Used To Play Usb Device Or Tf Card (Such As MP3/WMA) In Music, Can Automatically Save The Last Playlist Next Time When It Opens

E-2

Power On / Off Switch
Click This Button To Open Or Close Machine, Standby, You Can See The Indicating Lamp Is Bright Orange, When The Machine Does Not Work When 30 Seconds After The Automatic Shutdown; The Boot, You Can See The Light Blue Lamp.

Sound And Forward / Backward Key
Long Press This Key To A Suitable Volume, Point To Switch Songs On Radio Stations Or Pressing This Button Can.

MOED Mode Button
Switch To The Play Mode Of The Machine.

Play / Stop Button
Click This Button To Play Or Stop Playing Music; In Radio Mode, Pressing This Button Will Enter The Automatic Station Search.

Fun Button
According To Some Key Can Open Or Close The Fan

Power On / Off Switch
Click This Button To Open Or Close Machine, Standby, You Can See The Indicating Lamp Is Bright Orange, When The Machine Does Not Work When 30 Seconds After The Automatic Shutdown; The Boot, You Can See The Light Blue Lamp.

Sound And Forward / Backward Key
Long Press This Key To A Suitable Volume, Point To Switch Songs On Radio Stations Or Pressing This Button Can.

MOED Mode Button
Switch To The Play Mode Of The Machine.

Play / Stop Button
Click This Button To Play Or Stop Playing Music; In Radio Mode, Pressing This Button Will Enter The Automatic Station Search.

Fun Button
According To Some Key Can Open Or Close The Fan

The Radio For Automatic Station Search / Storage Fm Radio, Can Automatically Save The Last Play Band To Play. When You Press The Mode Key To Switch To Open The Radio Mode, The Machine Will Automatically Play, Can Also Choose Has Memory Radio Press The Volume Key.

Radio Mode, Press The Play / Stop Button To Enter The Auto Search Reservoir In Taiwan, Automatic Station Search When The Power Indicator Light Flashing Blue Light, When The Indicator Light Stops Flashing Over Automatic Station Search Storage Station, search After The End Point Press The Volume Keys Take You Like To Listen To The Channel Into The Listening. The Radio Volume Control Mode And Play Mp3 Adjust The Volume Of The Same Pattern.

In The Boot State Data Can Be Your Line Of Usb2.0 End Is Inserted Into The Machine's Usb2.0 Jack, Jack On The Other End Is Connected With Your Digital Products Consistent, So Give Your Digital Products Charge. (Such As Mp3, Mp4, Flat Computer, Mobile Phone, Digital Camera And So On.)

Be Careful:
Please Ensure That The Machine Into The Boot Mode,
Because In The Standby Mode, The Machine Will
Automatically Shut Down 30 Seconds.

1. If Card Jack Can Be Used As A Reader. Insert Tf Card After Matching Line Microusb End Is Inserted Into The Machine Side Of The Microusb Socket, The Other Endinsert The Computer Usb2.0 Jack, So You Can Arbitrarily Change The Tf Card Inside Information.
2. When The Connection Line Connected To A Computer

Housing Maintenance
If There Is Dirt On The Shell, With A Soft Dry Cloth To Wipe Off Any Wax Wipe, Don't, Detergent Spray Or Wear Effect.
Note: Do Not Let Water Or Other Liquid Into The Machine Cleaning.

The Receiving Frequency	88-108MHz
Readable Usb And Tf Card Format	mp3, Wma
The Output Power Of	5v/1ah
The Earphone To Resistive	8-32ohm
Horn Resistance	4ohm
Output Power	5v 1000ma Dc Power Input Power
Size	(W) 195x (H) 72x (D) 58mm
Weight	1000g
Annex	
Strap	One(Optional)
Charger	One(C)
Mini Usb Cable	One
Quick Opening Guide	One

E-3