

 
 
Smart Phone

 
Instruction Manual



Model: C-570Q

1. Introduction of appearance

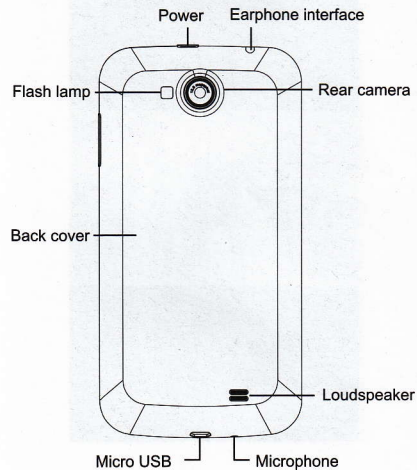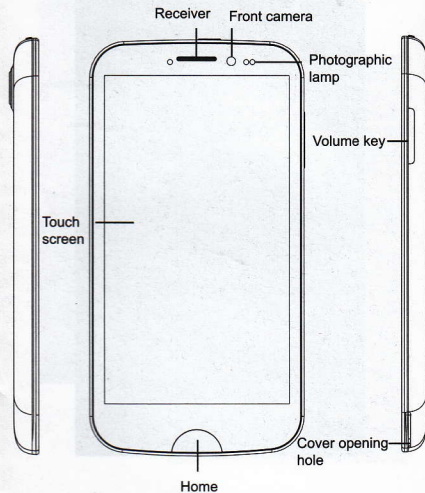

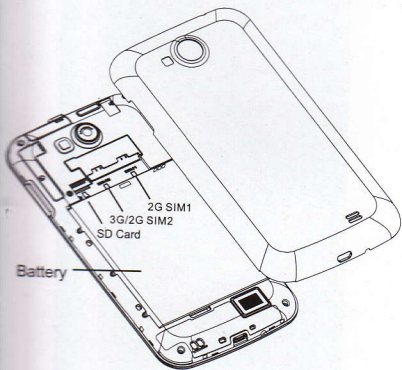

Supports external SD 2G-32G, SIM2 supports 2G and WCDMA 3G network, SIM1 supports 2G only, Please only use the supplied battery.

2. Information guide

How to turn off excess running software.

Go to Settings -> Applications -> Manage Applications -> click on Running TAB and select the application that you want to turn off. Some applications are needed for the phone to run correctly. You can turn off applications that you have opened to free up memory, space and increase speed.

 
How to save power on Phone.



You can reduce the screen brightness. Close GPS Global position under "Settings" -> Location services and turn off Wifi and Bluetooth.

How to lock your Phone for security.

Open Settings -> Security -> Select "pattern" to set individual security code.

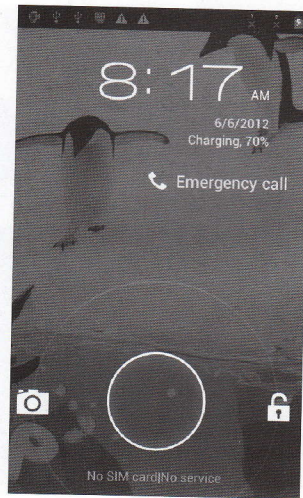

3. Power-on and unlocking



 
Press the power key to lock the screen. Press the POWER key/HOME key again to awaken the screen. Right drag  to enter into unlocking. Left/drag  to enter into the camera function.


4. Main Interface




The main interface is where you put all the different kinds of software application icons. Click on the software application icon to enter into its functions. Press the HOME, ,  key to enter into the main interface, the application menu and the last operation interface.

5. Message

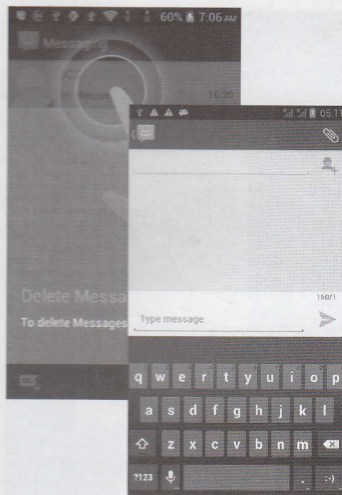


This is the interface for sending messages. Press  to change input method. You can insert expression, picture, music and other multimedia information. You can also use this interface for group sending.

 6. Telephone call function introduction

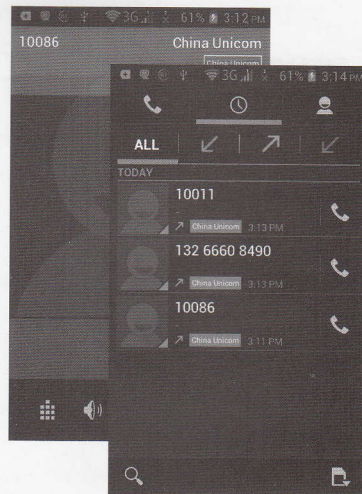


Press this icon to view call history, contact person, keyboard and speaker phone.

 7.Changing wallpaper

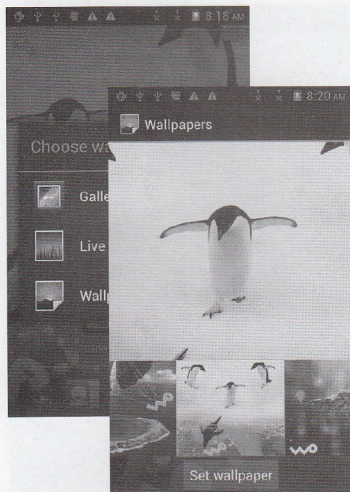


Keep your finger pressed on the desktop to bring up the "Wallpaper" function.

 8.Wifi function introduction

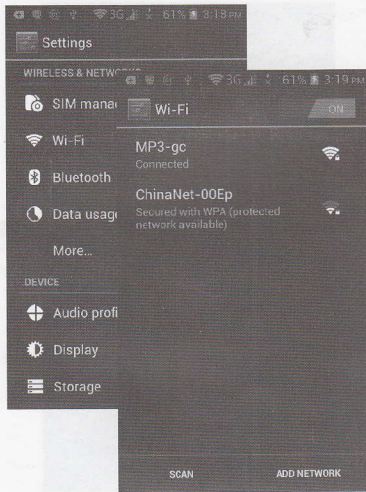

Select "Setting" and open "WLAN" function, Enter into "Wlan" and search for devices. Input the WiFi router password to connect to the device.

 9.GPS setting

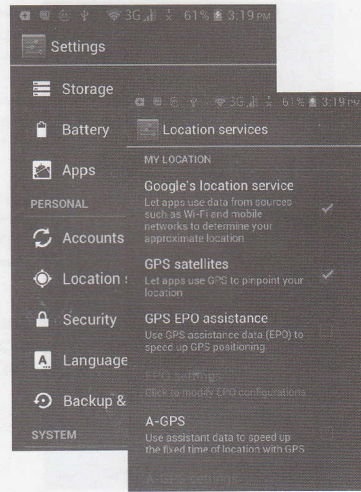

To enable GPS settings, select "Settings"-> "Location Services"-> "Enable GPS Satellites".

10.USB connection to Android smartphone



Connect the USB storage device and the picture above will appear.Press "Connect To" and it will show "USB Connected".Open the "Mass Storage USB" to connect to the PC.


11.Music



 
Open the music player in the main interface.You can play the music saved on your device.

12.Video




Video is compatible with mainstream format and with smart intelligent memory.Convenient progress bar for repeat.Press  to change to full screen mode.

13.Camera

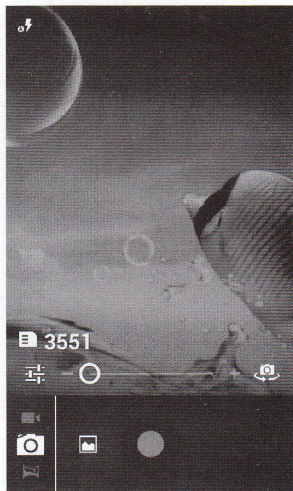

 14.File management

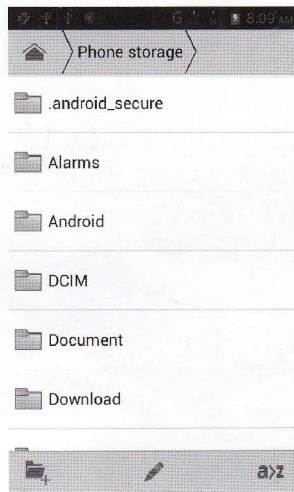

Camera with auto focus. Tap object for zooming/digital zoom

Set up the structure of the file directories. You can copy, move or share files.