

Quickly guidance Mp3 instructions

V3

PREFACE

 
1. Please read this user manual carefully before using.
2. The information of this manual is based on the current version of the product.
3. We reserve the rights to change with out prior notice.
4. Please turn on the player when you need charging.

Notice

1. Do not use the player in the extra hot, cold, dusty or dank environments. The best work temperature for 0 ° C the ~ is 40 ° C.
2. Prevent friction with hard things, or it may lead surface abrasion, battery fall off and hardware damage.

3. When the player is at pause state for a period of time, it will turn off automatically.
4. Do not disconnect the device when formatting, uploading and downloading date. Cause this can lead to loss of data.
5. Please don't replace battery by oneself or break battery and throw in fire. Otherwise it will hurt yourself.
6. Please don't dismantle or unload this machine without authorization, if have any question please contact with dealer or our head company.

◎ External appearance and key

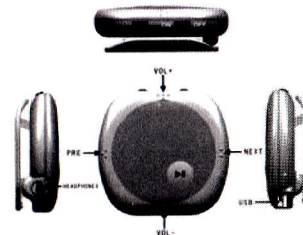

- ① ** Key, the volume down.
- ② ⏮ Key, the volume up.
- ③ ⏮ Key, previous song, long press for fast forward.
- ④ ⏭ Key, next song, long press for fast backward.
- ⑤ >|| Key: music pause, long press turn ON/OFF when battery button on.
- ⑥ The USB connect
- ⑦ The ON/OFF button, press to make power ON or OFF.
- ⑧ The headphones jack.

◎ Basic operation

1. switch on button


1. Slide the 'POWER' key to ON position to turn on the player and then press ">||" key to play.
2. At pause/play state, press the power button to OFF, the machine will shut off.

2. Play music

1. Press ">||" Play button, it will play music randomly after 5 seconds, and at the same time red light flashing.
2. At play state, short press ">||" play button for stop playing, the indicator light will be bright.
3. Long press ">||" play button for power off, and indicator light extinction.

3. Repeat Mode

Under playing mode, toggle button to "↺↻" support random play, and

toggle button to "  "support cycle
play.

LED status introduction

1.When music at pause state:LED light
long brighting.

2.When music at play state:LED light
flashing.

3.When connect with PC:LED light
flashing.

4.When charge finished:LED light long
brighting.

5.When press any key:LED light fast
flashing.

6.When power off:LED light extinction.

◎ USB connect

1.Use USB plug the player to the PC
directly.

2.There will be a Removable Disk

appear when you double click My
Computer on the Desktop.

3.Drag and download files directly
into the removable Disk.

4.You can also create folders in the
Removable Disk.

5.Please DO NOT disconnect or turn
off the player when you are
downloading or uploading files.

6.Please use 'safe removal' after
finishing the operation.

◎ Trouble Shooting

No sound:

1.Verify that the volume is not at the
minimum level.

2.Check that the music files are
supported by the player.

Music cluttered with noise:

The music file could be damage. Try to
download it to the player again.

Cannot read or write data to the player:

- 1.Check that the player is properly
connected to the PC.
- 2.Check the memory of the player is full
or not.
- 3.Check the USB cable for damages.

Cannot open the USB disk:

- 1.Check the removable drive for
viruses.
- 2.Reformat the disk.

◎ PACKAGE CONTENT

- 4GB MP3 Player
- Earphone
- USB Cable
- English and Spanish Manual

- Gift box
- Warranty card

◎ Product specification

Music format	MP3、WMA、WAV
system support	Windows 98/Me/2000/XP
USB	USB 2.0 high speed
Audio frequency processing	20Hz-20KHz
Noise ratio	≥86DB
The audio frequency outputs	(R)5mWx(L)5mW
Power supply	Polymer battery 140MAH
Playing music time	Around 8.0H
Size	38X40X14.5mm