


Quickly guidance Mp3 instructions

V2

About your player

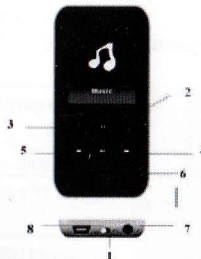

1.ON/OFF

Power switch key. ON means that the player is energized, and OFF means that player is de-energized

2.PLAY

Play key. Press the key for a long time, the player is ON/OFF; while press for a short time, the player starts to play or pause.

3.Menu

Menu key, which is pressed for a short time to confirm, and is pressed for a long time to return to the main menu

4.NEXT

The NEXT key is pressed for a short time to enter the next item, next song, or increase the sound volume, and the NEXT key is pressed for a long time to perform the fast forward operation.

5.PRE

The PRE key is pressed for a short time to enter the previous item, previous song, or reduce the sound volume, and the PRE key is pressed for a long time to perform the fast backward operation.

6.VOL


Volume selecting key


7.Earphone jack

8.USB jack

Electric Quantity of the Battery

Display the current electric quantity state of the battery.

 When the electric quantity of the battery is full, full-grid red square block will be displayed in the picture.

 When the electric charge of the battery is low, nothing will be displayed in the picture

Notes: Before the charging operation is performed, please ensure that the player is de-energized.

The charging time of the battery is 2.5-3H, and the playing time is 7.5H


Main Functions

• Entering the Menu

When the "M" key is pressed for a long time or a short time, all main menus and the submenus can be entered or quitted; when the "VOL" key is pressed for a short time, the submenu can be quitted directly.

• Show the Preview

○ Displays of the main menu on the screen are shown as follows:

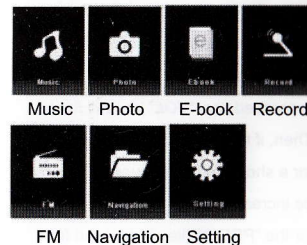

• Power Switch

Slide the power switch to ON position, and press the "▶||"key for a long time to power on.

When the MP4 player is in the working state, if the "▶||"key is pressed for a long time, the player can be powered off.

• Play/Pause

The "▶||"key is pressed for a short time in the music playing, and the music will be played or paused.

• Sound Volume Adjustment

On the play interface, if the "VOL" key is pressed, the "VOL" key will flash. Then, if the "NEXT/▶" key is pressed for a short time, the sound volume will be increased.

Or the "PRE/◀" key is pressed for a

short time, and the sound volume will be reduced.

Upgrading

When the program (the phenomenon that the player can not be opened, the screen is a blank space screen, and the player is crash etc.) is interrupted because your player is used improperly, or when the manufacturer's Web site can supply a firmware with expandable new function, then you can upgrade your player.

• Troubleshooting

Fail to be Powered on

1. Check the battery for the electric quantity, if the battery has no electric quantity, and the battery must be charged.
2. Check whether the power switch is

ON position.

No Sound

1. Check whether the sound volume is too small.
 2. Determine whether the earphone connection is good, and the earphone is good.
 3. Check whether the MP3 file is complete and correct.
- Strange characters on display
- Check the language selection for the accuracy.
- Unable to download the music normally
1. Check whether the USB connecting wire is damaged, and the connection is normal.
 2. Make sure that the drive (Windows 98) has been installed.
 3. Check whether there is enough

space to store.

• Technical Specifications

Overall Dimension	81mm(length)*39mm (width)*8mm(height)
Display Screen	1.8-inch TFT screen
Connecting to Computer	High-speed USB2.0
Memory	128MB-8GB
EQ Selection	Normal, 3D, rock, popular, classical, super bass and jazz
Supporting Format	Formats such as MP3, WMA, WAV and JPEG and the

	like
Operating Temperature	-5 to 40 degrees
Language Selection	21 languages such as simplified Chinese, traditional Chinese, English and the like
Supporting the operating system	Windows98/SE/ME/2000/XP/VISTA and the like