

## Quickly guidance Mp3 instructions

### Q2

#### Notes:

##### Charge notice:

1. Please use the supplied charger only, as the specifications of other chargers may be different.
2. If charge with computer, please pop off the USB icon "USB", then the player will enter into charging status. Please note, don't disconnect the USB cable with computer.

##### Automatic Power Off:

To save power, the player will turn off automatically when idling for some time.

##### Sleep Timer:

The sleep timer must be set every time anew after the player has switched off.

##### Longer Periods of Non-Use:

 
Charge the player periodically if not

used for a longer period of time (one month or longer) to avoid the rechargeable battery being too exhausted to turn the player on later.

##### File Copy:

Files will be damaged if exit in a wrong way when they are copying.

#### Know The Media Player:

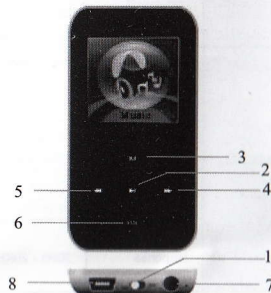

1. ON/OFF button
2. Play/Pause/ press and hold for power on/power off
3. Menu / Enter / access setup menu and confirmation
4. next track/next song/fast forward/volume up
5. previous track/previous song/fast backward/volume down
6. Vol
7. Earphones jack
8. USB port

#### Key Definition:

 
- On-power on, Off-power off
- ▶ || - long press for power on /power off, short press for pause.
- M- short press for confirmation, long

press to main menu(can not carry out when the music is playing)

- ◀◀-short press for previous track/previous song/volume down and long press for fast backward.
- ▶▶- short press for next track/next song/volume up and long press for fast forward.

VOL-volume selecting

#### Screen:

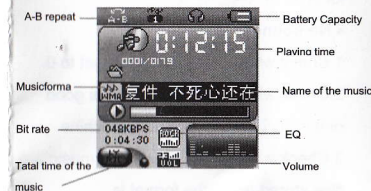

#### Battery Capacity

Reveal the status of using battery

- When the volume is full, it will be filled with red.
- When the volume use out, it will be empty.

#### Main Function:

##### ● Enter Into Menu

Long/short press "M" to enter into/exit all the main menu and submenu; short press "VOL" for exiting submenu directly.

##### ● Display Preview

Main menu will show in the screen like below:



Music Video Radio Photo Navigation



E-book Record Game Setting

### • On-off power

Put ON/OFF button to ON, long press

“▶ ||” for turning on the machine.

### • Play/Pause

In the music mode, short press

“▶ ||” for playing/pausing the music.

### • Volume Adjusting

In the playing mode, press “VOL”, it will be flashed, short press “▶” for volume up, short press “◀” for volume down.

### • How to use key-press

There are two ways:

Short press: press first then release at

once

Long press: press last for about 2 seconds then release.

## Trouble shooting

### • No power:

1.If the player has not been used for a longer period of time the battery may be too exhausted. Please charge the player before use.

2.The electrical switch is not on the location of “on”.

### • No sound:

1.Check whether the volume is set to 0.  
2.Check whether the earphone is good or it well connected with the machine  
3.Check whether the player has music files stored and if the format is compatible.

### • The language of the screen is

tousled:

Check whether the selected language is your need

### • The sound of FM is not very good:

Check whether there is any electric equipment disturb

### • Unable to download files:

1. Check whether the USB cable is damaged and PC and player are connected properly.  
2.Check whether you have installed driver (Windows 98)  
3. Check whether the player's memory is full.

## Basic parameter

Dimension	73.8(L)×37. (W) ×8mm (H)	
Screen	1.5 inch CSTN	
USB interface	High speed USB2.0	
Memory Size	512MB,1G,2G,4G,8G,16G (optional)	
Play time	7 Hour	
Record	Record ratio	32KHz
	Record format	WAV
	Record time	Up to 68 hours (1GB)
MP3, WMA, WAV	Earphone out power	(L) 5mW+ (R) 5mW (320hm)
	MP3 bit rate	8K bps – 320K bps
	WAV bit rate	8K bps – 320K bps
	Frequency response range	20Hz - 20KHz

	Noise ratio	83dB
FM	Receiving video scope	76MHz–90MHz 87.5MHz–108MHz
	Save stations	20
	Earphone out power	(L) 5mW+ (R) 5mW (320hm)
	Noise ratio	45dB
Music format	MP3、WMA、WAV etc.	
Video format	AVI format	
Using temperature	-5~40℃	
Supported language	Multinational language(up to 11 kinds)	
Support operation system	Windows98/SE/ME/2000/XP,etc.	