

Car Recorder User Guide

Contents

| | | |
|----------|------------------------------------|-----------|
| 1 | Introduction..... | 4 |
| 1.1 | Features..... | 4 |
| 1.2 | Package Contents..... | 4 |
| 1.3 | Product Overview..... | 5 |
| 1.4 | Remote Control (Optional)..... | 6 |
| 2 | Getting Started..... | 7 |
| 2.1 | Inserting the Memory Card..... | 7 |
| 2.2 | Installing in Vehicles..... | 8 |
| 2.3 | Connecting to Power..... | 9 |
| 2.4 | Powering the Device On / Off..... | 10 |
| 2.5 | Initial Settings..... | 10 |
| 3 | Using the Car Recorder..... | 11 |
| 3.1 | Recording Videos..... | 11 |
| 3.2 | Playback Videos and Photos..... | 14 |
| 4 | Adjusting the Settings..... | 17 |
| 4.1 | Using the Menu..... | 17 |
| 4.2 | Menu Tree..... | 18 |
| 5 | Specifications..... | 21 |

About this Guide

The content in this document is for information purpose and is subject to change without prior notice. We made every effort to ensure that this User Guide is accurate and complete.

However, no liability is assumed for any errors and omissions that may have occurred.

The manufacturer reserves the right to change the technical specifications without prior notice.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

WEEE Notice

Disposal of Waste Electrical and Electronic Equipment and/or Battery by users in private households in the European Union



This symbol on the product or on the packaging indicates that this can not be disposed of as a household waste. You must dispose of your waste equipment and/or battery by handling it over to the applicable take-back scheme for the recycling of electrical and electronic equipment and/or battery. For more information about recycling of this equipment and/or battery, please contact your city office, the shop where you purchased the equipment or your household waste disposal service. The recycling of materials will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and environment.

CE Regulatory Notice

This equipment complies with the requirements set out in the Council Directives on the Approximation of the Laws of the Member States relating Electromagnetic Compatibility (2004/108/EC); the Low Voltage Directive (2006/95/EC); the Restriction of The Use of Certain Hazardous Substances in Electrical And Electronic Equipment Directive (2002/95/EC), Turkish EEE Directive; the Commission Regulation (EC) No 1275/2008 implementing Directive 2005/32/EC of the European Parliament and of the Council with regard to eco-design requirements for standby and off mode electric power consumption of electrical and electronic household and office equipment, and the Directive 2009/125/EC of the European parliament and of the council establishing a framework for the setting of eco-design requirements for energy-related products.

Notes on Installation

1. Install the device near the rear-view mirror to obtain the best open-field view.
2. Make sure that the lens is within the wiping range of the windscreen wiper to ensure a clear view even when it rains.
3. Do not touch the lens with your fingers. Finger grease may be left on the lens and will result in unclear videos or snapshots. Clean the lens on a regular basis.
4. Do not install the device on a tinted window. Doing so may damage the tint film.

5. Make sure that the installation position is not hindered by the tinted window.

MODEL: SP5

Li-Polymer 3.7V 470mAh 1.7Wh

Be sure to use only the supplied battery and charger. The use of any other type of battery or charger may damage the device and void your warranty.

Caution

- ❖ Use the authorized charger only.
- ❖ Never disassemble by yourself.
- ❖ Never short-circuit the battery.
- ❖ Dispose of the battery properly.
- ❖ Exposing the battery to open flames can cause explosion.

WANSGLORY CO., LTD.

1 Introduction

Thank you for purchasing this advanced Car Recorder. This device is specifically designed for real time video and audio recording when driving.

1.1 Features

- Full HD camera (1920x1080 @ 30fps)
- 2.4" LCD color screen
- Wide angle lens
- High power LED for low light environments
- Motion detection
- Automatic Emergency recording for collision detection
- Supports SDHC up to 32GB

1.2 Package Contents

The package contains the following items. In case there is any missing or damaged item, contact your dealer immediately.

Car Recorder



Bracket



Car adapter



Quick start guide



 
Video cable



USB cable



Remote control (optional)




1.3 Product Overview


Top and Bottom Views



 
Side (Left and Right) Views

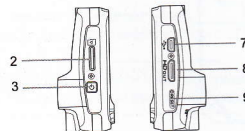

Front View

 

Rear View

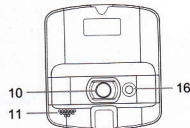 


| No. | Item |
|-----|------------------|
| 1 | Bracket Socket |
| 2 | Memory Card Slot |
| 3 | Power Button |
| 4 | Bracket Socket |
| 5 | Microphone |
| 6 | Back Button (↩) |
| 7 | USB Connector |
| 8 | HDMI Connector |

| No. | Item |
|-----|-------------------|
| 9 | Reset Button |
| 10 | Wide Angle Lens |
| 11 | Speaker |
| 12 | LCD Panel |
| 13 | Up Button (▲) |
| 14 | Down Button (▼) |
| 15 | Enter Button (OK) |
| 16 | LED Light |

Note: To operate the device, press the corresponding buttons (6, 13~15) according to guide icons shown the screen.

1.4 Remote Control (Optional)

 The remote control is an optional accessory. Contact your dealer to purchase.

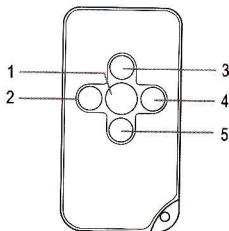


| No. | Description |
|-----|---|
| 1 | Press to toggle LED light on or off. |
| 2 | Press to enter the menu or return to previous screen. Similar function as Back Button (↩). |
| 3 | Press to move up. Similar function as Up Button (▲). |
| 4 | Press to confirm selection. Similar function as Enter Button (OK). |
| 5 | Press to move down. Similar function as Down Button (▼). |

2 Getting Started

2.1 Inserting the Memory Card

 Insert the memory card with the gold contacts facing the back of the device. Push the memory card until it clicks into place.



To remove the memory card


Push to eject the memory card out of the slot.

Note: Do not remove or insert the memory card when the device is turned on. This may damage the memory card.


2.2 Installing in Vehicles

2.2.1 Mount to Windshield

 
1. Attach the device to the bracket base. Turn and tighten the car holder and the bracket base to make sure the device is securely locked in place.
2. With the suction-cup laying flat, position the suction-cup on the windshield.
3. Hold the base firmly on the windshield and press down the clamp to mount the car holder to the windshield. Make sure the base is securely locked in place.



 2.2.2 Adjust Device Position

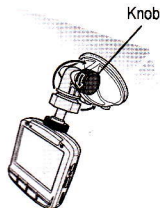

 
Rotate the knob to swivel the device vertically.

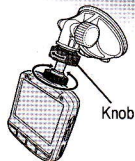

Rotate the knob to swivel the device horizontally up to 360°.

2.3 Connecting to Power

 Use only the supplied car adapter to power up the device and charge the built-in battery.

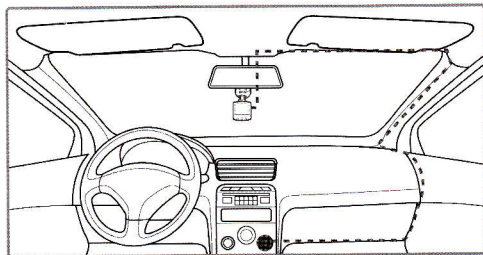

1. Connect one end of the car adapter to the USB connector of the device.
2. Plug the other end of the car charger to the cigarette lighter socket of your vehicle. Once the vehicle engine is started, the device automatically turns on.

Note:

The orange LED lights up while the battery is charging. Please take note if the environment temperature reaches 45°C or above, the car adapter still can supply power to device, but it will not charge the Lithium-ion battery. This is the characteristic of Lithium-ion and is not a malfunction.

2.4 Powering the Device On / Off

2.4.1 Auto Power On/Off

Once the vehicle engine is started, the device automatically turns on. If the *Automatic Record* function is enabled, the recording will automatically start right after the device turns on.

See *Set Automatic Recording* on page 11.

Once the vehicle engine shuts down, the device automatically saves the recording and turns off the power within 10 seconds.

See *Delay Shutdown* on page 21.

2.4.2 Manual Power On/Off

To manually turn on the power, press the **POWER** button.

To turn off, press and hold the **POWER** button for at least 2 seconds.


 



2.5 Initial Settings

Before using the device, we recommend you to enable the *Automatic Record* function and set up the correct date and time.


2.5.1 Set Automatic Recording

To enable the recording to start automatically after you turn on the power, do the following:

1. Press the  button to enter the OSD menu.
2. Press the  button to select **Automatic Record** and press the **OK** button.
3. Press the  button to select **On** and press the **OK** button.
4. Press the **BACK** button to exit the menu.



2.5.2 Set the Date and Time

To set the correct date and time, do the following:

1. Press the  button to enter the OSD



menu.

2. Press the  button to select **Date / Time** and press the **OK** button.
3. Press the  button to adjust the value and press the **OK** button to move to another field.
4. Repeat step 3 until the date and time setting is complete.


3 Using the Car Recorder

3.1 Recording Videos

3.1.1 Record videos while driving

When the vehicle engine starts up and the *Automatic Record* function is enabled, the device automatically turns on and starts recording.

Recording will automatically stop when the engine is switched off.

Or, press the  button to stop recording manually.

Note:

On some cars, the recording will continue when the engine is switched off. If this happens, do one of the following:

- Manually turn off the cigarette lighter.
- Remove the car adapter from the cigarette lighter.

3.1.2 Record all other types of videos

1. Press the **OK** button to start recording.
2. Press the  button to stop recording.

Note:

One video file is saved for every 3 or 5 minutes of recording. See *Using the Menu* on page 19.

The device saves the recording in the memory card. If the memory card capacity is full, the oldest file in the memory card is overwritten.

3.1.3 Emergency Recording

During video recording, press the **OK** button to continuously record the video in one file until the memory card storage is full or the recording is manually stopped. To stop the recording, press the **▼** button.



Note: If the *Collision Detection* function is enabled and a collision is detected, the device will automatically trigger the emergency recording. See *Using the Menu* on page 19.

3.1.4 The Recording Screen



| No | Item | Description |
|----|------|-------------|
| 1 | | |
| 2 | | |
| 3 | | |
| 4 | | |
| 5 | | |
| 6 | | |
| 7 | | |


| | | |
|---|------------------------|--|
| 1 | Duration | Indicates the recording duration. |
| 2 | Date and time | Indicates the current recording date and time. |
| 3 | Guide icon (Menu) | Press the ↶ button to enter the OSD menu. |
| 4 | Battery | Indicates the remaining battery power. |
| 5 | Guide icon (Stop) | Press the ▼ button to stop the recording. |
| 6 | Guide icon (Emergency) | Press the OK button to continuously record the video in one file until the recording is manually stopped. |
| 7 | Guide icon (Playback) | Press the ▲ button to switch to Playback mode. |

3.1.5 Using the LED Light

You can use the LED light to provide extra light when the lighting is insufficient.

To enable the LED light, do the following:

 1. Press the **↶** button to enter the OSD menu.
2. Press the **▲/▼** button to select **Auxiliary Light** and press the **OK** button.
3. Press the **▲/▼** button to select **On** and press the **OK** button.
4. Press the **↶** button to exit the menu.



Note:

Turn off LED lights when the battery is low.

When using LED lights for a long time, it may become hot. Take care not to touch the hot LED lights.

3.1.6 Taking Snapshot

You can also use this device to take snapshots of the current scene.

 
From the standby screen, press the ▼ button to take a snapshot.



Note: If recording is in progress, press the ▼ button to stop the recording.

3.2 Playback Videos and Photos

1. If recording is in progress, press the ▼ button to stop recording. The standby screen is displayed.
2. Press the ↶ button to enter the OSD menu.
3. Press the ▲/▼ button to select the file category that you want to browse and press the OK button.
4. Press the ▲/▼ button to view the next or the previous file and press the OK button to view the file in full screen.



Note: From the standby screen, you can directly enter Playback mode by pressing ▲ button. The last recorded video is displayed on the screen.

3.2.1 Playing Videos

To play videos, do the following:

1. If recording is in progress, press the ▼ button to stop recording.
2. Press the ↶ button to enter the OSD menu.
3. Press the ▲/▼ button to select **File Playback** and press the OK button.
4. Press the ▲/▼ button to select **Video** or **Emergency** and press the OK button.
5. Press the ▲/▼ button to browse for the desired video file and press the OK button to play the video.
6. Press the OK button to pause the playback. Press it again to resume.



3.2.2 Viewing Photos

To view photos, do the following:


1. If recording is in progress, press the ▼ button to stop recording.
2. Press the ↶ button to enter the OSD menu.
3. Press the ▲/▼ button to select **File Playback** and press the OK button.
4. Press the ▲/▼ button to select **Picture** and press the OK button.
5. Press the ▲/▼ button to browse for the desired photo file and press the OK button to view the file in full screen.

3.2.3 The Playback Screen

Video Playback Screen



 Photo Playback Screen

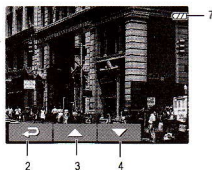


| No | Item | Description |
|----|-----------------------|--|
| 1 | Date and time | Indicates the recorded date and time. |
| 2 | Guide icon (Back) | Press the button to return to file selection display. |
| 3 | Guide icon (Previous) | Press the button to view the previous video/photo. |
| 4 | Guide icon (Next) | Press the button to view the next video/photo. |
| 5 | Guide icon (Pause) | Press the button to pause the video playback. |
| 6 | Duration | Indicates the elapse time. |
| 7 | Battery | Indicates the remaining battery power. |

3.2.4 Deleting Files

To delete file(s), do the following:

 1. If recording is in progress, press the button to stop recording.
2. Press the button to enter the OSD menu.
3. Press the button to select **File Deletion** and press the **OK** button.
4. Press the button to select the file category and press the **OK** button.
5. Press the button to select the file that you want to delete and press the **OK** button to enter the Delete menu.



6. Press the button to select an option.

| Item | Description |
|------------|--------------------------|
| Delete One | Delete the current file. |
| Delete All | Delete all files. |

 
 
 
 
7. Press the **OK** button to confirm delete.

Note: Deleted files cannot be recovered. Ensure the files have backup before deletion.

4 Adjusting the Settings

4.1 Using the Menu

You can customize the video recording and other general settings via the on-screen display (OSD) menus.

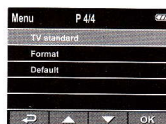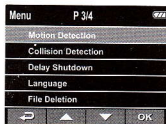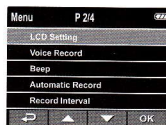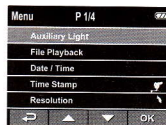

1. If recording is in progress, press the **Record** button to stop recording.
2. Press the button to open the OSD menu.
3. Press the button to select a menu option and press the **OK** button to enter the selected menu.
4. Press the button to select the desired setting and press the **OK** button to confirm the setting.
5. Press the button to exit the menu.

4.2 Menu Tree

Refer to the below table for details on menu items and available menu options.

| Menu option | Description | Available option |
|-----------------|---|-----------------------------|
| Auxiliary Light | Enable/Disable the LED light. | On / Off |
| File Playback | Select the file category that you want to view. | Video / Emergency / Picture |
| Date / | Set the date and time. | |

| Menu option | Description | Available option |
|---------------------|---|---|
| Time Stamp | Enable/Disable the date stamp. | On / Off |
| Resolution | Set the video resolution. | 1080P(1920x1080) / 720P(1280x720) |
| LCD Setting | Set the duration for the display to automatically turn off right after video recording starts. | On / Turn Off After 30 Sec. / Turn Off After 3 min. / Off |
| Voice Record | Enable/Disable the voice recording. | On / Off |
| Beep | Enable/Disable the beep. | On / Off |
| Automatic Record | Enable/Disable the device to automatically record video after the device is turned on. | On / Off |
| Record Interval | Set the recording duration for each recorded video file. | 3 mins / 5 mins |
| Motion Detection | Enable/Disable the motion detection. If this function is enabled and the device detects any object movement, it will automatically start the recording. | On / Off |
| Collision Detection | Enable/Disable the collision detection. If this function is enabled and any collision is detected, the device will automatically trigger the emergency recording. | High Sensitivity / Normal Sensitivity / Low Sensitivity / off |

5 Specifications

| Item | Description |
|-----------------------------------|--|
| Image sensor | 1/3.2" CMOS sensor |
| Effective pixels | 2592 (H) x 1944 (V) |
| Storage media | Supports SD(HC), up to 32GB class 4 or above |
| LCD display | 2.4" LCD color TFT (112K pixels) |
| Lens | Wide Angle Fixed Focus lens F2.8, f=3.0mm |
| Focus range | 1.5m~Infinity |
| Movie Clip | Resolution: Full HD (1920 x 1080), 30fps HD (1280 x 720), 30fps |
| | Format: .mov (H.264+ADPCM codec) |
| Still image (Snapshot) | Resolution: 5M (2592 x 1944) |
| | Format: DCF (JPEG, Exif: 2.2) |
| Shutter | Electronic shutter Auto: 1/2 ~ 1/2000 sec. |
| G-Sensor | 3-Axis G-Force sensor |
| ISO | Auto |
| White Balance | Auto |
| Assist Lamp | Yes |
| Microphone | Yes |
| Speaker | Yes |

| Menu option | Description | Available option |
|--------------------|--|-----------------------------|
| Delay Shutdown | Set the delay duration before turning off the power. | 10 Sec. / Off |
| Language | Set the on-screen display menu language. | |
| File Deletion | Delete the file(s). | Video / Emergency / Picture |
| TV standard | Set the TV type based on your local region. | NTSC / PAL |
| Format | Format the memory card. | Yes / No |
| Default | Reset all settings to factory default settings. | Yes / No |

| Item | Description |
|-----------------------|---|
| Interface | Mini USB, Mini C Type HDMI |
| Battery | Built-in 470mAH Li-polymer rechargeable |
| Operating Temperature | 0° ~ 50° C |
| Operating Humidity | 20 ~ 70% RH |
| Storage Temperature | -20° ~ 80° C |
| Dimensions | 67.5 x 62 x 30.5 mm |
| Weight | Approx. 85g |