

**13.3"**  
**ROOF MOUNT PLAYER SYSTEM**

**OPERATING  
INSTRUCTIONS**

## OPERATION MANUAL

### Cautious:

1. Prohibit putting the machine in rain or damp to avoid fire and electric strike.
2. Do not try to repair the device by yourself. Please switch off the machine immediately and then inform our factory or dealers if there is any problem. This product is comprised of many precision electronic components. Disassembling or self-renovation without professionals may make it break.
3. Do not expose the machine to moisture, dust, vapor, oil smog, direct sunshine or influential environment.
4. Do not use the diluent or other chemical detergents. Use soft cloth to remove dust or dirt on the machine.
5. Keep the machine away from the over hot or over cold locations.  
The machine's storage temperature ranges  $-10^{\circ}\text{C}\sim 60^{\circ}\text{C}$ , and its operation temperature ranges  $0^{\circ}\text{C}\sim 40^{\circ}\text{C}$ .
6. Do not play unequal discs. This machine can play DIVX/MPEG4 /DVD/DVD $\pm$ R/RW/SVCD/VCD/DVCD/CD/MP3/WMA/CD $\pm$ R/RW /HDCD/CD-G/KODAKE PICTURE/JPEG/CD-ROM by CD-R, receive TV signal with built-in tuner.
7. Avoid dropping or impacting to the machine.
8. For your safety, do not turn on, watch and operate the machine when you are driving. In some countries and regions, it may be against the laws.
9. Safe power supply: DC 12V(10V-14V)

### Attention:

There may be a few bright or dark spots on the screen when plays.

It is a very common phenomenon in active matrix display technology. It does not indicate any fault or problem has appeared.

## Functions and features


- Compatible: DVD/MP3/MP4/WMA/WAV/MPEG2/MPEG4/MKV/H.264/AVS/VC1/RM/RMVB/AVI/VP6/VP8 etc all formats
- Screen Size: 13.3"
- System: PAL/NTSC
- Display Mode: 16:9
- Pixel: 1920(W) x RGB x 1080(H)
- Power Supply: DC 12~24V
- Power Consumption: <20W
- Built in Dome LED lights
- Multi-Language OSD Menu
- Full function remote control
- Built in IR transmitter/FM transmitter
- Support USB & SD
- Wireless Games
- Support 1080P
- 1 HDMI input
- 1 AV input
- 1 AV Output
- Built-in TV Tuner (Optional)

## DVD Appearance and function


1. Light
2. Eject
3. Next skip/Analog decrease
4. Prev skip/Analog increase
5. Mode
6. Menu
7. Power



## DVD Connection Diagram

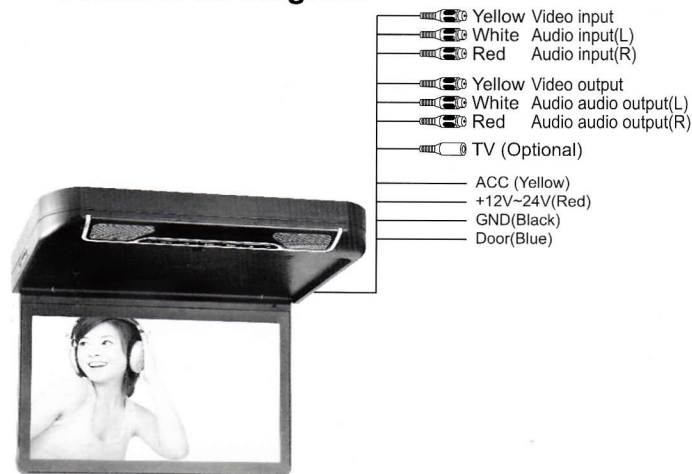


## DVD Remote control panel

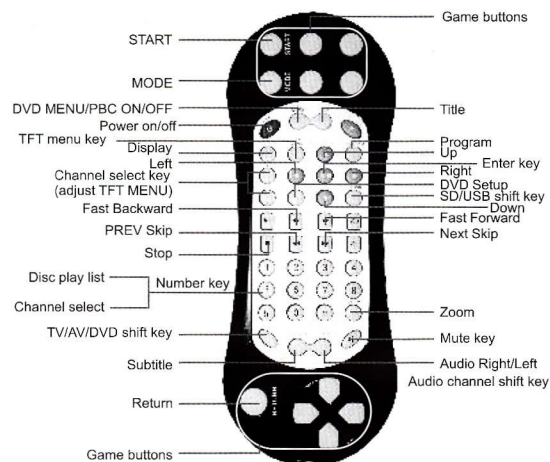


## MP5 Appearance and function

1. Light
2. Play/pause
3. Next skip/Analog decrease
4. Prev skip/Analog increase
5. Mode
6. Menu
7. Power

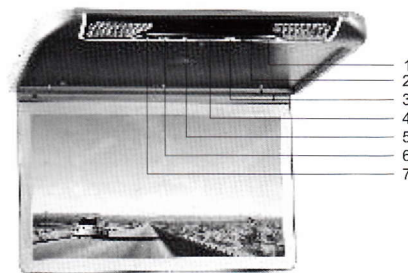


## MP5 Connection Diagram

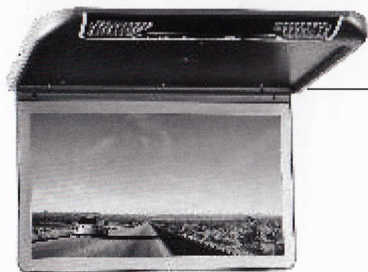


- Yellow Video input
- White Audio input(L)
- Red Audio input(R)
- Yellow Video input
- White Audio input(L)
- Red Audio input(R)
- TV (Optional)
- ACC (Yellow)
- +12V(Red)
- GND(Black)
- Door(Blue)

## MP5 Remote control panel

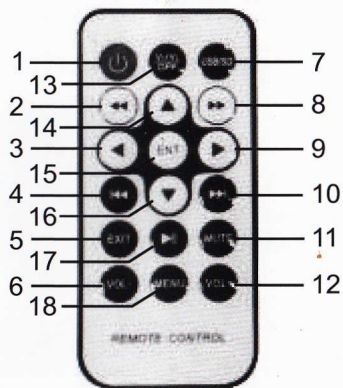


- 1. Power switching
- 2. Fast backward
- 3. Left
- 4. Prev skip
- 5. Exit
- 6. Volume decrease
- 7. SD/USB shift
- 8. Fast forward
- 9. Right
- 10. Next skip
- 11. Mute key
- 12. Volume increase
- 13. AV/MP5 shift
- 14. Up
- 15. Enter
- 16. Down
- 17. Play/Pause
- 18. Menu

## AV Appearance and function

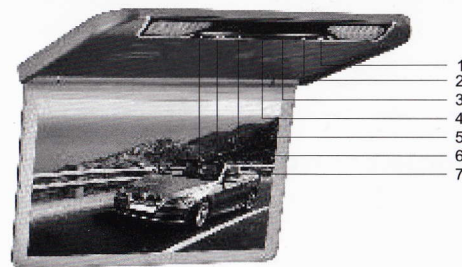


- 1. Light
- 2. Mode
- 3. Analog decrease
- 4. Analog increase
- 5. AV1/AV2
- 6. Menu
- 7. Power

## AV Connection Diagram

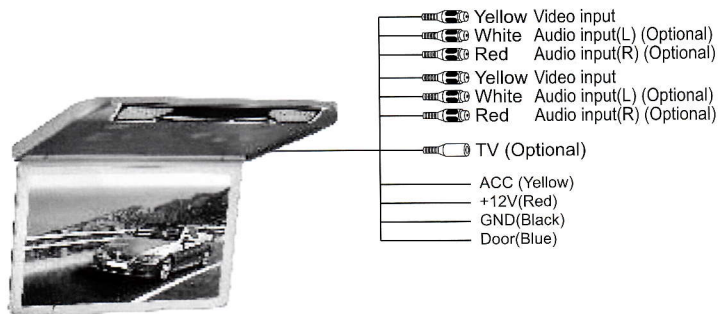

## AV Remote control panel

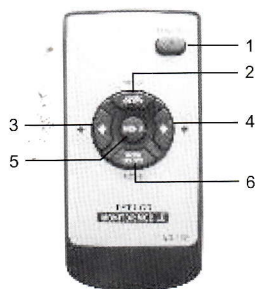

## Method of operating DVD system

### Playing a disc (DVD/VCD/CD)

Turn on the player insert the DVD disc

Make sure that the disc's label is facing up

Sliding into the slot, the disc is automatically played

To stop press the button (STOP)

To stop temporarily press the button (PLAY/PAUSE)

### Playing a MP3 file

Turn on the player insert the disc

Make sure that the disc's label is facing up

Sliding into the slot, the disc is automatically played

To stop press the button (STOP)

To stop temporarily press the button (PLAY/PAUSE)

To resume again press the button (PLAY/PAUSE)

To replay a song you want

1. Press the button after choosing a song (track) you want by using Arrow want by using Arrow button.
2. You can replay the song directly by entering the number of the song.

### Disc Menu

You can select the following menu when are recorded in discs.

To display recorded menu on disc DVD/VCD 2.0

Press the (DVD MENU) button

The menu recorded in discs appears. (Scene Selection, Special Features, etc)

Menu appears differently depending on discs.

CD, VCD1.1 does not have disc menu function.

Press the arrow buttons to move to item you want, and press the (ENTER) button.

# Simple trouble shooting

Problems	Possible reasons
No sound and picture	Ac adaptor or car adaptor is not properly connected. Unauthorized power supply is used. The power switch is in OFF position.
No picture	The channel selection is not done properly. Resetting the broadcast channels.
No sound	The volume is turned off. The audio sets are set up in wrong way. The broadcast signal is too weak.
Poor reception	The antenna is not adjusted properly. The channels are not tuned properly.
Dark picture	The brightness and contrast are not adjusted properly. The temperature of the using environment is too cold.
Punch-drunk or unstable picture	The antenna not adjusted properly. In areas where TV signal is too weak.
Jitters	The antenna direction is incorrect. The TV may be receiving reflecting signals from buildings or mountains in the area.
Snowflake	The TV may be receiving electronics or electromagnetic interference when car engineers trains high voltage wires or neon signs.
Poor colour	The colour is not properly adjusted. The signal is too weak.
No power supply or no voice	Electric wire conjunction inaccuracy: Check connects the lines The fuse breaks: Replace With the fuse of the specification
The CD has already pack into but no surd sound	The disc put the anti; Press the CD to put the right direction, and make its label with an upward exposure. The disc become soiled or row to harm seriously; Clean the CD or replace the new disc.
Because of the vibration but the emergence jump the sound phenomenon	Install unsteady settle: (use the gearing parts to pack this machine firm) The disc become soiled or row to harm seriously; Clean the CD or replace the new disc.
Have noing vibration to also appear to jump the sound phenomenon	The CD is dirty or damage, please clean or replace the CD.