 



CAR DASH CAM

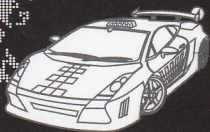

Operating Instructions



 一、Product Instruction

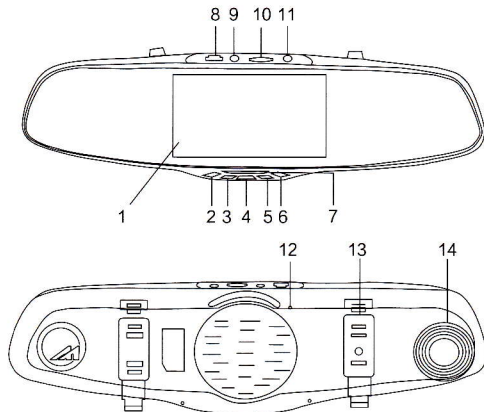

1.LCD Screen	2.Up	3.Menu Button
4.Power Button	5.Ok Button	6.Down
7.Mic	8.Mini USB Port	9.AV IN
10.TF Slot	11.GPS	12.Reset
13.Bandage Clip	14.Camera	

1. Power Button/Illumination Screen Power Button

A: Power Button Function

Short press power button to on, long press power button to off.
B: Screen Backlight On & Off Button Short press power button, backlight could turn on & turn off in video/taking photos/file browse mode.

2. Mode Button/Menu Button/Emergency Video Lock Button

A: Mode Function

Long press Mode button, Switch Mode(Record/Camera/Replay) freely when not recording

B: Menu Function

Short press menu button to enter the menu list. Choosing your wanted option press up or down button. Press ok button to choose.

C: Emergency Lock Button

Long press menu button to start emergency lock function if you want to protect the video won't be overwritten in record mode. The screen will show a lock sign.

3. Up Button/Footage Switch/Motion Detection/Turn Up Volume

A: Up Button Function

That is up button function in menu setting & playback mode.

B: Camera Switch Function

It will show dual camera while connecting external lens. Short press up button could switch front camera/back camera/PIP and split camera. Short press camera mode, that could switch the different zoom.

C: Turn Up Volume

Short press up button that could turn up the volume in the playback mode.

4. Down Button/Mute Button/Volume Down

A: Down Button Function

It is down button function in the menu setting & playback mode.

B: Turn Off Recording Function

Short press down button that could turn off record function in recording mode. The screen in bottom left will show .ban icon. That means turn off the record function.

C: Volume Down

Short press down button that could reduce the volume at playback mode.

5. Recording Button/Taking Photos Button/Ok Button

A: Turn On/Off Recording Function

Short press ok button to start to record in recording mode.Short press ok button to stop recording.

B: Taking Photos Button

Short press ok button to take photo in taking photos mode.

C: File Play Button

Short press ok button to play video in file browsing mode.

D: Ok Button

Short press menu button to enter menu mode,Short press up /down button to browse file,Short press ok button to confirm in recoding mode/camera mode/playback mode.

二、 Installation Guide

1.Turn off engine

2.Plug Micro SD card into card slot

【 Notes 】 Please choose Class 6 or above class 6 micro SD card,maximum up to 32GB.

3.Attach the dashcams on the original rear view mirror.

4.Plug the USB car charger into automobile cigarette lighter.

5.Connect USB interface and car charger via extending line.

6.Install the rear view camera near the license plate.Plugging rear view camera into car dashcams interface.

7.Adjust the position of camera to insure the camera & ground in the level.

8.Start the engine.Check the car dashcams whether install right or not.

三、 Function Instruction

1. Auto Recording Function

Car dashcams record automatically while the car is powered on.

【 Notes 】

a.The Micro SD card will overwritten the front video while the micro SD card is full if choosing 3 minutes/5 minutes/10 minutes.

b.The micro SD card is full if choosing off button.Must format the micro SD card or delete the video,then start to record.

c.The video could save movie files.A & B files base on front & back camera.

d.The camera files was saved in the photo files of Micro SD card

2. Camera Function

Long press mode button to enter camera mode.The sign of top left corner turn video into camera.

3. G- Sensor Function

Gravity sensor, it will detect emergency break or collision, and lock the current recording file,recommend to set as low.The upper of screen will shown lock sign.

【 Tips 】

a.The locked files will have SOS sign.The common files won' t have.

b.G-sensor could choose different grade according to the sensitivity.

4. Key Lock Function

Long press menu button in recording mode,the car dashcams will lock the current files.

5. Date & Time Setting

Short press menu button two times.Then enter setting menu,Press up button or down button to choose date & time setting,Then choose ok button to confirm.In the end,short press menu button to save it & return to menu.

【 Notes 】 Please set the right date & time in advance in order to obtain the evidence.

6. One Key Mute Function

Short press down button,the microphone in upper right of screen was turned ban icon.That means the record function turn off.At the moment,the car dashcams only record the video not voice.Short press down button,the microphone turn into recording icon.That means return to record function.

7. USB Mode

After connected to computer,it will prompt 3 options.

A: Mass Storage

You can view the files in the micro SD card on computer.The common files was saved in CARDV files.A stands for front camera video.B

stands for back camera video. The lock files was saved in "RO" files. Photos was saved in "Photo" files.

B: PC Camera

It could use as PC camera.

C: Power Charging

Just to charge the device, please note the data cable comes with package isn't efficient for charging, recommended to use a charging cable.

8. Video playback

Long press mode button while the dashcams is powered on. Short press up button/down button to switch playback mode. Then choose ok button to playback the video.

9. Parking Assistance

First of all, Connecting the car charger, The black & red line of back camera must connect parking light. Plug the usb car charger, the dashcams will start to record. And the screen will show the scenery of parking scenery while parking.

This instruction manual are only for reference.

FAQ:

Please resolve these problems while the car dashcams meet such follow questions,

No Taking Photos, No Recording

Please check the micro SD card whether have enough space or not. Or the files whether lock or unlock.

It will stop automatically while recording

Please use SDHC high speed Micro SD card. Such as above C6 or C10.

It will show file error while replay photos & videos.

Please format the micro SD card if the storage of micro SD card meet problems.

The photo isn't as clearly while taking photos

Please check the lens whether have fingerprint or dirty stuff. If

yes, please clean the lens before taking photos.

The video isn't clear while recording sky or water
Please adjust the EV to set the reasonable value. Because the auto exposure function will be effected in the big contrast.

The color isn't so perfect under cloudy indoor.
Please check the white balance whether setting into automatically.

It has horizontal stripes in the image.
Please check the power frequency whether it is 50Hz or 60Hz.

While the car dashcams meet Crash.
Please press the reset button, then restart recovery.