

Contents

Chapter 1: Product Information	1
Chapter 2: Terms Explanation	2
Chapter 3: Installation and Setup	3
Chapter 4: Basic Operation	4
Chapter 5: Advanced Operation	5
Chapter 6: Troubleshooting	6
Chapter 7: Appendix	7
Chapter 8: Contact Us	8
Chapter 9: Warranty	9
Chapter 10: Legal Notice	10
Chapter 11: Revision History	11
Chapter 12: Index	12
Chapter 13: Glossary	13
Chapter 14: About This Manual	14
Chapter 15: Copyright	15
Chapter 16: Trademark	16
Chapter 17: Disclaimer	17
Chapter 18: Liability	18
Chapter 19: Limitation of Remedies	19
Chapter 20: Assignment	20
Chapter 21: Severability	21
Chapter 22: Entire Agreement	22
Chapter 23: Force Majeure	23
Chapter 24: Notices	24
Chapter 25: Construction	25
Chapter 26: Interpretation	26
Chapter 27: Language	27
Chapter 28: Binding	28
Chapter 29: Amendments	29
Chapter 30: Waiver	30
Chapter 31: Assignment of Rights	31
Chapter 32: Subcontracting	32
Chapter 33: Release of Claims	33
Chapter 34: Arbitration	34
Chapter 35: Jurisdiction	35
Chapter 36: Governing Law	36
Chapter 37: Dispute Resolution	37
Chapter 38: Finality of Award	38
Chapter 39: Costs	39
Chapter 40: Interest	40
Chapter 41: Attorneys' Fees	41
Chapter 42: Waiver of Jury Trial	42
Chapter 43: Counterclaims	43
Chapter 44: Setoff	44
Chapter 45: Release	45
Chapter 46: Indemnification	46
Chapter 47: Contribution	47
Chapter 48: Subrogation	48
Chapter 49: Assignment of Rights	49
Chapter 50: Subcontracting	50
Chapter 51: Release of Claims	51
Chapter 52: Arbitration	52
Chapter 53: Jurisdiction	53
Chapter 54: Governing Law	54
Chapter 55: Dispute Resolution	55
Chapter 56: Finality of Award	56
Chapter 57: Costs	57
Chapter 58: Interest	58
Chapter 59: Attorneys' Fees	59
Chapter 60: Waiver of Jury Trial	60
Chapter 61: Counterclaims	61
Chapter 62: Setoff	62
Chapter 63: Release	63
Chapter 64: Indemnification	64
Chapter 65: Contribution	65
Chapter 66: Subrogation	66
Chapter 67: Assignment of Rights	67
Chapter 68: Subcontracting	68
Chapter 69: Release of Claims	69
Chapter 70: Arbitration	70
Chapter 71: Jurisdiction	71
Chapter 72: Governing Law	72
Chapter 73: Dispute Resolution	73
Chapter 74: Finality of Award	74
Chapter 75: Costs	75
Chapter 76: Interest	76
Chapter 77: Attorneys' Fees	77
Chapter 78: Waiver of Jury Trial	78
Chapter 79: Counterclaims	79
Chapter 80: Setoff	80
Chapter 81: Release	81
Chapter 82: Indemnification	82
Chapter 83: Contribution	83
Chapter 84: Subrogation	84
Chapter 85: Assignment of Rights	85
Chapter 86: Subcontracting	86
Chapter 87: Release of Claims	87
Chapter 88: Arbitration	88
Chapter 89: Jurisdiction	89
Chapter 90: Governing Law	90
Chapter 91: Dispute Resolution	91
Chapter 92: Finality of Award	92
Chapter 93: Costs	93
Chapter 94: Interest	94
Chapter 95: Attorneys' Fees	95
Chapter 96: Waiver of Jury Trial	96
Chapter 97: Counterclaims	97
Chapter 98: Setoff	98
Chapter 99: Release	99
Chapter 100: Indemnification	100
Chapter 101: Contribution	101
Chapter 102: Subrogation	102
Chapter 103: Assignment of Rights	103
Chapter 104: Subcontracting	104
Chapter 105: Release of Claims	105
Chapter 106: Arbitration	106
Chapter 107: Jurisdiction	107
Chapter 108: Governing Law	108
Chapter 109: Dispute Resolution	109
Chapter 110: Finality of Award	110
Chapter 111: Costs	111
Chapter 112: Interest	112
Chapter 113: Attorneys' Fees	113
Chapter 114: Waiver of Jury Trial	114
Chapter 115: Counterclaims	115
Chapter 116: Setoff	116
Chapter 117: Release	117
Chapter 118: Indemnification	118
Chapter 119: Contribution	119
Chapter 120: Subrogation	120
Chapter 121: Assignment of Rights	121
Chapter 122: Subcontracting	122
Chapter 123: Release of Claims	123
Chapter 124: Arbitration	124
Chapter 125: Jurisdiction	125
Chapter 126: Governing Law	126
Chapter 127: Dispute Resolution	127
Chapter 128: Finality of Award	128
Chapter 129: Costs	129
Chapter 130: Interest	130
Chapter 131: Attorneys' Fees	131
Chapter 132: Waiver of Jury Trial	132
Chapter 133: Counterclaims	133
Chapter 134: Setoff	134
Chapter 135: Release	135
Chapter 136: Indemnification	136
Chapter 137: Contribution	137
Chapter 138: Subrogation	138
Chapter 139: Assignment of Rights	139
Chapter 140: Subcontracting	140
Chapter 141: Release of Claims	141
Chapter 142: Arbitration	142
Chapter 143: Jurisdiction	143
Chapter 144: Governing Law	144
Chapter 145: Dispute Resolution	145
Chapter 146: Finality of Award	146
Chapter 147: Costs	147
Chapter 148: Interest	148
Chapter 149: Attorneys' Fees	149
Chapter 150: Waiver of Jury Trial	150
Chapter 151: Counterclaims	151
Chapter 152: Setoff	152
Chapter 153: Release	153
Chapter 154: Indemnification	154
Chapter 155: Contribution	155
Chapter 156: Subrogation	156
Chapter 157: Assignment of Rights	157
Chapter 158: Subcontracting	158
Chapter 159: Release of Claims	159
Chapter 160: Arbitration	160
Chapter 161: Jurisdiction	161
Chapter 162: Governing Law	162
Chapter 163: Dispute Resolution	163
Chapter 164: Finality of Award	164
Chapter 165: Costs	165
Chapter 166: Interest	166
Chapter 167: Attorneys' Fees	167
Chapter 168: Waiver of Jury Trial	168
Chapter 169: Counterclaims	169
Chapter 170: Setoff	170
Chapter 171: Release	171
Chapter 172: Indemnification	172
Chapter 173: Contribution	173
Chapter 174: Subrogation	174
Chapter 175: Assignment of Rights	175
Chapter 176: Subcontracting	176
Chapter 177: Release of Claims	177
Chapter 178: Arbitration	178
Chapter 179: Jurisdiction	179
Chapter 180: Governing Law	180
Chapter 181: Dispute Resolution	181
Chapter 182: Finality of Award	182
Chapter 183: Costs	183
Chapter 184: Interest	184
Chapter 185: Attorneys' Fees	185
Chapter 186: Waiver of Jury Trial	186
Chapter 187: Counterclaims	187
Chapter 188: Setoff	188
Chapter 189: Release	189
Chapter 190: Indemnification	190
Chapter 191: Contribution	191
Chapter 192: Subrogation	192
Chapter 193: Assignment of Rights	193
Chapter 194: Subcontracting	194
Chapter 195: Release of Claims	195
Chapter 196: Arbitration	196
Chapter 197: Jurisdiction	197
Chapter 198: Governing Law	198
Chapter 199: Dispute Resolution	199
Chapter 200: Finality of Award	200
Chapter 201: Costs	201
Chapter 202: Interest	202
Chapter 203: Attorneys' Fees	203
Chapter 204: Waiver of Jury Trial	204
Chapter 205: Counterclaims	205
Chapter 206: Setoff	206
Chapter 207: Release	207
Chapter 208: Indemnification	208
Chapter 209: Contribution	209
Chapter 210: Subrogation	210
Chapter 211: Assignment of Rights	211
Chapter 212: Subcontracting	212
Chapter 213: Release of Claims	213
Chapter 214: Arbitration	214
Chapter 215: Jurisdiction	215
Chapter 216: Governing Law	216
Chapter 217: Dispute Resolution	217
Chapter 218: Finality of Award	218
Chapter 219: Costs	219
Chapter 220: Interest	220
Chapter 221: Attorneys' Fees	221
Chapter 222: Waiver of Jury Trial	222
Chapter 223: Counterclaims	223
Chapter 224: Setoff	224
Chapter 225: Release	225
Chapter 226: Indemnification	226
Chapter 227: Contribution	227
Chapter 228: Subrogation	228
Chapter 229: Assignment of Rights	229
Chapter 230: Subcontracting	230
Chapter 231: Release of Claims	231
Chapter 232: Arbitration	232
Chapter 233: Jurisdiction	233
Chapter 234: Governing Law	234
Chapter 235: Dispute Resolution	235
Chapter 236: Finality of Award	236
Chapter 237: Costs	237
Chapter 238: Interest	238
Chapter 239: Attorneys' Fees	239
Chapter 240: Waiver of Jury Trial	240
Chapter 241: Counterclaims	241
Chapter 242: Setoff	242
Chapter 243: Release	243
Chapter 244: Indemnification	244
Chapter 245: Contribution	245
Chapter 246: Subrogation	246
Chapter 247: Assignment of Rights	247
Chapter 248: Subcontracting	248
Chapter 249: Release of Claims	249
Chapter 250: Arbitration	250
Chapter 251: Jurisdiction	251
Chapter 252: Governing Law	252
Chapter 253: Dispute Resolution	253
Chapter 254: Finality of Award	254
Chapter 255: Costs	255
Chapter 256: Interest	256
Chapter 257: Attorneys' Fees	257
Chapter 258: Waiver of Jury Trial	258
Chapter 259: Counterclaims	259
Chapter 260: Setoff	260
Chapter 261: Release	261
Chapter 262: Indemnification	262
Chapter 263: Contribution	263
Chapter 264: Subrogation	264
Chapter 265: Assignment of Rights	265
Chapter 266: Subcontracting	266
Chapter 267: Release of Claims	267
Chapter 268: Arbitration	268
Chapter 269: Jurisdiction	269
Chapter 270: Governing Law	270
Chapter 271: Dispute Resolution	271
Chapter 272: Finality of Award	272
Chapter 273: Costs	273
Chapter 274: Interest	274
Chapter 275: Attorneys' Fees	275
Chapter 276: Waiver of Jury Trial	276
Chapter 277: Counterclaims	277
Chapter 278: Setoff	278
Chapter 279: Release	279
Chapter 280: Indemnification	280
Chapter 281: Contribution	281
Chapter 282: Subrogation	282
Chapter 283: Assignment of Rights	283
Chapter 284: Subcontracting	284
Chapter 285: Release of Claims	285
Chapter 286: Arbitration	286
Chapter 287: Jurisdiction	287
Chapter 288: Governing Law	288
Chapter 289: Dispute Resolution	289
Chapter 290: Finality of Award	290
Chapter 291: Costs	291
Chapter 292: Interest	292
Chapter 293: Attorneys' Fees	293
Chapter 294: Waiver of Jury Trial	294
Chapter 295: Counterclaims	295
Chapter 296: Setoff	296
Chapter 297: Release	297
Chapter 298: Indemnification	298
Chapter 299: Contribution	299
Chapter 300: Subrogation	300
Chapter 301: Assignment of Rights	301
Chapter 302: Subcontracting	302
Chapter 303: Release of Claims	303
Chapter 304: Arbitration	304
Chapter 305: Jurisdiction	305
Chapter 306: Governing Law	306
Chapter 307: Dispute Resolution	307
Chapter 308: Finality of Award	308
Chapter 309: Costs	309
Chapter 310: Interest	310
Chapter 311: Attorneys' Fees	311
Chapter 312: Waiver of Jury Trial	312
Chapter 313: Counterclaims	313
Chapter 314: Setoff	314
Chapter 315: Release	315
Chapter 316: Indemnification	316
Chapter 317: Contribution	317
Chapter 318: Subrogation	318
Chapter 319: Assignment of Rights	319
Chapter 320: Subcontracting	320
Chapter 321: Release of Claims	321
Chapter 322: Arbitration	322
Chapter 323: Jurisdiction	323
Chapter 324: Governing Law	324
Chapter 325: Dispute Resolution	325
Chapter 326: Finality of Award	326
Chapter 327: Costs	327
Chapter 328: Interest	328
Chapter 329: Attorneys' Fees	329
Chapter 330: Waiver of Jury Trial	330
Chapter 331: Counterclaims	331
Chapter 332: Setoff	332
Chapter 333: Release	333
Chapter 334: Indemnification	334
Chapter 335: Contribution	335
Chapter 336: Subrogation	336
Chapter 337: Assignment of Rights	337
Chapter 338: Subcontracting	338
Chapter 339: Release of Claims	339
Chapter 340: Arbitration	340
Chapter 341: Jurisdiction	341
Chapter 342: Governing Law	342
Chapter 343: Dispute Resolution	343
Chapter 344: Finality of Award	344
Chapter 345: Costs	345
Chapter 346: Interest	346
Chapter 347: Attorneys' Fees	347
Chapter 348: Waiver of Jury Trial	348
Chapter 349: Counterclaims	349
Chapter 350: Setoff	350
Chapter 351: Release	351
Chapter 352: Indemnification	352
Chapter 353: Contribution	353
Chapter 354: Subrogation	354
Chapter 355: Assignment of Rights	355
Chapter 356: Subcontracting	356
Chapter 357: Release of Claims	357
Chapter 358: Arbitration	358
Chapter 359: Jurisdiction	359
Chapter 360: Governing Law	360
Chapter 361: Dispute Resolution	361
Chapter 362: Finality of Award	362
Chapter 363: Costs	363
Chapter 364: Interest	364
Chapter 365: Attorneys' Fees	365
Chapter 366: Waiver of Jury Trial	366
Chapter 367: Counterclaims	367
Chapter 368: Setoff	368
Chapter 369: Release	369
Chapter 370: Indemnification	370
Chapter 371: Contribution	371
Chapter 372: Subrogation	372
Chapter 373: Assignment of Rights	373
Chapter 374: Subcontracting	374
Chapter 375: Release of Claims	375
Chapter 376: Arbitration	376
Chapter 377: Jurisdiction	377
Chapter 378: Governing Law	378
Chapter 379: Dispute Resolution	379
Chapter 380: Finality of Award	380
Chapter 381: Costs	381
Chapter 382: Interest	382
Chapter 383: Attorneys' Fees	383
Chapter 384: Waiver of Jury Trial	384
Chapter 385: Counterclaims	385
Chapter 386: Setoff	386
Chapter 387: Release	387
Chapter 388: Indemnification	388
Chapter 389: Contribution	389
Chapter 390: Subrogation	390
Chapter 391: Assignment of Rights	391
Chapter 392: Subcontracting	392
Chapter 393: Release of Claims	393
Chapter 394: Arbitration	394
Chapter 395: Jurisdiction	395
Chapter 396: Governing Law	396
Chapter 397: Dispute Resolution	397
Chapter 398: Finality of Award	398
Chapter 399: Costs	399
Chapter 400: Interest	400
Chapter 401: Attorneys' Fees	401
Chapter 402: Waiver of Jury Trial	402
Chapter 403: Counterclaims	403
Chapter 404: Setoff	404
Chapter 405: Release	405
Chapter 406: Indemnification	406
Chapter 407: Contribution	407
Chapter 408: Subrogation	408
Chapter 409: Assignment of Rights	409
Chapter 410: Subcontracting	410
Chapter 411: Release of Claims	411
Chapter 412: Arbitration	412
Chapter 413: Jurisdiction	413
Chapter 414: Governing Law	414
Chapter 415: Dispute Resolution	415
Chapter 416: Finality of Award	416
Chapter 417: Costs	417
Chapter 418: Interest	418
Chapter 419: Attorneys' Fees	419
Chapter 420: Waiver of Jury Trial	420
Chapter 421: Counterclaims	421
Chapter 422: Setoff	422
Chapter 423: Release	423
Chapter 424: Indemnification	424
Chapter 425: Contribution	425
Chapter 426: Subrogation	426
Chapter 427: Assignment of Rights	427
Chapter 428: Subcontracting	428
Chapter 429: Release of Claims	429
Chapter 430: Arbitration	430
Chapter 431: Jurisdiction	431
Chapter 432: Governing Law	432
Chapter 433: Dispute Resolution	433
Chapter 434: Finality of Award	434
Chapter 435: Costs	435
Chapter 436: Interest	436
Chapter 437: Attorneys' Fees	437
Chapter 438: Waiver of Jury Trial	438
Chapter 439: Counterclaims	439
Chapter 440: Setoff	440
Chapter 441: Release	441
Chapter 442: Indemnification	442
Chapter 443: Contribution	443
Chapter 444: Subrogation	444
Chapter 445: Assignment of Rights	445
Chapter 446: Subcontracting	446
Chapter 447: Release of Claims	447
Chapter 448: Arbitration	448
Chapter 449: Jurisdiction	449
Chapter 450: Governing Law	450
Chapter 451: Dispute Resolution	451
Chapter 452: Finality of Award	452
Chapter 453: Costs	453
Chapter 454: Interest	454
Chapter 455: Attorneys' Fees	455
Chapter 456: Waiver of Jury Trial	456
Chapter 457: Counterclaims	457
Chapter 458: Setoff	458
Chapter 459: Release	459
Chapter 460: Indemnification	460
Chapter 461: Contribution	461
Chapter 462: Subrogation	462
Chapter 463: Assignment of Rights	463
Chapter 464: Subcontracting	464
Chapter 465: Release of Claims	465
Chapter 466: Arbitration	466
Chapter 467: Jurisdiction	467
Chapter 468: Governing Law	468
Chapter 469: Dispute Resolution	469
Chapter 470: Finality of Award	470
Chapter 471: Costs	471
Chapter 472: Interest	472
Chapter 473: Attorneys' Fees	473
Chapter 474: Waiver of Jury Trial	474
Chapter 475: Counterclaims	475
Chapter 476: Setoff	476
Chapter 477: Release	477
Chapter 478: Indemnification	478
Chapter 479: Contribution	479
Chapter 480: Subrogation	480
Chapter 481: Assignment of Rights	481
Chapter 482: Subcontracting	482
Chapter 483: Release of Claims	483
Chapter 484: Arbitration	484
Chapter 485: Jurisdiction	485
Chapter 486: Governing Law	486
Chapter 487: Dispute Resolution	487
Chapter 488: Finality of Award	488
Chapter 489: Costs	489
Chapter 490: Interest	490
Chapter 491: Attorneys' Fees	491
Chapter	

Contents

Chapter 1. Product Features	4
Chapter 2. Terms Explanation	5
1. User Authorization Level:	5
2. Arming/ Automatic alarm	6
3. Disarming	6
4. Incoming video call and Talkback	6
5. Setting	6
6. Reset	6
Chapter 3. Remote controller and remote handle illustration	7
Chapter 4. Indicator light working Status Instruction	8
Chapter 5. Installation	8
Chapter 6. Quick Start	9
1. Power on/ off	9
2. Start Remote camera	9
3. Binding wireless remote controller	9
4. Binding wireless remote handle	9
5. Arming	10
6. Disarming	10
7. Incoming video call	10
8. Press the emergency key to trigger an alarm:	10
Chapter 7. Advanced Operation	10
1. Activate remote camera	10
2. Modify the password	11
3. Modify the telephone number of master	11
4. Add/delete the telephone number of normal users	11
5. The operation illustration of wireless remote controller	12
6. Binding wireless remote handle	14
7. Built-In PIR Sensor ON/ Off (Default: OFF)	14

8. Wireless sensor	14
9. Infrared light.....	15
Turn on infrared light:	15
10. Take photos	16
11. Video recording	16
12. Automatic alarm	16
13.ON/OFF Live voice amplifier、 volume adjustment、 digital zoom	17
14. Getting help	17
15. Reset the camera	17
Chapter 8. Maintenance.....	18
Chapter 9. Common malfunction solutions	18
Chapter 10. Main Technical Parameters	19
Chapter 11. Appendix: SMS command list	20

Thank you for purchasing the 3G Remote Camera. The user manual illustrates how to operate this product so please read the user manual carefully before using it.

With this high-tech wireless equipment, you can monitor anywhere at anytime by dialing video calls with 3G mobile phone. The 3G remote camera can be widely used in house、 school、 shop、 moving cars、 trains or take care of elders and children as long as WCDMA network is available.

Modern design 3G Remote camera matches excellent 2.0 mega pixels camera, you can send SMS command to make images and videos store in the camera. With built-in several pcs high-light infrared lights, the camera can shoot clear film even in darkness.

The Remote camera is compatible with normal 315 MHz or 433 MHz wireless sensor in the market, such as wireless infrared motion detector, door sensor, smoke detector etc, and all of them are wireless, easy to use. You can also select any kind of sensor mentioned to work with our product. You or your family or your guards can receive the alarm message with your preset ways such as SMS,voice call, video call which are stored as evidence when the wireless sensor was triggered.

All services and functions needs to be supported by the network and USIM card. Detailed operation and product functions, please refer to this brochure.

For Your Safety

- The product complies with the relevant Chinese standard about electromagnetic compatibility. However, please keep away from electronic equipment which is likely to interfere by the wireless signal, to avoid the signal interruption.
- Switch off this product in any area marked "Explosive", "might explode", "closed wireless transceiver devices" etc.
- Do not dispose the product in a fire; otherwise, it may cause the battery explosion.
- Only use the power adaptor approved by the product manufacturer. The use of any other types may damage the product
- Keep the product and the accessories out of the reach of children.

Declaration

- We operate a policy of continuous development. We reserve the right to make changes and improvements to any of the products described in this document without prior notice.
- For latest product information, We don't guarantee for the document veracity, reliability or any content except regulate in proper laws. Including no guarantee for product suitable market or suitable area promise.
- Under no circumstances should be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.
- Product supply may vary with the area, please check with our nearest authorized agency.
- Use only this product legally. do not monitor other one's private places. we don't take any charge for the illegal use of this product.

Chapter 1. Product Features

- ◇ This product uses USIM card, supporting WCDMA 3G network..
- ◇ Built-in CMOS camera and infrared light, it supports real-time wireless video monitoring in 24 hours.
- ◇ You can send SMS to control camera remotely and check anywhere secretly and safely.
- ◇ Multimode alarm: Camera can send alarm messages by SMS, video call, voice call.
- ◇ Sensor detection: Max 15 wireless alarm sensors can be added.
- ◇ Support to record the alarming image to the camera
- ◇ Up to 10 telephone numbers can be pre-stored in the system.
- ◇ Matching wireless remote controller: Arming, disarming or emergency alarm.
- ◇ Special Camera: 2.0 mega pixels CMOS camera.
- ◇ Complete wireless connection., easy installation: the product can be installed at any place you wanted.
- ◇ Built-in replaceable Lithium battery: rechargeable battery ensuring operation in case of external power failure.

- ◇ Real-time video: you can call the video phone to check the image of monitoring area anytime and anywhere.
- ◇ Application: taking care of the elders and children, in house, school, monitoring shop, bus, ship, and train etc.

Chapter 2. Terms Explanation

Any mobile phone compatible with WCDMA can see the monitoring area by dialing video call.

Any mobile phone with SMS function can control the remote camera with SMS command.

Make sure to remember the product's password and USIM number. Don't disclose to others to ensure your privacy safety.

1. User Authorization Level:

There are two levels remote camera user with different authority:

Administrator (Master): Only one, master needs to store his/ her mobile number into the camera first. Otherwise, all the functions of the remote camera are disabled; Only one master mobile number can be set in the remote camera. The camera will send the alarm to master's mobile number and normal user numbers set by the master; Master should clearly remember the password and USIM number; Only master has the authority to change the camera password and the user numbers, and enjoy all the service the product provided.

Normal user(family): Max 10, normal users' members have the right to access to video call, add the sensor and remote controller, and allow to send SMS to set this product; normal user's numbers are set by the master.

Difference authority between Master and normal users:

Function \ User Type		Administer	Normal users
Change normal user list		√	×
Automatic Alarm	Receive SMS	√	×
	Receive voice alarm calling	√	√
	Receive video alarm calling	√	√
Dial the phone number	Monitor by dialing voice call	√	√
	Monitor by dialing video call	√	√

Set sending SMS command	✓	✓
Add、modify、 delete sensor	✓	✓
Bind wireless remote handle	✓	✓
Change password	✓	×
System Recovery	✓	×

2.Arming/ Automatic alarm

Arming is to make the remote camera in working status. In this status, all connected wireless sensor are in working.

Under the arming, if any wireless sensor is activated, camera will send SMS or Video call or voice call to master to inform alarm immediately. If the master doesn't answer the call, it will dial the next preset numbers until answered. This process will repeat three times, then exit dialing mode automatically if none of the preset numbers answered.

3.Disarming

Disarming is to deactivate the remote camera. All connected wireless sensors are in non-working status,the camera will not alarm automatically unless pressing the emergency key.

4.Incoming video call and Talkback

Real-time video can be turned on when master or normal users call the camera,at this time,press "3" key of phone button, turn on the Live voice amplifier,can shout on site.turn off the amplifier,please press "4" key of phone button.


5.Setting

All the set to this product can be completed by sending SMS command.

6.Reset

Press and hold the SET key,and push the ON/OFF key to ON position, 5 seconds later ,the blue light and green light will turn on at the same time,the camera will automatic reset after you heard two "tick.."sound from the buzzer.

Chapter 3. Remote controller and remote handle illustration

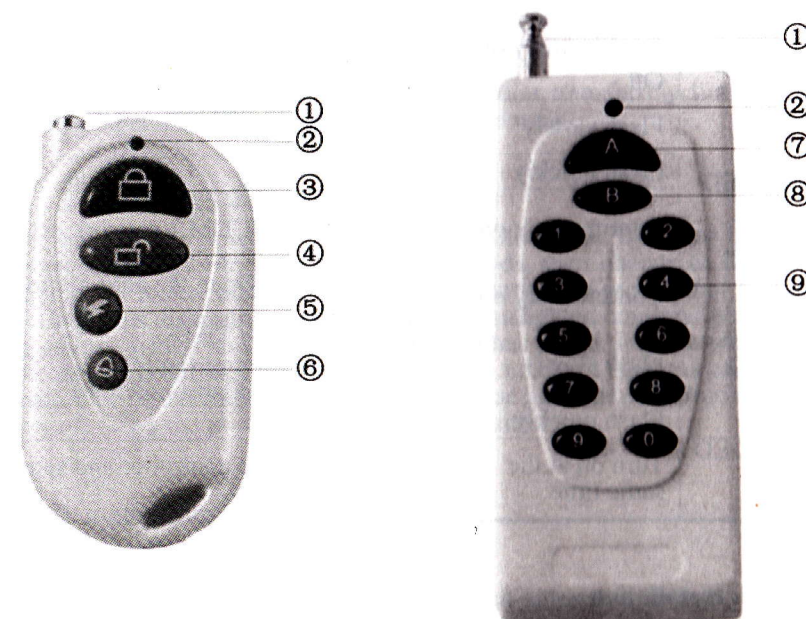

Remote controller and Remote handle Instructions

- | | |
|-------------------|-----------------------------------|
| 1. Antenna | 2. Indicator light |
| 3. Arming key | 4. Disarming Key |
| 5. Emergency key | 6. Built-in PIR sensor ON/OFF key |
| 7. Dial key | 8. End key |
| 9. Digit keyboard | |

Chapter 4. Indicator light working Status Instruction

Color	Action	Status
Red LED	Continuously on	Charging the battery.
	Off	The battery charged full already.
Blue LED	Flash slowly	Searching the network when turn on the camera.
	Flash quickly	Sensor alarming.
	Continuously on	Not installed SIM card, or not searched the WCDMA network, or the remote camera damaged.
Green LED	Continuously on	Arming status(Open the auto-alarm function).
	Flash slowly	Searched the WCDMA network/Disarming status. (Close the auto-alarm function)
	Flash quickly	Processing data.
Blue LED Green LED	Turn on at the same time	Learning remote controller and sensor status

Chapter 5. Installation

1. Install the USIM card

● Insert the USIM card into the slot according to the sign direction which showed on the camera.

2. The use methods of bracket

● Provide universal bracket installation nut, can fix and install with any matched bracket.

● Connect the original adapter to an AC power socket (100-240V), and connect the mini-USB plug to the power interface of the camera.

● This product is built-in rechargeable Lithium battery. the camera will notify you when the power supply changed. for example, if the power adapter is disconnected or the AC power is cut off, it will show "AC power shut off". If the power adapter is connected again, it will show "AC power recovered".

3. Choose the Installing position

● For better image quality, avoid the bright light(for example: window ,door etc.) irradiated directly into the lens of the camera.

● It is suggested to located the camera at the place where can look down the monitoring place with the minimum angel 30°. To prevent to be stolen, it is suggested that the camera is located at the place above the ground more than 2.2 meters.

● If 3G network is weak, the system will change to GSM network and video call prohibited; Therefore, the camera should be located at the place where strong network signal available.

● When installation, try to dial video call with 3G cell phone to check the video image, Re-locate the remote camera and adjust the camera's angle to get best image.

Chapter 6. Quick Start

Tips: Assure that USIM doesn't activate the caller transferring function and in coming call display, close the PIN code as well.

1. Power on/ off

● Power on: turn the power switch to "On" position, The indicator light will be on continuously with blue color for 3-10 seconds, then change to flash slowly. After about 10-30 seconds, the indicator light changes to green color and flashes slowly (indicates disarming status) or green color lighted continuously (indicates arming status), which indicates that the camera has found the network and begun to work. At this moment, a sound of "tick" can be heard from the camera. More information of the status please refers to indicator light status instruction.

● Power off: Turn the power switch to "Off" position.

2. Start Remote camera

Dial a voice call to the camera by your mobile, it automatic default your mobile number as authorized Number after getting through.

After successful start, your mobile phone will get a reply SMS: "welcome to use 3G remote camera, the password is 1234!"

At this moment, your mobile phone has been set as authorized Master number.

Note: Make sure that no authorized number set before performing above operation, if the camera has set before, please delete the old authorized number or reset (hardware reset/SMS reset) the camera, then set new authorized number.

3. Binding wireless remote controller

After successful start, press set key 3 seconds enter into learning status, the indicator blue and green light to be turned on at the same time; press any key of the new remote controller, the indicator light will flash once, when the camera receive remote controller signal, it will be sound "tick" once and exit, if without learning remote controller, the camera will automatic exit after 30 seconds.

4. Binding wireless remote handle

Send the following message to the camera by master's mobile:
#addkey#

When the blue and green light to be turned on at the same time. please press any key of the wireless remote handle, the wireless remote handle indicator light will be flash once,when the camera received the remote handle signal,you will hear a "tick" sound, and green light flash slowly which indicate learning success, after that you will get the following SMS:

"Add keyboard successfully".

5. Arming

Press "Arming key" directly on the remote control.

If successful set, a "tick" sound can be heard from the camera and the indicator light of the camera will turn on continuously with green color

6.Disarming

Press "Disarming key" directly on the remote control.

If successful set, a "tick" sound can be heard from the camera and the indicator light of the camera will flash in green color.

7. Incoming video call

Master and normal users who dial the camera with 3G mobile phone can watch the monitoring area after two ringing sound.
Unauthorized access can not get through when dialing.

8. Press the emergency key to trigger an alarm:

Press the emergency key on the remote controller,the blue light flash quickly,green light is off,the camera will firstly send SMS to master to inform SOS alarm and then dial the phones of master or users members one by one. However, if the 3G network not available, the camera will dial the voice call until getting through.

Chapter 7. Advanced Operation

1.Activate remote camera

(Authority: Master)

When first time using or after resetting the remote camera, it needs to set the master number to activate the camera so that it can automatic send alarm message to the master.

Master should dial a voice call to the camera,the camera will default master mobile No as a authorized No.

After success activating the camera, it will reply you: "Welcome to use remote camera, the password is 1234".at this time,you mobile No already set as authorized No.

If the camera has been activated before, the old master number will be saved in it ,when you dial again,the camera will not get through,or you can send following SMS command to the camera:

#master#

After success activating the camera, it will reply you: "Welcome to use remote camera, the password is 1234"

Note: If the camera has been activated before, the old master number will be saved in it, If you try to activate it again, it will reply SMS "Master already exist".

2. Modify the password

(Authority: Master)

Modify the password of the camera after power on to ensure operation safety.

Only master can change the password. master can send following SMS command to camera to change the password:

#password# old password # new password #

The password is a 4-digit number. The default password is 1234. After succeed to change the password, the camera will send SMS to you: "The password has been successfully changed. The new password is *****". If others send above SMS command to camera, it will reply "Sorry, you are prohibited to request this command".

3. Modify the telephone number of master

(Authority: Master)

Only the master can modify the telephone number of master. master can send following SMS command to camera to change the master

"#newmaster#new master telephone number #"

After successful set, the old master will receive the SMS "The Master number have been successfully changed",Old master number didn't have the authority to control the camera any more.

4. Add/delete the telephone number of normal users

Only the master can add or delete the telephone number of normal users. Or others will receive the message "Sorry,you are prohibited to request this command."

4.1. Add the telephone number of normal users

(Authority: Master)

To be a normal user's member, the master can send following SMS to the camera,and store the normal user's cell phone number into the camera. Maximum 10 user's numbers can be stored.

Add the telephone number of normal users, the format as following:

#adduser# normal users members telephone number#

After successfully set, the camera will reply: "The user number ***** has been successfully added".

"If you add more than 10 telephone numbers, the camera will send the following SMS to your mobile "The family number full!". Please delete numbers before you add new ones." If you set the same telephone number the second time, the camera will send the following SMS to your mobile "The family number already exist".

4.2. Delete the telephone number of normal users:

(Authority: Master)

The master send a SMS to the camera and delete certain telephone number of users' members

Delete single user's mobile number, the format is as followed:

deluser#normal users members telephone number

Delete all the normal users members' telephone numbers, the format is as followed:

deluser

After successful deletion of phone number, the camera will send the following SMS "The family number ***** deleted successfully", or reply "Fail to delete family number *****";

If the format of users members is incorrect in SMS, the camera will send the SMS "The user number ***** is invalid, please check and try again".

5. The operation illustration of wireless remote controller

Total 4 keys on the wireless remote controller: Arming key、Disarming key、Emergency key,Built-in PIR sensor ON/OFF key

When press the Arming key, the camera indicator will turn on green and keep green always, and the camera enter into the arming status, If the wireless detector or PIR sensor is activated by intrusion the camera will alarm and dial out video call or voice call.

When press the Emergency key, the camera indicator light will turn green color and flash quickly. The camera will dial the master number and the emergency numbers orderly. Live voice can be heard by answering the calling. It will call master and all user numbers three times till answered, then exit dialing automatically.

When press the Disarming key, the camera indicator light will turn green and flash slowly. The camera enter into the disarming status, In this state, the camera can alarm only by pressing the Emergency key.

When press Built-in PIR sensor ON/OFF key once, the blue light flash quickly several times then turn off, two "tick" sound can be heard from the buzzer at this time. It indicates that the built-in PIR sensor of the camera turned on, when need turn off the built-in PIR Sensor, press again the Built-in PIR sensor ON/OFF key, the blue light flash several times then turn off, a "tick" sound can be heard from the buzzer, it indicates that the built-in PIR sensor of the camera turned off. A "tick" sound can be heard from the camera by pressing any remote control key.

5.1 Add wireless remote controller

If it is necessary to add more wireless Remote Controller, please do it as following:

Keep Press the "SET" key for 3 seconds to be learning status, the indicator light will turn blue and green synchronously, then press any key of new remote controller,

the remote controller indicator light will be flash once, the Master board received the remote controller signal, a "tick" sound will be heard when exit.

If without learning remote controller, the host will automatic exit learning status 30 seconds later.

Tips: the Max 5 pcs wireless remote controller can be connected with the camera.

5.2 Delete remote controller

(Authority: Master, Normal users)

Master or normal users can send following SMS to camera:

#delre#

If success, the camera will reply "All remote control deleted successfully". If unauthorized mobile phone send above SMS command to camera, it will automatic reply "Sorry, you do not have the right to operate".

5.3 Arming

(Authority: Master, normal users)

If the camera indicator light turn green and flashes, it indicates that it is in disarming status (no alarming status). To recover the defense/arming state, you can do following operation:

Method 1: Master or Normal User send following SMS to camera

#arm#

If success, the camera will reply you SMS: "Arming successfully"

Method 2: Press the "Arming key" on the remote controller directly and you can hear a "tick" sound indicating successful operation, and the indicator light on the camera turn green and keep on continuously.

5.4 Disarming

(Authority: Master, Normal users)

In disarming status, camera won't be alarm (Unless press the emergency key on the remote controller).

Cancel alarm status of all wireless sensor function:

Method 1: Master and normal users send following SMS command to camera:

#disarm#

The camera will reply you SMS "Disarming successfully", and the indicator light on the camera will turn green and flashes.

Method 2: press the "Disarming key" on the remote controller directly. You can hear a "tick" sound if operation successfully, Then the indicator light will turn green and flashes.

6. Binding wireless remote handle

Send the following message to the camera by you mobile:

#addkey#

When the blue light and green light of the host to be turned on at the same time. Please press any key of the wireless handle, the wireless remote handle indicator light will be flash once, when the camera received the remote handle signal, a "tick" sound can be heard, and green light flash slowly which indicate received success, then you mobile will receive the following SMS:

"Add keyboard successfully".

How to use the Wireless remote Handle

The Master can dial the camera Video call with the wireless handle after add keyboard successfully.

First press the "Dial key", then input your phone number and press the "Dial key" again, (Format: Dial key+ Phone Number+ Dial key) the camera will dial out video call. If want to end this call, please press the "End key" on the wireless remote controller.

7. Built-In PIR Sensor ON/ Off (Default: OFF)

(Authority: Master, Normal Users)

Only built-in PIR sensor to open and the camera on the Arming status, all the moving objects in the detected distance of the PIR sensor will trigger the camera alarm. PIR alarm SMS: "Inside PIR Alarm!!!"

PIR Sensor ON:

Master or Normal User send following SMS to the camera:

#pir#1#

After set successfully, the camera will reply SMS "Inside PIR open";

PIR Sensor Off (Default "Off")

Master or Normal User send following SMS to the camera:

#pir#0#

After set successfully, the camera will reply SMS "Inside PIR close".

8. Wireless sensor

(Authority: Master, Normal Users)

Any 315MHz or 433MHz wireless sensor, such as infrared motion detector wireless door magnet, wireless smoke sensor etc, can be set as alarm sensor of the camera.

Add wireless sensor:

Power on the wireless sensor.

Master or Normal users send following SMS command to camera make it enter into the learning wireless sensor status. To add new wireless sensors:

#add sensor#sensor name#

Defense zone code is 2 digits number, from 01 to 15 for option.

Preset 14 defense zone and 15 defense zone as 24 hours defense zone: They can automatic alarm even in the disarming status.

For example: add PIR sensor to the 4 defense area, then send: #addsensor#04#

After receiving the SMS command, a "tick" sound will be heard from the camera, the blue light and green light to be turned on at the same time, then enter into learning status, and reply SMS "Waiting to load sensor, make the sensor work immediately", the wireless sensor work one time. For example: wireless door magnet, make it open and close once to send the signal to the camera. If the sensor added successfully, the camera will sound "tick" then exit the learning status, and reply "Loading sensor:***** successfully".

If the sensor learning is not successful or no sensor learning, the indicator of blue light and green light will turn on at the same time for about one minute, then the camera will exit learning status automatically and back to the previous arming or disarming status.

Max 15 pcs wireless sensors can be added to the remote camera. If reaching its max number, the camera will send SMS: "The sensors are full". Please delete old sensors before add new one.

Delete all wireless sensors:

Master or users send following SMS to camera:

#delsensor#

After successful deletion, it will reply "All sensor delete successfully"

Unauthorized mobile number is forbidden to do this operation. If send above SMS command to camera, it will reply "Sorry, you are prohibited to request this command."

9. Infrared light

(Authority: Master, Normal users)

Infrared light enable the camera to have a real time video clearly in dark night. Camera can control the infrared light automatically. However, if AC power failure and user wants to close the infrared light to save the battery power, master or normal users members can send SMS command to control the infrared light.

Turn off infrared light:

Master or normal user can Send the following SMS to camera: #ir#0#

After successful set, it will reply "Infrared light closed".

Once turn off the infrared light, it can't take clear video in dark night. User needs to send SMS to start the infrared light.

Turn on infrared light: (default setting)

Master or normal user can Send the following SMS to camera: #ir#1#

After successful set, it will reply "Infrared light activated".

10. Take photos

(Authority: Master, Normal users)

After receiving SMS command of taking photos, the camera begins to capture images. The image quantity is decided by the SMS command, max 9 photos. Send the following SMS to camera: #shot#image quantity#

System begins to take photos according to the quantity in the SMS and store them in the camera

After set successfully, camera will reply "Take picture successful"

11. Video recording

(Authority: Master, Normal users)

Start Video Recording:

After receiving SMS command of recording video, the camera begins to record video.

Send the following SMS to camera: #record#1#

After succeed setting, camera will reply "setup video record successful, start recording"

Stop Video Recording:

Send the following SMS to camera: #record#0#

After succeed setting, camera will reply "video record finish!"

Record video when taking a video call:

When wireless sensor or infrared motion detector triggered, the camera system will start to dial video call orderly and record it into TF card when the video call answered. Users also can take out the TF card, and read the video document from computer by connecting with the card reader.

12. Automatic alarm

Master or normal user can send following SMS command to set the automatic alarm method

(Authority: Master, Normal users)

12.1 Open buzz alarm:

If it necessary to get the Alarm Live Voice, Master and normal users send following SMS:

#beep#1#

After successful set, the camera will sound "tick..tick" when automatic alarm.

12.2 Close buzz alarm (Default):

If it isn't necessary to get the Live alarm voice, Master and normal users send SMS:

#beep#0#

12.3 Not send SMS when automatic alarm:

#sms#0#

After successful set, camera will reply "Set alarm without SMS successfully."

12.4 Send SMS when automatic alarm (Default):

#sms#1#

After successful set, camera will reply "Set alarm with SMS successfully."

12.5 Call voice phone when automatic alarm:

#call#0#

After successful set, camera will reply "Set alarm with voice calling successfully."

12.6 Call video phone when automatic alarm: (default)

#call#1#

After successful set, camera will reply "Set alarm with video calling successfully." If you set alarm with video cell phone dialing but no 3G network available, the camera will automatically convert to Voice call

13. ON/OFF Live voice amplifier, volume adjustment, digital zoom

(Authority: Master, normal users)

Master and normal users can activate the real-time video by dialing voice phone with 3G cell phone; meanwhile, it can also set image focus and volume.

The operation definition of the correspondent key in video call as following

"1" volume up

"2" volume down

"3" Amplifier On

"4" Amplifier Off

"5" Zoom In

"6" Zoom Out

14. Getting help

Get normal command help:

(Authority: Master, Normal users, guest)

Master or Normal User send following SMS command to camera:

#help#

Once success, the camera will reply users all the operating command.

15. Reset the camera

(Authority: Master)

If the remote camera setting is wrong, or fail to work even after restarting the camera, The following methods will enable the remote camera recover to original settings (clear of all users' setting, including master's number), and back to regular working status:

Using the master's phone to send the following SMS to camera:

#begin#password#

After the successful factory default setting,:

"restoring factory setting successfully"

Tips :

This SMS command must add password#, or the camera will reply the SMS "order wrong", Only the Master have the right to make the camera recover to original setting; The others who send this command will receive the SMS "Sorry, you are prohibited to request this command."

Chapter 8. Maintenance

1. Store and use the remote camera in suitable temperature. Too high or too low temperature may damage the device.
2. Try to keep the Host and all its accessories dry. Do not store and use it in the bathroom, or other place with high humidity. Do not allow water or other liquids into the camera, otherwise, it might cause malfunctions.
3. Do not store and use the camera in dusty environment.
4. Do not use alcohol, acetone and other similar solvents to clean it. Wipe it with soft-wet cloth.
5. Do not attempt to open it randomly. If the camera does not work normally, try to resolve it as the guide of the "general troubleshooting", or the problem can not be solved, contact the dealer immediately.
6. Charge the battery at least 12 hours at the first time after power off to achieve the full performance of the battery. To increase the life-span of the battery, connecting the camera Host to the power supply to automatically charge the built-in Lithium battery for 4 hours every 3 months, if the camera does not use for long time.

Chapter 9. Common malfunction solutions

No	Trouble description	Possible Reason	Solution
1	Can't start camera (Indicator light works)	Other master already set in the camera.	Recover to original default setting.
2	All functions disable (Indicator light works)	Calling line presentation or MMS functions of the USIM card does not active, insufficient fee of the USIM card.	Contact network provider to active USIM card function. Pay for the card.
3	Indicator light is constantly in Blue color.	Can't find or identify the USIM card;	USIM card not install properly: Power off the camera and check it the USIM card, the Power on after two minutes.
4	Camera didn't response to any operation.	Camera work abnormally.	Switch off the power, check USIM card, or reset to factory setting.
5	After starting the camera, indicator light flashes in Blue color and can not turn to green.	Network signal weak or network busy.	Place the camera at other place with strong signal and try again.
		PIN code of USIM card active.	Close the PIN code.
		invalid USIM card.	Contact with local operator to check of it.

No	Trouble description	Possible Reason	Solution
6	Remote control can't work. Or work slowly. Or operating range shortened.	Camera low power.	Connect external power to recharge the battery.
		Remote controller low battery.	Change remote controller battery.
		Didn't pull out the antenna.	Pull out remote controller antenna.
		Operated many remote controllers at the same time	Operate only one remote controller.
7	Can not add new remote controller or wireless sensor	The remote control or sensor already exists.	Exit the loading status.
		The sensor quantity already reaches its max number.	Delete old sensors before add new sensor.
		Didn't set master number	Set master number before add sensor.
8	Can't start the camera after long time supplied with the battery only.	Battery runs out of power.	Connect the camera to external AC power and charge for at least one hour, then, restart camera or replace same type battery.

If the above operations can not solve the problem you meet, please contact local distributor.

Chapter 10. Main Technical Parameters

Power adaptor:	Input 100V~240V/50Hz	Output: DC 5.5V/2A
Work temperature:	-10℃~+45℃	
Store temperature:	-20℃~+60℃	
Relative Humidity:	10-90%, without condensation	
Working frequency:	HSDPA/UMTS	850/1900/2100 MHz
	EDGE/GPRS/GSM	850/900/1800/1900 MHz
Wireless sensor receiving code:	ASK	
Wireless sensor receiving frequency:	315/433 MHz	
Wireless sensor baud rate:	500-2500bps	
Max wireless sensor:	15units	
Effective distance of the wireless remote control:	100 Meters (wide area)	

video format: MP4
 Camera pixel 2.0 Mega pixels
 Camera Shooting angel: 60 degree (horizontally), 60degree (vertically)
 Best shooting distance in night: ≤6 meter
 Lithium battery: 1000mAh (BP-6M)
 Battery standby time 24 hours (infrared light:off)

Chapter 11. Appendix: SMS command list

User	Function	SMS Command
Master	Activate	#master#
		Refer to Chapter 6. Quick Start 2.Start remote camera.
Master	Modify password	#password#old password#new password#
		Refer to Chapter 7. Advanced operation, 2. Modify the password
	Modify Master number	#newmaster#newmaster number #
		Refer to Chapter 7. Advanced operation, 3. Modify the telephone number of master number.
	Add normal users number	#adduser#normal users number#
		Refer to Chapter 7. Advanced operation, 4.1 Add the telephone number of normal users .
	Delete users number	#deluser# normal users number#
		Refer to Chapter 7. Advanced operation, 4.2.Delete the telephone number of normal users.

Master and normal users	Arming	#arm#
		Refer to Chapter 7. Advanced operation, 5.3 Arming
	Disarming	#disarm#
		Refer to Chapter 7. Advanced operation, 5.4 Disarming
Master and normal users	Binding wireless remote handle	#addkey#
		Refer to Chapter 7. Advanced operation, 6. Binding wireless remote handle
	Add or modify sensor	#addsensor#
		Refer to Chapter 7. Advanced operation, 8. wireless sensor.
	Delete sensor	#delsensor#
		Delete all sensor, refer to Chapter 7. Advanced operation, 8. wireless sensor.
	Delete remote controller	#delre#
		Refer to Chapter 7. Advanced operation, 5.2.Delete wireless remote controller.
Master and normal users	Built-In PIR Sensor ON/OFF	#pir#1# Built-In PIR Sensor ON
		#pir#0# Built-In PIR Sensor OFF
Master and normal users	Turn off infrared light	#ir#0#
		Refer to Chapter 7、advanced operation, 9、infrared light
	Turn on Infrared light (Default)	#ir#1#
		Refer to Chapter 7、advanced operation, 9、infrared light

Master and normal users	Take photos	#shot#i(image quantity)#
		image quantity(1 to 9), Refer to Chapter 7. Advanced operation,10 Take photos
Master and normal users	Video record	#record#1# Video Record Start
		#record#0# Video Record End
Master and normal users	No SMS when alarm	#sms#0#
	Send SMS when alarm (default)	#sms#1#
Master and normal users	Dial voice phone when alarm	#call#0#
	Dial video Call when alarm	#call#1#
	Getting help	#help#
		Refer to Chapter 7、advanced operation, 14、Getting help
Master	Reset the camera	“#begin#password#”
		Refer to Chapter 7、advanced operation, 15、Reset the camera