


# User's Manual

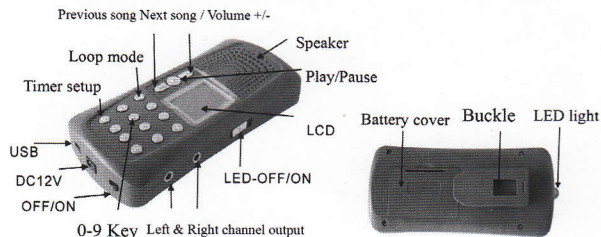

## Functions:

- I. Timer on and off
- II. Digital song selection
- III. LED lighting
- IV. 35W high-power dual-channel output and ultra-high frequency sound built-in speaker
- V. Multifunctional remote

## Key functions:

- I. Loop key : With power on and in play mode, the play mode is automatically in single song loop. To change the play mode, press this key to switch, as shown in figure (1).
- II. Previous song / next song keys: to switch to other songs, short press / .
- III. Volume +/-: To increase the system volume during playing, long press down / to increase or reduce the volume, switch as shown in figures (2)/(3) above.
- IV. Play/pause key : To pause/play during playing, press briefly, switch as shown in figure (4).
- V. Timer key : used for switching between playing and timer setup. When playing, press this key briefly to switch to timer setup mode.
- VI. Digits keys 0 - 9: press a single number or a combination of several numbers can make a selection of the song you want to play.
- VII. LED lighting switch: Turn to OFF, the light will be off, and LED light will be on when the switch is turned to ON.
- VIII. 35W high power output. Connect to 12V power socket, the double earphone holes can be plugged with a 35W speaker.

## Timer setup:

- I. System time setup: Press to enter into the timer setup. Press to enter current

time setup, which will show hours setup, minutes setup and seconds setup. Press briefly to switch to the time you want to change. Then press or to change to the system time you want. After setup, press to save the setup and return to play mode.

- II. Timer on setup: Press to enter into the timer setup. Press to enter system time setup, press again to enter timer on setup, which has hours setup and minutes setup. Press briefly to switch to the one you want to change. Then press or to change to the on time you want. Press after the setup to save the setup and return to play mode.

- III. Timer off setup: Press to enter into the timer setup. Press to enter system time setup, press again to enter timer on setup, then again to enter timer off setup, which has hours setup and minutes setup. Press briefly to switch to the one you want to change. Then press or to change to the off time you want. Press after the setup to save the setup and return to play mode.

- IV. Song selection: Press to enter into the timer setup. Press to enter system time setup, press again to enter timer on setup. Press briefly to switch to the one you want to change. Then press or to change to the song you want. Press after the setup to save the setup and return to play mode.

- V. Song selection by digit: Press any of the digits 0 - 9, e.g. press 2, a second later, the 2<sup>nd</sup> song will be played, press 2 and 3 consecutively to play the 23<sup>rd</sup> song.

- VI. Remote control: Use 3\*3A battery.

Operation: Press key on the remote control for a long time power open, others operation is the same with the device. One minute does not operate, the remote control automatically turns off ( key on the remote control non-function).

LCD display	128*64 LCD display	
Connected computer	High speed USB2.0	
Power	DC3.7V and 12V	
MP3/WMA	Max output of speakers	(L)35 W (R)35 W
	MP3 BPS	8K bps - 320K bps
	WMA WMV BPS	5K bps - 384K bps
	Frequency respond	20Hz to 20KHz
	S/N Radio	125dB
Temperature	-40 to 80 Centigrade	
Language	English	
Operating system	Windows98/SE/ME/2K/XP, Mac OS 10, Linux 2.4.2	