



INSTRUCTION

VIDEO GLASSES

52 inch
Full color LCD screen



PREFACE

Thank you for purchasing this multi-purpose video glasses. This product has a 50-inch 4:3 screen, which is exceptionally clear and delicate. Our unique display technology, clear picture and high-fidelity surround sound together with innovative design, elegant structure make every product a fantastic enjoyment for you. The product weighs only 60 grams, which makes it very comfortable to wear.

To help you get familiar with the video glasses, please read this manual carefully. Before using this item, please confirm that it contains all the products accessories and with no damage.

We suggest you to keep this user manual for future reference.

Enjoy your personal mobile cinema anywhere and anytime!

 
CONTENTS

MAIN FUNCTION	1
SAFTY NOTICE	2
SHAPE DIAGRAM	3
ACCESSORIES	6
SPECIFICATION	7
OPERATION	8
TROUBLE SHOOTING	10

MAIN FUNCTION

1.AV IN: used as display equipment for all digital multimedia products with AV out


1.1 Connected with Model Airplane.

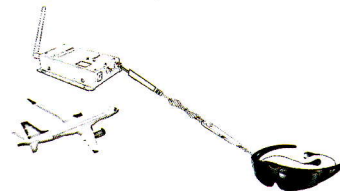

1.2 Watch vedio with iPod, iPhone, MP4,MP5, PMP, DVD, and other multimedia Players

1.3 Play games with PS2, PS3, XBOX, Wii, Game Console, Handhold Game

 1.4 Watch TV program with TV set, Portable TV Receiver with AV out

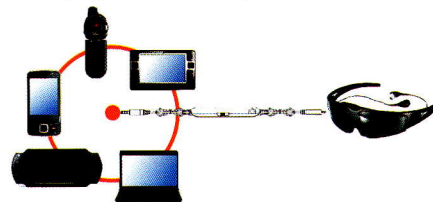

2.DETACHABLE: consists of video display module and general-purpose polarized sunglasses

2.1Removed the display module, it can be used as polarized sunglasses with stylish appearance.

2.2Installed the display module, it can be used as video glasses with superior audio and video quality.

SAFTY NOTICE

1. Precautions

- *Operating temperature: Please use it at natural temperature and do not use at a extreme temperature that human body cannot withstand.
- *Operating humidity: Please use it at the ambient humidity fit for human life and do not place it in a humid operating condition. This product is not waterproof.
- *Others: This product is precision electronic product, please it carefully.

2. In the following places, it is necessary to pay special attention so as not to lead to the damage of the product.

 
- a. Places which are sandy and dusty
- b. Easily contact with water, such as in rainy days or on the beach.
We sincerely recommend you do not let the video glasses stay in your pocket when you sit down, or forced it into packages which are filled with things.

Notes:

- *Keep the machine dry all the time!
- *Please use the accessories recommended only!
- *Avoid dropping and knocking the product. Keep TFT screen from violent shakes to avoid damages to the screen and improper display. User shall be held liable for any problem resulted from dropping or knocking.
- *Do not use the product under extreme temperatures, dusty and humid environment.
- *Damage caused by unproper operations, we does not provide free warranty!

SHAPE DIAGRAM


The Polarized Glasses

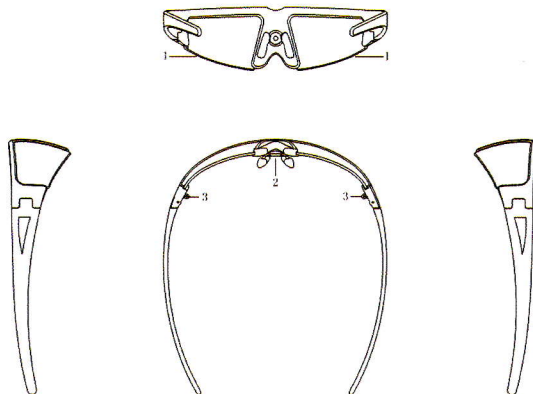

1. Eyeglass
2. Nose clips (detachable)
3. Cable slot for headphone

SHAPE DIAGRAM

 
The video display module

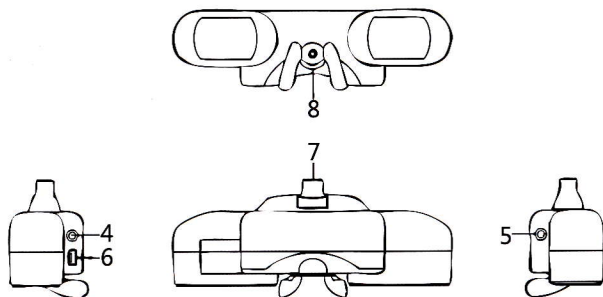


- 4. Earphone jack(right channel)
- 5. Earphone jack (left channel)
- 6. USB port
- 7. Shaft
- 8. Nose clip (detachable)

SHAPE DIAGRAM

 The control box

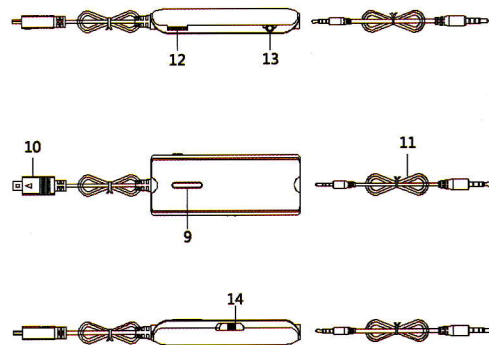

 - 9. Power indicator(blue)and charging indicator(red)
- 10. USB connector(connect with the video glasses)
- 11. AV in connector(connect with the AV OUT devices)
- 12. Volume knob
- 13. Charge jack
- 14. Power button

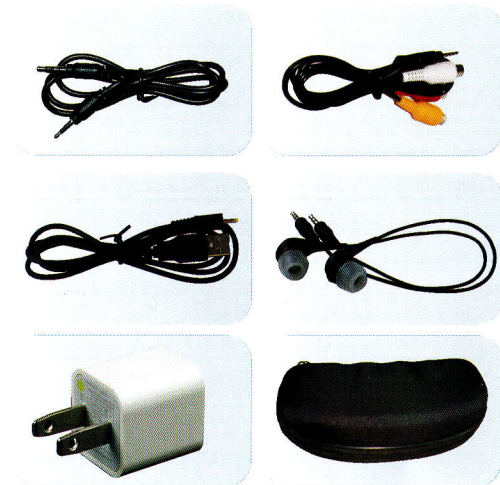

ACCESSORIES

A pair of glasses
 A video display module
 One nose clips
 A control box
 An AC charger
 An AV cable
 Earphone
 AV cable from 2.5mm to 3.5mm

SPECIFICATION

Items	Description
Display	no radiation full-color LCD micro-display
Virtual Screen	52 inch 4:3 large screen (at 2 meters' distance);
Resolution	320 * 240
Color Depth	input 24-bit
Optical visible Angle	26 degree angle
Battery	Built-in polymer battery, 3.7V 800MAH
Maximum Power	500 mW
Battery Duration	4-5 hours
Power consumption	< 450mWa
Sample rate	8KHz / 16 KHz
Video Input	mixed video input
Video format	NTSC / PAL / SECAM automatic selection
Earbuds	double-channel stereo earbuds
Mp3 bit rates	64K bps - 320K bps
WMA bit rate	64K bps - 384K bps
Frequency response	20Hz to 20KHz
SNR	>85dB
Working temperature	-5°C to 40°C
Viewing angle	controllable degree is -15 degrees to 15 degrees
Net weight	60g (not including earphones)

OPERATION

1. The video glasses

A. Install the Device

Installed the display module to the sunglasses.

Plug the earphones into the earphone jacks.

Connect the remote control box with the video glasses and the relevant machine with AV OUT functions.

B. Power ON/OFF

Power ON: Turn the switch to "ON" position to power on the player.

Power OFF: Turn the switch to "OFF" position to power off the player.

C. Volume Adjustment

You can adjust the volume by turning the knob on the remote control box.

You can also adjust the volume through the video/music playing equipment.

2. Connect to AV OUT Devices.

This product can be used as display equipment for all digital multimedia products with AV out.

portable DVD, car DVD, and other multimedia Players

A. Connected with Model Airplane.

B. Connected with Ipad Video, iPhone, MP4, MP5, PMP, portable DVD, car DVD, and other multimedia Players

C. Connected with PS2, PS3, XBOX, Wii, Game Console, Handhold Game, etc.

D. Connected with TV Set, Portable TV Receiver with AV out.

OPERATION

3. Recharge

To charge the product, you can connect it with an international standard charger through "DC IN" jack on the control box. If the charging indicator light is red, it indicates that it is being recharged. When the battery is fully charged the indicator light will turn off.

Usually a full charge requires 3 hours when the product is turned off.

WARNING:

The product can only be charged through "DC IN" jack, and the USB port can not be used for charging. Any attempt to connect the charger to the USB port is strictly prohibited

TROUBLE SHOOTING

• The player can't be turned on?

- * Check whether the battery is flat and needs to be recharged.
- * Charge it and check again.
- * If the product still can not be turned on after recharging, contact our distributor.

• No sound comes from the earphone?

- * Check whether the volume is turned to 0.
- * Check whether it connected with the earphone properly.

• There is serious noise?

- * Check whether the plug of the earphone is clean, dirt can cause noise.
- * Check if the music file is damaged by playing other files. If it is damaged, serious noise or leaps can be resulted.

• There is slightly rises in temperature when the battery is recharged.

- * This is normal and it will not affect the proper use of the machine. Software and hardware versions may lead to some difference in performance and function, and subject to change without prior notice. The manufacturer reserves all the rights for the improvement of the product design.

Guarantee

User File: _____ Sex: _____

Address: _____ Age: _____

Telephone: _____ Zip: _____

Purchasing address: _____

Retail price: _____

Commodity name and specification: _____

Model NO.: _____

Odd numbers: _____

Dealer signature: _____

User signature: _____

keep the card for
guarantee
to keep in repair

