

Blackview


HERO 1



SPORTS
HD DV water resistant
30M

User Menu

 A: Product structure

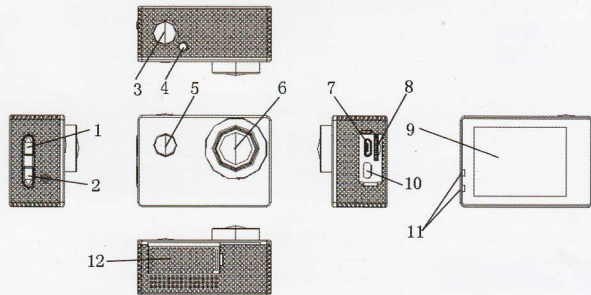

- | | | | |
|---------------------|-------------------|---|------------------|
| 1、Menu key/Mode key | 2、Down key/Up key | 3、Rec key | 4、Boot indicator |
| 5、Power key | 6、Camera lens | 7、USB Slot | 8、TF card slot |
| 9、LCD | 10、HDMI slot | 11、Charging indicator / Video indicator | 12、Battery box |
- Note: 1- Short press to open the menu, Long press for switching mode; 2- Short press down function, Long press to turn on the function;

B: Charging

- 1、 you can use the data line charging via power adapter, mobile power;
- 2、 please use 5V/1.5A or above the power adapter and mobile power supply;

C: Operating instructions

3.1、 On/Off

- * Boot: short press the power button;
- * Turn off: press the power button to shut down;

3.2、 The function of WIFI

- * Open: standby time press REC to open WIFI;
- * Close: WIFI open long press REC button to turn off the WIFI;

3.3、 Mode switch

- * Video mode: start automatically enter the recording mode (default) or in playback mode longpressmode key switch to video mode;
- * Camera mode: video mode, press the mode button to switch to camera mode;
- * Playback mode: camera mode, press the mode button to switch to playback mode;

3.4、 Video / photo / playback

- * Video: in the video mode, short press REC key to open the video, short press REC key again to stop

recording;

* Photo: the photo mode, short press the REC button to take pictures;

* Playback: in playback mode, select video files with the arrow keys, and then press the REC button to play back the video files;

3.5、Enter / Exit menu

* Video: video menu mode or photo mode, short press the menu key to enter the menu;

* In the video camera menu: menu, short press the menu button to switch to camera menu;


* Playback: menu in playback mode, press the menu key to enter the playback menu;

* The system menu: in the video menu, press the menu button to enter the system menu two or playback menu under a short press the menu key to enter;


* Menu: any menu mode, short press the menu button to switch the menu options, turn on the key / turn key mobile, short press REC key to confirm;


D、APP

4.1、 Install LINKINEYES software on a mobile phone or a panel computer you can search and download on Google Play for android system, or search and download on APP Store for IOS system ;

4.2、 APP use:  Click to enter the APP operation;

E: WIFI

5.1、 Open WIFI: boot press REC button to open the WIFI, when the icon turns green ,  open WIFI is connected to the mobile phone;

5.2、 WIFI equipment: mobile phone WIFI open, find ,  said WIFI signal is normal;

5.3、 WIFI password: the default password is 1234567890;

5.4、 WIFI connection: select equipment and enter the password correctly, when the display ,



says it has successfully connected to WIFI;

Reminder: APP before use, you must insert TF card and WIFI connection;

F: Basic parameters

Screen size	2 inch high-definition display
Camera lens	170 A+ grade high resolution ultra wide-angle lens
Language	English, simplified Chinese, traditional Chinese
Video format	H. 264 Mp4
Video resolution	The maximum 2304*1296/30fps and 1920*1080P/60fps
Sensor	Sony 16000000 pixels
Memory card	4G-64G Calss10 and above
Microphone	Built-in
Wifi	Support
The power adapter	Input: AC100-240V. 50-60HZ, output: DC5V 2A
Battery capacity	4. 2V/1050mAH