

SmartWatch SmartPhone

Quick Start User Guide

model: EC306

Printed V1.0 (2013) English

Watch Phone

Dear User, thank you for using our watch mobile phone, please read this Quick Start User Guide Carefully before use.

It is a Watch, Phone, Video Player, Recorder and Music Player.
Super thin, Mini size, Capacitive touchscreen...

Specification

Quad Band
GSM 850/900/1800/1900MHz
RAM 128M, ROM 32M
Display 1.54" ,TFT,RGB240x240Pixels
Capacitive Touch screen
Speaker / Headphone (2 in 1)
Microphone
Vibration Motor
Bluetooth
MicroSD (Extendable up to 32G)
USB Port
GPRS, WAP, Music, Video, FM Radio
Voice recording, SMS, MMS
Hands free
Lithiumion battery, 300mAh
42.0 x 42.3 x 12.3mm, 58.0g

Content in Box

EC306 Watch mobile phone	x 1
USB adapter	x 1
Micro USB cable	x 1
High quality headset	x 1
Quick start user guide	x 1



The illustration in this quick start user guide is for reference only
Please refer to the actual product

 
 
Read Before Use

- 1 Your phone has been delicately designed and made, deserves to be taken good care of.
- 2 Do not use sharp objects to operate on touchscreen; when temperature is low, touchscreen will be less responsive, which is normal.
- 3 The product may be slightly warm when charging, which is normal. The product is equipped with temperature control system to ensure charging safety.
- 4 The product standby time and talk time may vary based on how the product will be used and different use habits.
- 5 The call quality may be influenced due to radio wave interference.
- 6 This product is not waterproof, please prevent water from entering watch, (if water entered, please switch off the phone immediately; use the product only after water completely dries up).
- 7 For better performance & display effect, do not use or place the product in dusty area.
- 8 If need to use other adaptor, please make sure its output voltage and current matches the original one.
- 9 Due to plug definition being different, other charging cable or earphone may not be compatible to use.

Safety Instructions

- 1 Keep the product & all accessories out of children's reach to prevent accidents.
- 2 Before driving, please prepare wired headset (or Bluetooth Headset) ready or switch to hands-free mode.
- 3 Turn off your phone on the plane or switch to flight mode, otherwise it may cause interference to the plane.
- 4 Use mobile phone very carefully when in gas station, oilfield, chemical plant or other hazardous areas, stick to the relevant regulations & terms.
- 5 Do not place the product in high humidity or high temperature area, otherwise the electric circuit may be interfered.
- 6 Please use and keep phone battery safely; When not using the product for a long period of time, please take the battery out of product.
- 7 Only our professional staff or assigned repair centre can disassemble or repair the product; trying to disassemble or repair by oneself may cause damage.
- 8 Use only accessories & battery approved by our company, otherwise it might cause trouble or damage to the phone.


Phone Overview

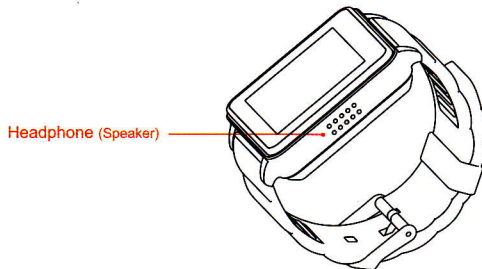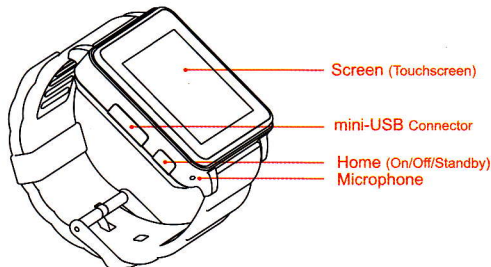

SIM card & MicroSD card

Please insert/take out SIM card and MicroSD card only when the phone is switched off.

 - ① Open the USB cover by nail;
- ② Open the battery cover from USB port side;

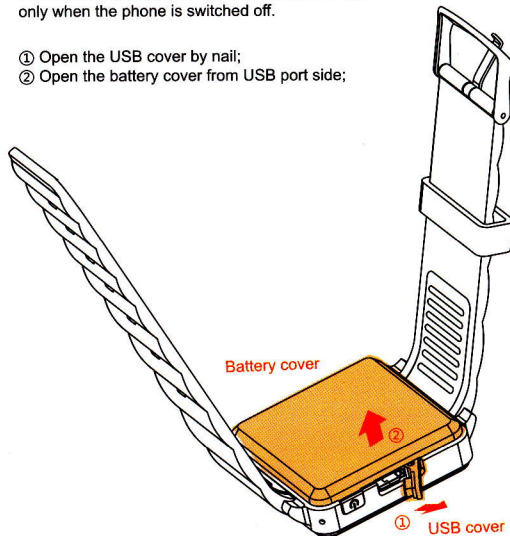


Kind reminder:
Please pull the USB cover
a bit before repositioning it

- ③ To place SIM card and MicroSD card into SIM slot and MicroSD slot separately.



Kind reminder:
Contact point of cards facing
display direction.

 
- ④ To lock battery cover
Make sure the back cover pull area is in the
same side as the USB port;
Press it downwards carefully until it's
locked firmly.

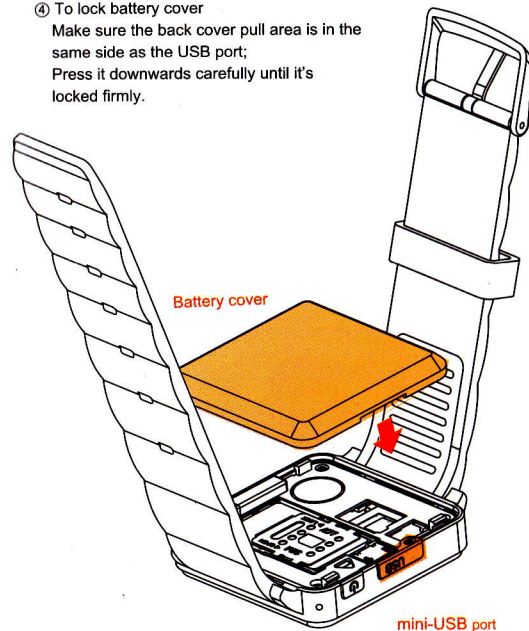

Charging

For the first 3 charges, make sure to drain the battery before charging, and charge at least 4 hours.

 This will activate the battery to its best performance. The USB port could be used for charging, data transfer and earphone connection.

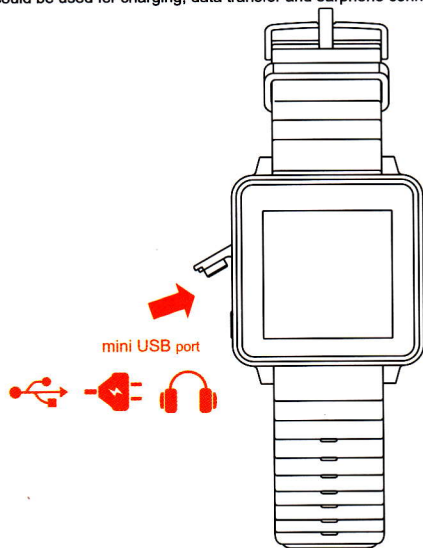

Button

 
Home button

1. Under clock interface, press button to light on/off display.
2. Under any interface, press & hold button to power on/off.


Note:

Press the button need to last minimum 1s.

Press & hold button need to last minimum 3s.

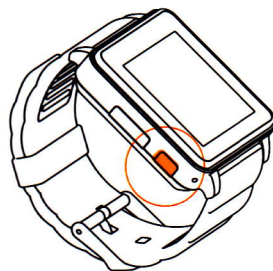

Operation Guide

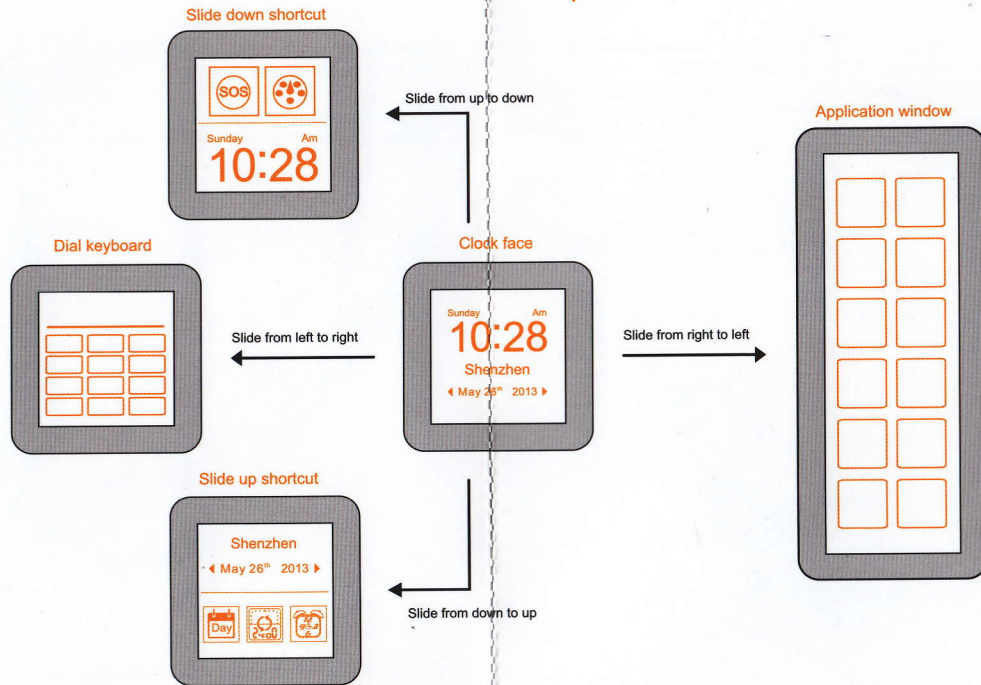 

SOS

1. In emergency, you could access SOS call.
2. In SOS call, your phone will call the pre-set SOS numbers in turn. If the 1st number cannot be connected, it'll call the 2nd numberuntil any one of the numbers connected.
3. For the un-connected SOS numbers, your phone will send a text message as such: 'I have called you at 14:35PM 2013/5/20, but not connected.'

 


Note: SOS numbers could be set in the system, maximum can set 5 numbers, You can select from your phone book and the Sequence of the numbers could be adjusted.

Changing Strap

To meet customer's personalized needs, in our shop we offer straps of different colors & material, customers can choose freely.

When changing the strap, make sure the antenna contact point and the strap contact area are clean, otherwise the phone signal or Bluetooth signal may be influenced.

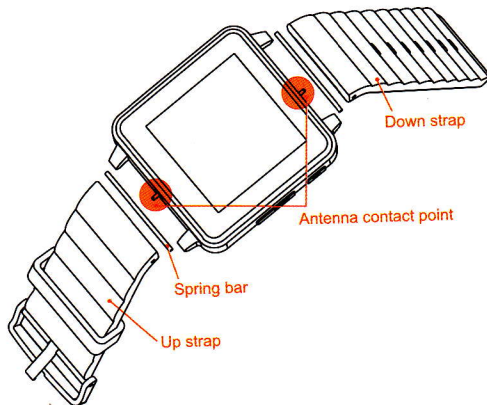

Thank you for choosing our product!

Should you have any questions or concerns, please contact the retailer and they will do everything possible to assist you.

SmartWatch
SmartPhone