



## / Selection of camera mode

Turn on camera and repeatedly press "Power/mode" button [⏻] to setup various modes of camera.



**Video**

Video record



**Shoot**

Single picture shoot



**Delaying shoot**

According to interval time for continuous shoot



**Playback**

View video and picture on TV or LCD display



**Setting**

Adjust camera, resolution and other option

 
Note: among options of video, shoot and delay shoot, each stop for one second may default option and access to such option.

6.


## / Camera icon definition

Reference corresponding to camera icon


Main menu




**Camera setting**

 


**Video data**

 

**Shoot setup**

 

**Camera data**

 


7.

## / Setting of camera

 To adjust setting of camera:

1. Press "Power/mode" button [⏻] to adjust to "Setting" mode [⚙️]
2. Press "Shutter/selection" button [S] enter to "setting" menu
3. Press "Power/mode" button [⏻] to switch into different modes
4. Press "Shutter/selection" button [S] to confirm the selected option

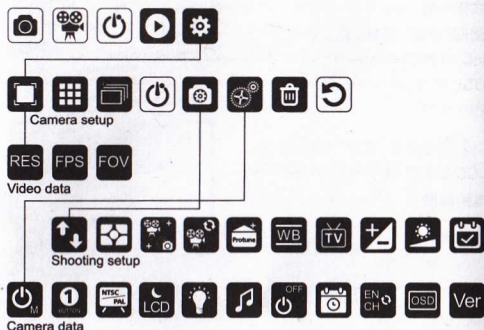

Video default setup: 1080P30


Shooting default setup: 5MP

· Please refer to User's Manual if any detail of camera setup as required.


8.

## / Display of screen data video and shoot

 Display of screen data video

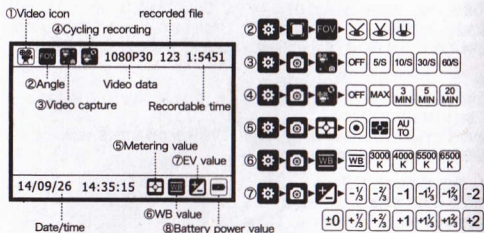


Display of screen data shooting

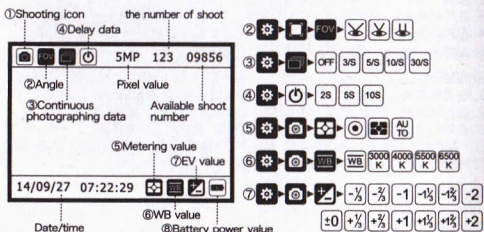 

9.

## / Video recording and shooting

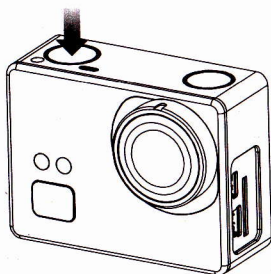 

Press "Shutter/selection" button  
[S] to start/stop video recording  
or shooting

You may change video and  
photo setup by [gear] menu

### Optimal extension of battery lifetime

1. Optimally extend battery lifetime during longer continuous photography.

It is recommend to change as following setup:

① Adjust shortest screening switch-off time. [S] [S] [S] [S]

 
② Adjust darkest screen. [S] [S] [S] [S]

2. Extremely low temperature environment may shorten battery lifetime. Please try to use it at warm area.


10.

## / Playback video and picture

You may play video and picture by several ways:



LCD screen

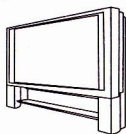 

TV

Connect the camera by Micro HDMI cable, composite data cable or combined data cable (separate sale) to TV.

### Playback and button definitions

1. While viewing document

① [S] Backward to previous document;

② [S] Forward to next document;

③ [S] Press one time to play;

④ [S] Press 3s back to playback mode.

2. While playing

① [S] Pause, play switching ;

② [S] Fast forward: X2, X4, X8 has four normal options witching;

③ [S] Button to stop playing the file and return to document viewing interface.

### Transfer video and photo to computer

On PC:

1. Connect the camera to PC via USB cable.

2. Press power/mode button to switch on camera.

3. Double click "My Computer" and find "Removable Disk" icon.

4. If this icon is disappear, switch off and reopen "My Computer".

In normal condition, this icon appears at this time.

5. Double click "Removable Disk" icon.

6. Double click "CARDV" folder icon.

7. Double click "MOVIE" folder to view all photo and video documents.

8. Copy the documents into PC or external hard disk.

On MAC:

1. Connect the camera to MAC via USB cable.

2. Press power/mode button to switch on camera.

3. Relative icons immediately appear on desktop. Double click the icon

accesses to documents.

4. Copy documents to MAC or external hard disk.

11.

 
## / Standard accessories



Master camera DZ-P2



Chargeable battery



Frame



USB Cable



Operation instruction

12.

## / Helpful information and resources

### User's support

Dazzne will be always providing users with the best services. Please access to [www.dazzne.com](http://www.dazzne.com) for any contact with Dazzne user's support.

### Support to Dazzne user

Teaching material and professional hint word skill provided by us will be helpful for making full use of purchased Dazzne product.

Please access to [www.dazzne.com](http://www.dazzne.com)

### Camera firmware update

To intend to acquire the latest functions and optimal performances for P2 camera, special care must be taken to use the latest camera software. To view available updating and download latest camera firmware.

please visit to [www.dazzne.com](http://www.dazzne.com)

13.