 


/ Contents

| | |
|--|-----|
| Installation | P3 |
| Key points of camera operation | P4 |
| Selection of camera mode | P6 |
| Camera icon definition | P7 |
| Setting of camera | P8 |
| Video and shooting screen parameters display | P9 |
| Video recording and shooting | P10 |
| APP connection settings | P11 |
| Playback video and picture | P12 |
| Standard accessories | P13 |
| Helpful information and resources | P13 |

Key points of camera operation

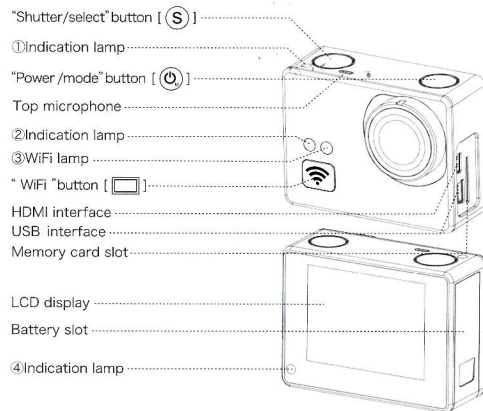

/ Selection of camera mode

Turn on camera and repeatedly press "Power/mode" button [⏻] to setup various modes of camera.



Video

Video record



Shoot

Single picture shoot



Time-lapse shoot

According to interval time for continuous shoot



Playback

View video and picture on TV or LCD display



Setting

 
Adjust camera, resolution and other option

Note: among options of video, shoot and time-lapse shoot, each stop for one second may default option and access to such option.

/ Setting of camera

To adjust setting of camera:

1. Press "Power /mode" button [P] to adjust to "Setting" mode [S]
2. Press "Shutter/selection" button [S] enter to "setting" menu
3. Press "Power/mode" button [P] to switch into different modes
4. Press "Shutter/selection" button [S] to confirm the selected option

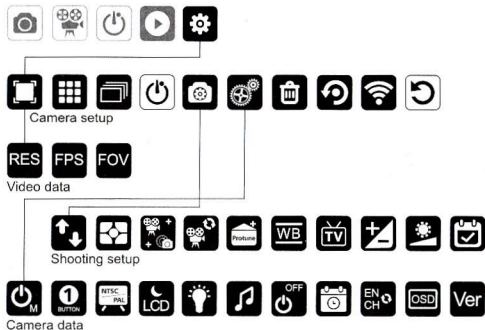

Video default setup: 1080P60

Shooting default setup: 5MP

• Please refer to User's Manual if any detail of camera setup as required.

/ Video recording and shooting



Press "Shutter/selection" button [S] to start/stop video recording or shooting

You may change video and photo setup by [S] menu

Optimal extension of battery lifetime

1. Optimally extend battery lifetime during longer continuous photography.

It is recommend to change as following setup:

- ① Adjust shortest screening switch-off time. [S] [P] [S] [M]
- ② Adjust darkest screen. [S] [P] [S] [50%]

 
2. Extremely low temperature environment may shorten battery lifetime. Please try to use it at warm area.

/ Playback video and picture

You may play video and picture in the following ways.



LCD screen

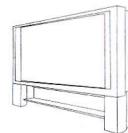

TV

Connect the camera by Micro HDMI cable, composite data cable or combined data cable (separate sale) to TV.

Playback and button definitions

1. While viewing document

- ① [S] Backward to previous document;
- ② [P] Forward to next document;
- ③ [S] Press one time to play;
- ④ [S] Press 3s back to playback mode.

2. While playing

- ① [S] Pause, play switching ;
- ② [P] Fast forward function : X2 X4 X8 switch modes ;
- ③ [S] Playback function : -2 -4 -8 switch modes .

Transfer video and photo to computer

On PC:

 
1. Connect the camera to PC via USB cable.
2. Press power/mode button to switch on camera.
3. Double click "My Computer" and find "Removable Disk" icon.
4. If this icon is disappear, switch off and reopen "My Computer". In normal condition, this icon appears at this time.
5. Double click "Removable Disk" icon.
6. Double click "CARDV" folder icon.
7. Double click "MOVIE" folder to view all photo and video documents.
8. Copy the documents into PC or external hard disk.

On MAC:


1. Connect the camera to MAC via USB cable.
2. Press power/mode button to switch on camera.
3. Relative icons immediately appear on desktop. Double click the icon accesses to documents.
4. Copy documents to MAC or external hard disk.

/ Video and shooting screen parameters display

Video and shooting screen parameters display

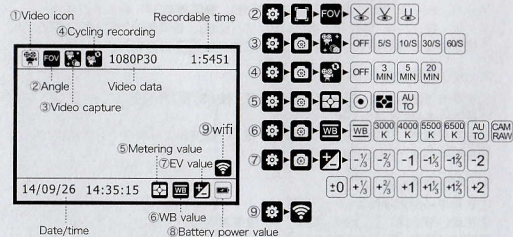

Display of screen data shooting

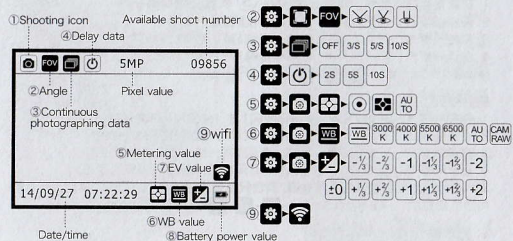 

/ APP connection settings

Connect to Dazzne APP

Thanks to Dazzne P2 HD APP, users can remotely control camera via a smart phone or a tablet PC. Features like control, instant preview and playback can be realized.

To connect Dazzne camera to Dazzne P2 HD APP, the following steps shall be taken:

1. Download Dazzne P2 HD App from Apple App Store to your smart phone or tablet PC.

2. Turn on the camera and open WIFI function

◆ Press Power/mode to turn on the camera

 
◆ Long press on Wi-Fi/close button or select Settings-WIFI-ON in Settings menu.

3. In the settings of the smart phone or the tablet PC, connect the relevant device to the Wi-fi enabled camera. The SSID begins with P2-XXXX plus a string of characters or numbers.

4. Input the password "dazznep2".

5. Start up Dazzne P2 HD App in your smart phone or tablet PC. And features like control, instant preview, playback and others can be realized via your smart phone or tablet PC.

/ Standard accessories

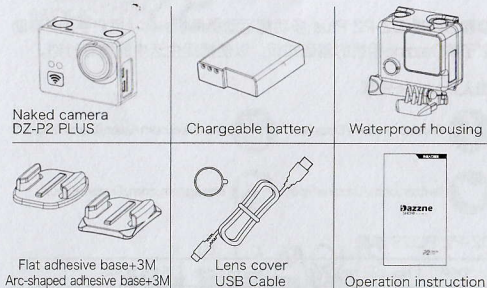

/ Helpful information and resources

User's support

Dazzne will be always providing users with the best services. Please access to www.dazzne.com for any contact with Dazzne user's support.

Support to Dazzne user

Teaching material and professional hint word skill provided by us will be helpful for making full use of purchased Dazzne product. Please access to www.dazzne.com

Camera firmware update

To intend to acquire the latest functions and optimal performances for P2 PLUS camera, special care must be taken to use the latest camera software. To view available updating and download latest camera firmware, please visit to www.dazzne.com