 


MX 3

Quick Start Guide

MODEL: M351/M353

Volume...
controls

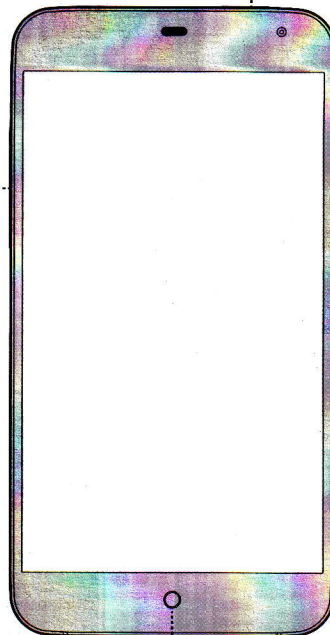

 
Power/
Lock button

Home key


Removing and attaching the back cover

Open the back cover


1. Hold the phone with the back facing up. Plug the tip of the back-cover opener, which is enclosed in the package, into the small hole on the right side of the phone. (Do not use other pointed objects to substitute for the opener.) Push the opener and lever the back cover slightly off the body.

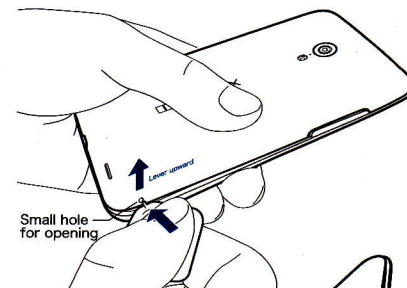

 
2. Insert the edge of the opener into the opening between the cover and the body, and slide it forward.

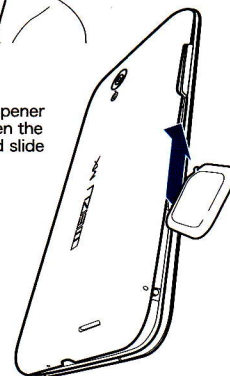

Repeat on the other side of the phone.

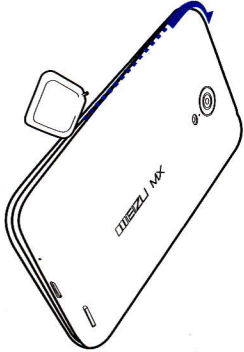 


 3. Take off the back cover.

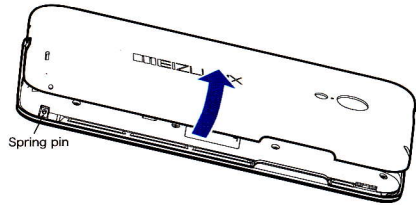


Install the back cover

 1. Insert the spring pin on the right side of the phone into the small hole in the back cover.

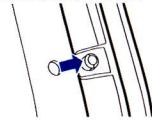

 2. Press every corner of the cover to ensure it is firmly installed.

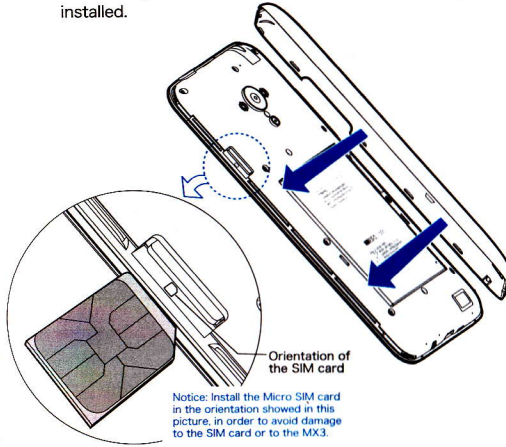

Notice: Install the Micro SIM card in the orientation showed in this picture, in order to avoid damage to the SIM card or to the MX3.

Important notice:

1. Original Micro SIM cards are recommended. In case that you intend to have your SIM card adapted, use the specialized tool provided in MEIZU retail store to ensure smooth cuts and intactness of the chip.
2. Do not open the back cover unless you are installing or removing the SIM card. In case of malfunction, press and hold the power button for at least 7 seconds to restart the phone.

Important Notes

I. Mobile phone usage

- (1) Keep the phone and its accessories out of children's reach.
- (2) Keep the phone dry. Rain, moisture and liquids can damage the phone.
- (3) Do not attempt unauthorized disassembly of the cell phone. If you have any questions, please contact MEIZU.
- (4) Do not operate the device in extreme temperatures ($< -10^{\circ}\text{C}$ or $> 55^{\circ}\text{C}$), as it can shorten the life of the device and damage the battery.
- (5) Do not drop, knock or shake the device, as it can damage the internal circuit board.
- (6) Do not use chemical cleaning solvents to clean the phone.

(7) When charging the phone, place it in a dry and ventilated environment.

(8) If water damaged, turn off the phone and arrange for repair at MEIZU. Do not open the back cover, or use heating equipment (such as hair dryers, microwave ovens, etc.) for drying.

(9) Do not break or alter without authorization the built-in antennas of the phone, otherwise the efficiency may decrease and the SAR may exceed the recommended limit. Holding the phone by the parts where the antennas are installed is not recommended, because a capping hand may affect the antenna performance and cause higher transmitting power.

(10) Do not use metallic bags or metal-sprayed cases in order to avoid interference to the antenna performance.

(11) Prolonged use may result in the phone emitting some heat. This is normal.

(12) Do not place heavy objects on the phone to avoid damage to the touchscreen.

2. Mobile security and backup


The device supports connections over the Internet and other protocols. Like computers, the device may be exposed to viruses, malicious information or applications, and other harmful content. Please only accept connectivity requests and download files from reliable

sources. Back up important information to prevent loss.

3. Battery

(1) Do not open the back cover on your own. This product contains a lithium-ion polymer battery. If not properly handled, there may be fire or combustion dangers. Do not disassemble the battery, external short circuit contact, or use the battery in extreme temperatures ($< -10^{\circ}\text{C}$ or $> 55^{\circ}\text{C}$). Please dispose of the battery responsibly.

(2) Keep the battery dry and away from liquid spills.

4.  To prevent possible hearing damage, do not listen at high volumes for long periods.

5. Do not use the phone in the following environments:

(1) Gas stations, chemical storage warehouses, or near a flammable gas or other chemicals.

(2) Hospital operating rooms, emergency rooms and intensive care units, to avoid interference with medical devices.

(3) In aircrafts, follow the aviation safety requirements and turn off your cell phone when necessary.

(4) When driving, for the sake of your and other people's safety, do not use the phone.

(5) During a lightning storm, it is advised not to use the phone outdoors.

(6) When charging the phone, use a handsfree to make calls.

6. Accessories

(1) Do not place accessories (such as SIM or USIM card, power adapter, etc.) within children's reach.

(2) The mobile phone accessories are not water-resistant, please keep them dry.

 
(3) Always safely remove the hardware from your computer. Do not directly pull the plug.

7. Traffic safety

Research has shown that talking or texting while driving increases the risk of accident.

(1) If you want to use the phone in the car, use handsfree devices specially designed for in-car use.

(2) Make sure your mobile phone and handsfree devices do not hinder the car's airbags or any other safety equipment from functioning properly.

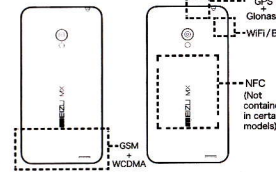

Buttons

The Quick Start Guide is for reference only. Actual features are subject to change depending on the preinstalled operating system version.

For a detailed description over features and important safety information, please refer to

<MX3 User Guide>
<http://en.meizu.com>

©2003-2013 Meizu Technology Co., Ltd. All rights reserved.
 MEIZU and the MEIZU logo are trademarks of
 Meizu Technology Co., Ltd. in China and other countries.

Meizu Technology Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of directive 1999/5/EC.


CE0168



- 1 Double-tap the Home button to launch the music player. When the music is playing, tap the Home button to check the date.



 - 2 Press the Power button and the Volume-down button at the same time to capture a screenshot.

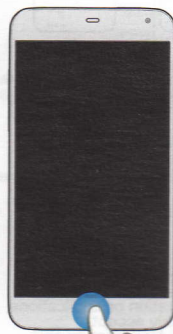

- 3 Touch and hold the Home button, the screen will be locked when you release your finger. If you proceed to slide your finger upwards into the screen, it will not be locked.

System

 


- 1 Slide your finger upwards across the Home button into the screen to go back to the previous screen.

- 2 Slide your finger upwards on either side of the Home button into the screen to open the multitasking bar.




- 3 Drag an icon in the multitasking bar upwards to close the corresponding app. Drag the icons downwards to close all apps. Touch and hold an icon to lock the app, so that it will not be closed when you drag the icons downwards. Touch and hold the icon again to unlock it.

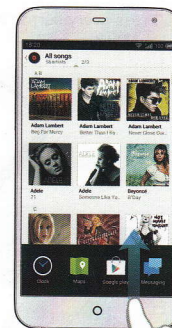

Phone



 - 1 When editing a contact, enter tag information in the "Company" input box and then the tag icon will turn on. The tag information will be displayed when there is an incoming call from the contact. If you do not want to have the tag displayed, turn off the tag icon.

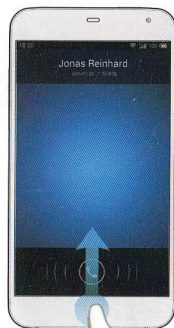


- 2 When the screen is unlocked and there is a call coming in, swipe upwards across the Home button to shift the call to background operation and mute the ringtone.



- 3 When there is a call coming in, press the Volume-up or Volume-down button to mute the ringtone; press and hold the Volume-up button for about 1 second to answer the call.

Keyboard

 - 1 On the browser keyboard, touch and hold the ".com" key to reveal other options of domain names.

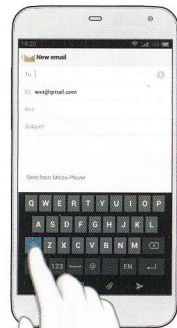

- 2 Tap the Shift key and the next input letter will be uppercase. Double-tap the Shift key to keep all input letters in uppercase.



- 3 Touch and hold the Microphone key to launch voice input. Proceed to slide your finger out of the key to cancel voice input.

 


Video and Music

- 1 Slide upwards/downwards on the left side of the screen to increase/decrease the volume. Tap the speaker icon to mute the speaker.



- 2 Slide upwards/downwards on the right side of the screen to increase/decrease the brightness. Tap the sun icon to restore to the default brightness.

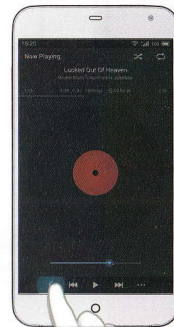

- 3 Touch and hold the Back key to return to the app's home page.

 
Browser and Mail

Find more user tips in the phone's Settings > Accessibility > User manual.

- 1 Drag a preview in the multi-window bar upwards to close the corresponding window. Drag the previews downwards to close all windows.



- 2 Touch and hold the Back key for about 1 second to get ready for entering URL or search terms in the input box.

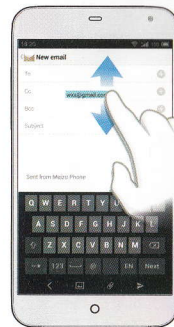

- 3 A contact name can be moved between the "To" box and the "Cc/Bcc" box by a drag.