


# Android Smart Phone

## User's Manual

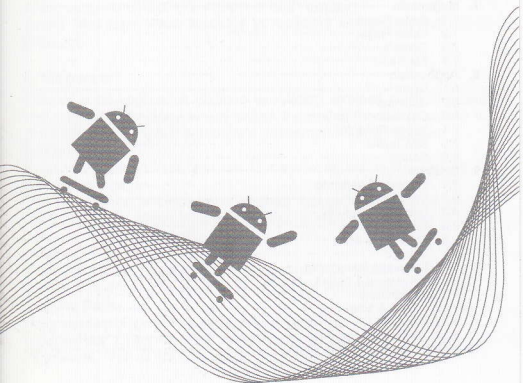

## User Guide

### Contents

1. Preface .....	2
2. Quick Start Guide .....	2
2.1 Insert SIM card and battery .....	2
2.2 Insert memory card .....	2
2.3 Battery charging .....	2
3. Call .....	2
3.1 Dialpad .....	2
3.2 Dialing via Contacts .....	2
3.3 Making an emergency phone .....	3
3.4 Menu during a call .....	3
4. Contacts .....	3
4.1 Browsing contacts .....	3
4.2 Quick search .....	3
4.3 Creating contacts .....	3
5. Message Service .....	4
5.1 SMS .....	4
5.2 MMS .....	4
6. Browser .....	4
6.1 Open .....	4
6.2 Browser .....	4
7. Multimedia .....	5
7.1 Audio Player .....	5
7.2 Video Player .....	5
7.3 Camera .....	5
7.4 FM Radio .....	5
8. Application .....	5
8.1 Clock .....	5
8.2 Calendar .....	5
8.3 Calculator .....	5
8.4 Sound Recorder .....	5
8.5 SIM Toolkit .....	5
8.6 Search .....	6
9. Settings .....	6
9.1 Wireless & networks .....	6
9.2 Call settings .....	6
9.3 Location & security .....	6
9.4 Applications .....	6
9.5 Accounts & sync .....	6
9.6 Storage .....	6
9.7 Language & keyboard .....	6
9.8 Voice input & output .....	7
9.9 Accessibility .....	7
9.10 Date & time .....	7
9.11 Analog TV .....	7
9.12 GPS .....	7
10. Maintenance of Mobile Phone .....	8

## 1. Preface

### Thank you for choosing this Spreadtrum Platform Cellphone.

This device will offer you an unprecedented surprise for it can support two GSM cards with double standby. Meanwhile, this cellphone is equipped with a 3 megapixel HD digital camera, a MP3 music player and a MP4 video player. Enjoy yourself!

### Safety

Please go through, and comply with, the following considerations before using this cellphone.

## 2. Quick Start Guide

### 2.1 Insert SIM card and battery

- Press turn it off;
- Slide the cover downwards and remove it;

### 2.2 Insert memory card

- Remove the cover and battery and turn over the cover of the memory card in the direction as shown thereon;
- Let the side of the memory card bearing metallic contact face down, insert the narrower end into the card slot until absolutely fitted by it, and replace the back cover.

### 2.3 Battery charging

#### The cellphone battery may be charged with travel charger.

- Insert the battery in the device correctly;
- Let the charger arrow towards the screen, insert the charger plug into the interface, and connect the charger to the standard power supply socket.
- After charging is over, cut off the connection between the charger and the standard power supply socket.

## 3. Call

### 3.1 Dialpad

Under idle situation, press "Dialpad" button to enter into the dialpad interface, and press virtual keyboard to dial;  
Press "Call", escape the SIM card select screen. Select SIM1 to dial with SIM1; select SIM2 to dial with SIM2  
Press "IP" button to carry out IP dial;  
Press "Hide/Extend Virtual Keyboard" button to hide or extend the virtual keyboard.

### 3.2 Dialing via Contacts

Enter the Contacts and search for the phone number you need;

Press Record for a long time to select Call in the option menu.

### 3.3 Making an emergency phone

Enter the emergency phone number;  
Press "Call", escape the SIM card select screen. Select SIM1 to dial with SIM1; select SIM2 to dial with SIM2

### 3.4 Menu during a call

During a call, you can:

**Hold:** Press [Hold] to hold current call, and press [Activate] to resume current call when holding the call (the function needs to be supported by network).

**Contacts:** Enter into the interface of contact list.

**Dialpad:** Enter into the dial interface.

**Record:** Record the call details, and the document will be kept in the file manager automatically.

**End a call:** Press "Hang up" to end a call.

## 4. Contacts

### 4.1 Browsing contacts

When this device standby, select [Contacts] and open the namelist. The contacts are listed in the order of unnamed, special symbol, digit and English letter respectively (for Chinese names, the English letter corresponding to their pinyin prevails).

### 4.2 Quick search

When this device stands by, select [Contacts] and open the namelist. Press [Menu] to select other operations [Search]. You may search via the soft keys 0-9 keys on the lower part of the screen or the keys on the keyboard (vague search is allowed).

### 4.3 Creating contacts

On the contacts list interface, press one record for a long time to operate the following functions:

**View contact:** View the contact.

**Call:** ring the contact.

**Send message:** send one message to the contacts.

**Send email:** send one email to the contacts.

**Add to Blacklist:** Add the contact into Blacklist.

**Delete contact:** Delete the person information.

**Edit contact:** Edit the contact.

**Send contact:** send the contact in vCard.

## 5. Message Service

Message service is actually a network service. This menu works soundly depending on the type of your SIM card and the service provided by the network operator. Therefore, please check it before applying such function.

### Messaging

Please have the service center number from the network operator before applying this function. The storage capacity of SIM card depends on its type.

### 5.1SMS

This device supports multi-messaging. Five common messages are editable at most with each containing 268 Chinese characters or 612 English ones.

When this device stands by, open the function menu, select **[Message→New Message]** to open the editing screen and write a message.

### 5.2MMS

Short for multi-media service, MMS is just a multi-media message, which supports GIF, JPEG, WBMP or BMP display.

Select **[Message→New Message]** to open the edit screen and edit a message.

## 6. Browser

Internet is an application platform integrating wireless communication and Internet technology, which makes it possible for you to access to rich Internet information source and e-commerce application etc.

### 6.1Open

Input webpage address you are to browse or link to the pre-set or default main page.

The largest free wireless portal website makes it possible for you to have access to global information without even stepping out of your house.

### 6.2Browser

Open the starting page of the browser, users can enter into input URL, search, bookmarks, history and stored pages through the interfaces.

#### Current Page:

**New window:** Open the new page of the browser.

**Bookmarks:** Open the list of the stored bookmark.

**Windows:** View all WAP webpage

**Refresh:** Refresh current WAP page.

**Forward\Back:** Open WAP page forward and backward.

**More:** Find on page, Select text, Page info, Share page, Downloads, Oma Download, Settings.

## 7. Multimedia

### 7.1Audio Player

The cellphone is able to play music files saved in cellphone and the downloaded music and support background play of MP3 file.

### 7.2Video Player

The video player supports 3gp, mp4 and avi documents.

In case of file of other format, convert it into the format that is supported by the player.

### 7.3Camera

Enter main menu, select **[Camera]** to enter Capture / record video pre-view mode.

### 7.4FM Radio

In idle mode, select **[FM Radio]**. To listen to broadcasting program, connect your compatible headset to the radio, and open it. Select the medium volume to listen to music.

## 8. Application

### 8.1Clock

You can use the Clock app's Alarms screen to set up one or more wake-up alarms.

### 8.2Calendar

You can create events that appear on your phone only, as well as events that sync with your Google Calendar, your computer's Outlook Calendar, or Exchange ActiveSync calendar.

### 8.3Calculator

Enter the function list and select **[Calculator]**.

Input the data by soft keyboard and you can choose add, subtract, multiply and divide.

### 8.4Sound Recorder

Don't just think out loud. Use Voice Recorder to quickly capture your thoughts. You can also record your voice and set it as a ringtone.

### 8.5SIM Toolkit

In standby mode, press middle key to enter the function list and select **[SIM Toolkit]**.

Entering the STK sub-menu, you can use the value added service offered by network operator.

This mobile supports STK function but this service is offered by network operator. If your SIM card and network operator don't support this service then you cannot use it. Please contact your network operator for more information.

#### **8.6Search**

Select items to include when you do a search on your phone and set Google search options 10.

### **9. Settings**

#### **9.1Wireless & networks**

Set up your phone's wireless connections, such as Wi-Fi and Bluetooth, enable the Airplane mode, or set the options for mobile networks, roaming, Wi-Fi hotspot, Virtual Private Networks, and more.

#### **9.2Call settings**

Set up call services such as voicemail, call forwarding, call waiting, and caller ID.

#### **9.3Location & security**

- 1) Select the sources to use when determining your location.
- 2) Set a screen lock, enable the SIM card lock, or manage the phone's credential storage. See the Security chapter for details.

#### **9.4Applications**

Manage running applications, move applications to or from the storage card, and install or uninstall programs.

#### **9.5Accounts & sync**

Log in or out of your social network accounts, Google Account, Exchange ActiveSync account, and HTC Sense.com account. You can also manage synchronization and other settings for your accounts. See the Accounts and sync chapter for details.

#### **9.6Storage**

- 1) Check the available storage card and phone memory.
- 2) From this screen, be sure to unmount your microSD card before you remove it from your phone.
- 3) You can also do a factory reset. See the Update and reset chapter for more details.

#### **9.7Language & keyboard**

Set the operating system language and region. You can also set onscreen keyboard options.

#### **9.8Voice input & output**

Set up the voice input options of your phone. Also, if you've installed a text-to-speech (voice data) application, use this to set the text-to-speech settings.

#### **9.9Accessibility**

This option appears only after you've downloaded and installed an accessibility tool, such as a screen reader that provides voice feedback. You can turn accessibility functions or services on or off.

#### **9.10 Date & time**

Set the date and time, time zone, and date or time format. To turn off auto time synchronization and be able to manually change time zone settings.

#### **9.11 Analog TV**

In [Analog TV] mode, press [Option] to carry out the following function operations:

Add to favorites: add the channel you are watching to my channels.

My favorites: play channels you have added.

Channel list: view all the channels.

Record list: the recorded videos are saved in the Record list. You may set the video as screen protection, starting up animation, Power off display. You may send the video through Bluetooth or multimedia message. You can also mark, Unmark, mark all, and cancel all the marks the selected video.

Search channel: automatically search channels and save them in channel list.

Select country/region: select a country/region you are from so as that channels can be searched by Analog TV.

Set: set Storage for video, you may save your recorded video in phone or memory card.

Adjust brightness: adjust brightness of Analog TV. Press [5] to quickly adjust brightness of Analog TV while playing the Analog TV.

Help: provide help related to Analog TV. (Analog TV receives and deal with real-time signal from each TV station's analog signal transmitter so as to make it possible for you to watch free and synchronous TV programs)

#### **9.12 GPS**

GPS satellite signal receiver current location positioning, and Display in the navigation electronic map, the user set the destination, the system

Automatic planning travel trajectory help quick destination.

GPS navigation system only can be seen in the outdoor sky or the sky. The window in order to receive satellite signals.

How to use: in the main menu select "Settings", click on the "bit Home and security, "tick in the right side of the" Using the GPS satellite, and then enter

The navigation menu can be. Note: The phone in the first position may be required To 10 minutes or longer.

### **10. Maintenance of Mobile Phone**

Mobile phone is a high-precision electronic product, so please take good care of it. The following suggestions can help you preserve it and lengthen its useful life:

➤ Put mobile phone and its accessories to the place where children are out of reach.

➤ Keep mobile phone dry. Rain, moisture or water may erode circuit board. If mobile phone falls into water carelessly, take battery out in time and send it to local authorized service center immediately.

➤ Please do not put mobile phone at dust-covered place or its normal usage will be affected.

➤ Liquid crystal display is an easily vulnerable part of mobile phone, try to prevent it from falling down or violently shaken; it is forbidden to use sharp item to touch the screen.

➤ Please do not put mobile phone on the place where temperature is too high. High temperature will shorten the life of electric equipment, damage the battery, deform or melt its plastic cover.

➤ Please do not put mobile phone on the place where temperature is too low, or moisture will come out when its temperature increases to normal temperature, it will damage the circuit board of mobile phone.

➤ Please do not throw, knock or forcefully shake mobile phone to avoid its inner circuit board and precise structure are damaged.

➤ Please do not clean mobile or with chemical agent, cleaning solvent or powerful detergent, instead, clean it lightly with soft cloth with soap water.

➤ Please do not draw mobile phone with painting material to prevent its removable parts from being stuck, which will affect its normal operation.

➤ Please use cleaning soft cloth to clean lens, such as camera's lens.