

THANK

MeLE

YOU

FOR

CHOOSING

MELE

 
M8
V1.1.7



Thank you for choosing MeLE


Accessory

1

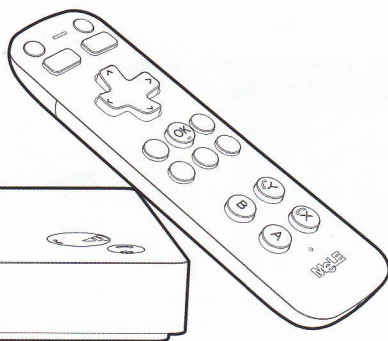


Box & RC

 Please contact the seller if you did not get exactly what is in the box.

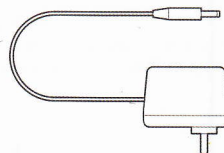

Power Adaptor

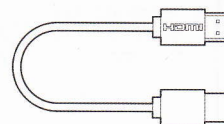 

HDMI cable

THANK
YOU
FOR
CHOOSING
MELE

Operation guide



Notice : Due to strict regulation by the Customs, the batteries for the Remote Control can not be shipped with the product to you. Please kindly understand.

2

Best environment to enjoy M8

2M Bandwidth above 2M **150Mbps** Router with 150Mbps above



1080P TV/Screen with HDMI interface






Mode	Status
Working	White
Standby/Off	Off

Definition of Buttons


Functon	Operation
	On/Standby
	Off
	Long press
	Reserved button for future functions



 
It takes some time when you first turn on the product. Please kindly wait several minutes.

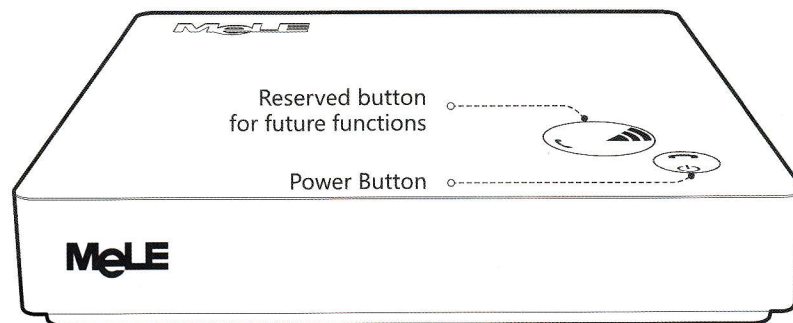

Interface on the side

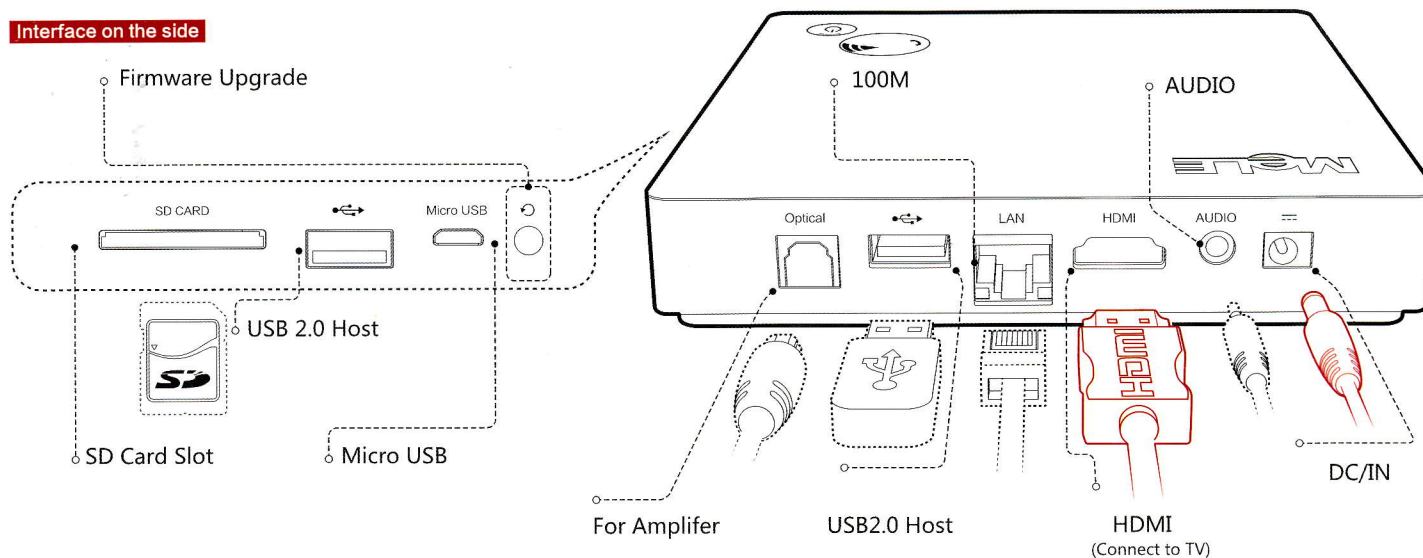 


Interface on the back

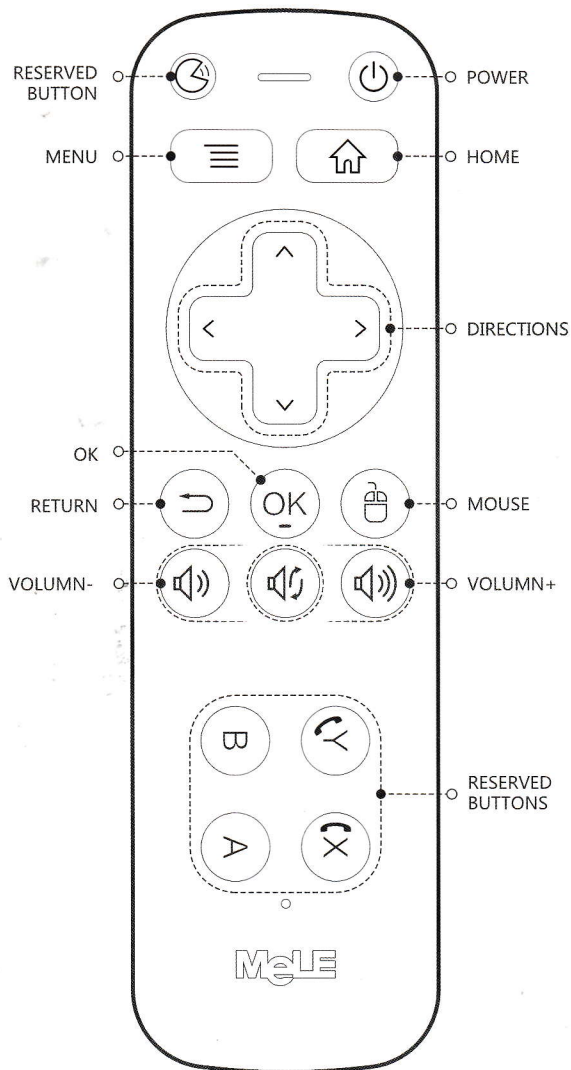 


R1

Definitions

Functions	Operations
On / Standby	Short press on POWER Long press on POWER
Move cursor	Press DIRECTIONS
Confirm operations	Press OK
Control soundsw	Press Volumn+/-
Cancel operations	Press RETURN
Back to home	Press HOME
Get more info	Press MENU
On/Off mouse mode	Press MOUSE

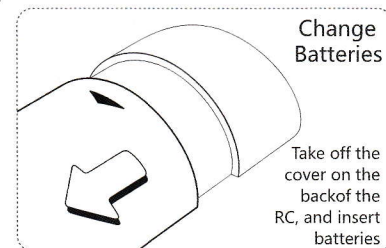 

Mouse Mode

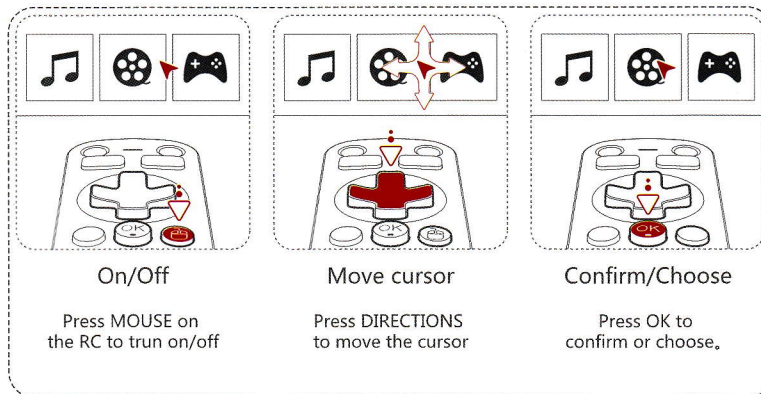 

5.1 Connecting to your TV

1 HDMI

In order to have the best display resolution on the TV screen, we suggest you to connect the product by HDMI cable.

2 AV

If your TV does not have HDMI interface, you can also connect the product by AV cable.

3 TV signal adjustment

Please find the TV or TV remote control "source" button, press the use after adjusting up and down to the right source. Use HDMI connection, signal source for HDMI, use AV Line connection, signal source for AV or video.

5.2 Connecting to Internet

If you use LAN, please connect the product with LAN cable.
If you use WiFi, please make sure your Router is working.

5.3 Connecting to Power

Please use the original power adaptor provided by MeLE.

6


Power On

6.1 Start It

Notice: In order to protect the product and the data on it, please do not cut off the power supply when the product is working.

After plug in power, the product will stay on sleeping mode. Press power button on the product or the remote control to start it.

6.2 Display Size

Go to  System Setting, find **Display** menu.

Picture first narrowed to a minimum (the slider to adjust the left), then step by step Zoom in (the slider to the right to adjust), to observe images edges, until edges and television pictures just Good coincidence.

 
Notice:

When both HDMI and AV cable are connected, the system will display HDMI output automatically. You can choose AV output manually.




6.3 Video Output

Under the Display menu, you can choose the video output according to your TV.

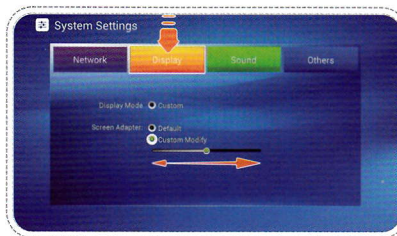

6.4 Audio Output

 
Go to  system menu, and find Sound menu **Sound**

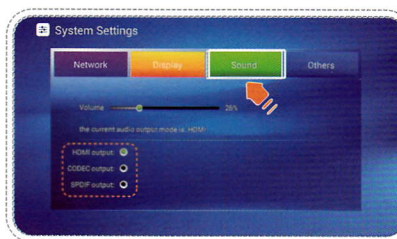


-If you use HDMI,
please choose HDMI
-If you use AV,
please choose AV
-If you use amplifier,
choose Optical

6.5 Applications Download

1 Internet download and install

Go to My Apps  on the home menu, find Google Play, add your account and start to download and install applications you like.

2 Local file installation

Go to FileManager  on the home menu, choose the APK you want and start installation by yourself.

1 Set up your router

99.9%

Most of the time, if you set up the router correctly, there will have no issue to access internet.
We suggest you setting up the router according to parameters below when you use M8.

1 Recommended parameters for your router

SSID : Name your router
(better to be English letters or Arabic numerals)
Open SSID broadcasting : In order to make other devices to find your router
Open DHCP : For router to dispatch IP dynamically

PPPoE : Auto connection
Security Mode : WPA-PSK/WPA2-PSK or WPA2-PSK
Password : 8 Arabic numerals or English letters

WiFi Standards : 802.11n or 11b/g
Channel : Auto , 3 or 11

 
2 Access to your router on website

Firstly , find the IP, Account, Password of your router as picture showed on the right..

Tplink Router: Default IP : http://192.168.1.1
Account: admin Password : admin
Netgear Router: Default IP : http://www.routerlogin.net
Account : admin Password : password
Netcore Router Default IP: http://192.168.1.1
Account : guest Password : guest




For example (Netgear router) : Connect your router with LAN cable and get the default IP, type in "http://www.routerlogin.net" in the web browser (IE, Chrome or others) on your PC/Notebook. Type in account and password in the pop-up menu to open the setting menu of your router. As pictures showed below :

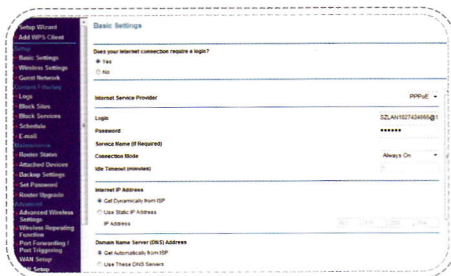

3 Change security mode and password for your route

 In the setting menu of your router, click Wireless Setting>Wireless Security Setting> to choose WPA-PSK/WPA2-PSK, set a password with 8 Arabic numerals or English letters , and click Save. As picture showed below:

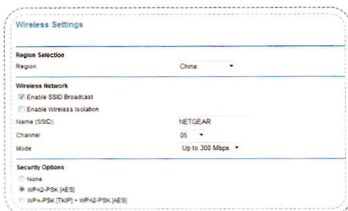


Notice : We strongly recommend you to choose Security mode of WPA-PSK/WPA2-PSK



12 Connect to Internet

1 WiFi

Go to System Setting  in the home menu , go to **Network** and choose your router available.
Type in password and click Connect. It will show as Connected as picture below:




2 Ethernet


Go to System Setting in the home menu, go to choose LAN in the Network menu after you plug in LAN cable.

Notice : When you plug in LAN cable, the system will default on Ethernet connect; when no LAN cable plug in, the system will default on WiFi. LAN and WiFi can not be available in the same time.

8.1 APK Uninstall

Click  in the home menu, find **Uninstall Software** and choose the APK you want to remove. Click **Uninstall** to uninstall.


8.2 Move APK to SD card

Click  in the home menu, find **Move Software** and choose the APK you want to move. Click **Move to SD card** to move.

 
 
8.3 Reresh RAM

Click  in the home menu, find **Memory management** and press **clean up** to clear APK running.

8.4 Firmware Upgrade

Click  firmware upgrade in the home menu. There two ways of upgrade: OTA and Local. Chose the way you like to start upgrade.

Notice: For local upgrade, please make sure you get the "update.zip" file from our official website or forum and copy it to an empty USB key/stick.

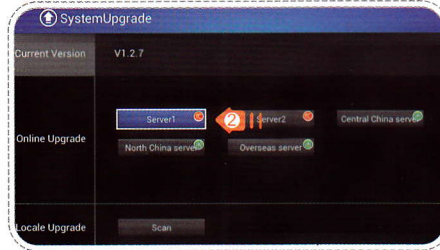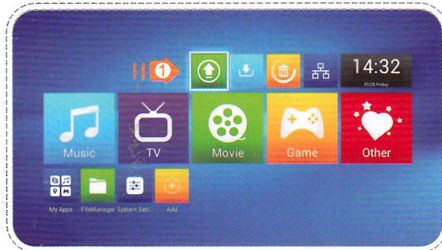

Notice : Do not cut off the power when the system is upgrading.



Contact Us



MeLE Official Store



facebook



twitter



You Tube



Warranty Card

Warranty terms for oversea markets (out of China)

1. We offer you 12 months limited warranty for the PCBA main board(hardware) of the product under normal usage excluding deliberate damage or misuse on the product.
2. You have 7 working days to contact us after you decided to apply for a return of the product. You are not allowed to ship it back to any address until we confirmed you by email with details.

3. All returned product MUST BE in the original packaging and MUST PROVIDE us the shipping tracking No. specification reason for the return, and you order ID on Aliexpress or other websites.

4. All shipping cost for the return of the product shall be born by the buyer, and the seller will confirm the refund of the payment in 3 working days after he received the return from the buyer.



RMA Record

Customer Information (for Buyer)

Customer Name:

Telehpne/Mobile:

Customer Address:

Post Code:

Product Model Name:

Serial No.:

Origin of Product

Purchase from (Website/Shop name):

Purchase Date:

Purchase Order ID:

Repaire/Replace Record

Seller Name:

Issue Description:

Reasons of Issue:

Repair/Replace Result:

New Serial No.:

Seller Name:

Issue Description:

Reasons of Issue:

Repair/Replace Result:

New Serial No.: