


Keys Explained

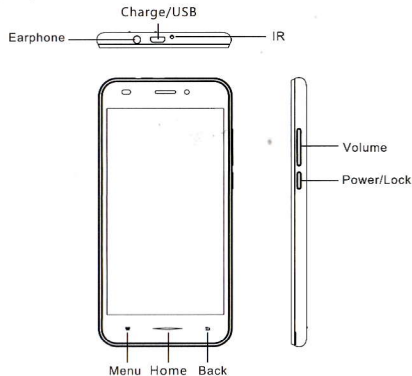

Key	Function
Power Key	<ul style="list-style-type: none"> • Hold to switch audio profiles, or to turn on or off Airplane mode, or to power off. • Press to switch your phone to Sleep mode. • Press to wake up your phone.
Home Key	<ul style="list-style-type: none"> • Press to return to the Home Screen from any application or screen. • Hold to see recently used applications.
Menu Key	Press to get the options for the current screen.
Back Key	Press to go to the previous screen.
Volume Keys	Press or hold to turn the volume up or down.

Open the rear cover




Open the back cover as per the arrows direction.
(Hint: be careful not to injure your fingers!)

Installing the SIM/SD Card and Battery


Switch off your phone before installing or replacing the battery, SIM, or memory card.

1. Remove the back cover.
2. Hold the SIM card with the cut corner oriented as shown and slip it into the card holder.
3. Insert the memory card into the card slot with the metal contacts facing down until it inserts to the right position.
4. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.
5. Press the cover gently back into place until you hear a click.

Inserting Sim card & SD card:

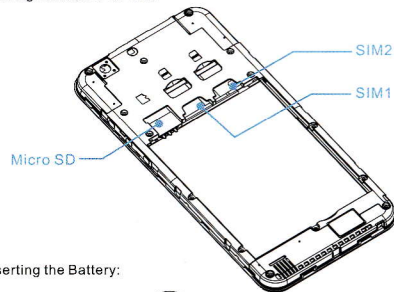

Inserting the Battery:

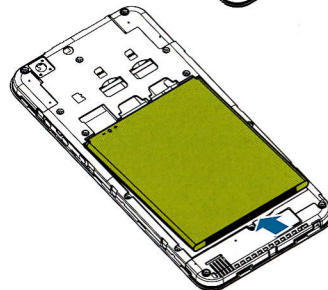

High End Smart Phone

Quick Start Guide