


L4

High End Smart Phone

Quick Start Guide

Keys Explained

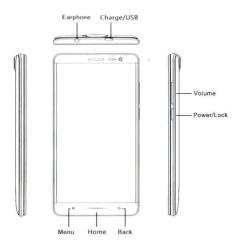

Key	Function
Power Key	 Hold to switch audio profiles, or to turn on or off Airplane mode, or to power off.
	 Press to switch your phone to Sleep mode.
	Press to wake up your phone.
Home Key	 Press to return to the Home Screen from any application or screen.
	 Hold to see recently used applications.
Menu Key	Press to get the options for the current screen.
Back Key	Press to go to the previous screen.
Volume Keys	Press or hold to turn the volume up or down.



Installing the SIM/SD Card

Switch off your phone before installing or replacing the SIM, or memory card.

- 1. Remove the back cover.
- Hold the SIM card with the cut corner oriented as shown and slip it into the card holder.
- Insert the memory card into the card slot with the metal contacts facing down until it inserts to the right position.
- 4. Press the cover gently back into place until you hear a click.

Inserting Sim card & SD card:

