

Adjust language instructions

1. First enter the menu bar (MENU)


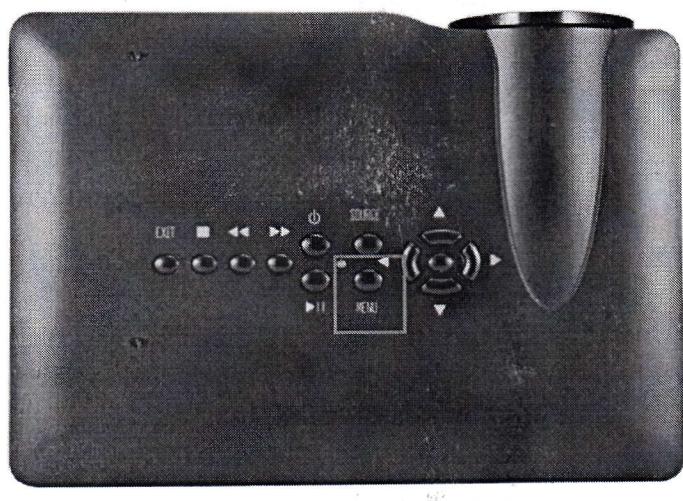


figure 1

2. Locate the menu bar inside the menu

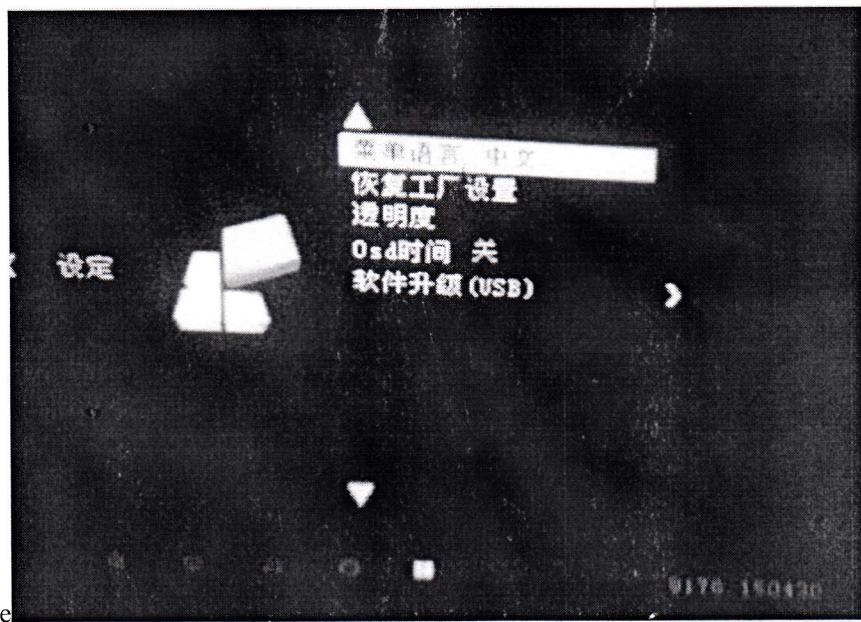

language

图 2

3. After entering the menu language, select English

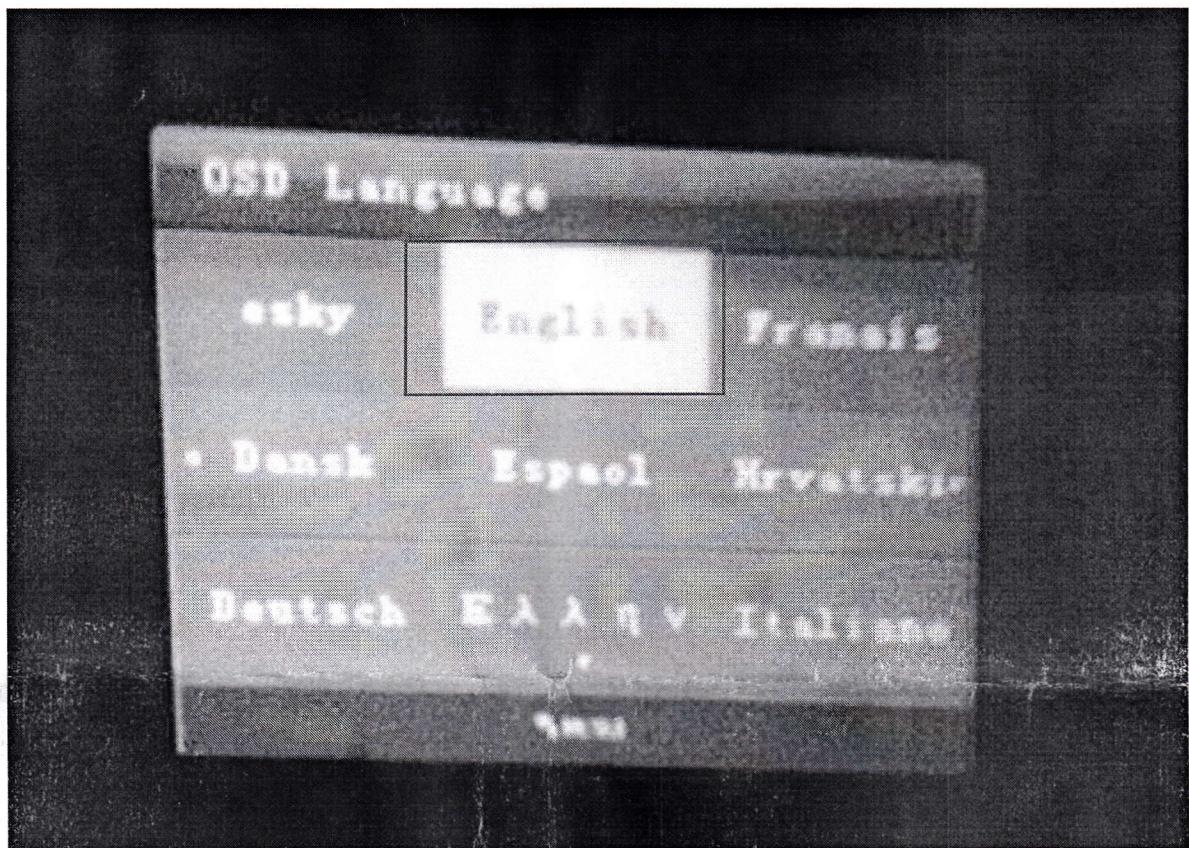


图 3

# **USER MANUAL**

## **LED MICRO PROJECTOR**



Due to continuous improvement, actual product may differ from the manual.

Manual is for reference only.

## **Table of contents**

Warning

Product Details

Remote control instruction

Operation Instruction

Menu Operation

Trouble Shooting

Accessories List

Warranty card

## Warning




### Security Warning!

Before using this projector, please read the manual first.

#### NOTE:

- 1、The machine uses high-brightness light source, when the machine work, please do not look directly at the lens, so as to avoid glare damage the eyes.
- 2、Because of high operating temperature inside the projector, in case the side and bottom of a cooling vents open, please do not block or cover the ventilation hole, not to the cooling holes or ventilation holes stuffed debris to avoid short circuit, leading to film machine damage and accidents!
- 3、Users should be avoided in the wet, high temperature, vibration, dust, radiation and other adverse environments to use the projector. Move gently! Do not place the projector near heat or hot objects above the object. Do not put it in closed cabinets should be placed on the ventilation!
- 4、Projector to work, the ambient temperature range should be at room temperature. When the ambient temperature is too high or vents closed, the images may appear circular spots and growing, please shut down to prevent damage to LCD!
- 5、Projector lens for the high-precision optical devices. Do not directly touch the glass lenses and prevent the use of foreign touch! The projector when not in use, please cover the lens cover to avoid accidental injury scene. (The lens cap attached with the machine)
- 6、Lightning thunderstorm severe weather or voltage fluctuations, in order to avoid the damage inside the machine, please shut down.
- 7、Projector by the sophisticated electronic components and optical components, the user may lead to damage their demolition. If the projector abnormal, please contact the dealer or the company! Such as unauthorized disassembly of the machine, you will not enjoy my company provide free warranty service !

## Product Details

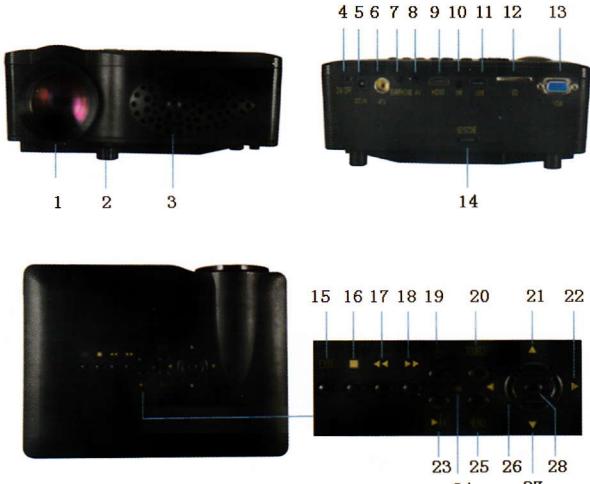

1.Focus lens

2.Level-stand adjustment

3.Hot winds output ventilation

4.ON/OFF

5.DC IN

6.ATV, optional

7.EARPHONE

8.AV

9.HDMI

10.IR

11.USB

12.SD

13.VGA

14.KEYSTONE

15.EXIT

16.PLAY/PAUSE

17.Fast backward

18.Fast forward

19.POWER

20.Sources

21.UP

22.RIGHT

23.Play

24.Indicating light


25.MENU

26.LEFT

27.DOWN

28.ENTER

## Remote control instruction

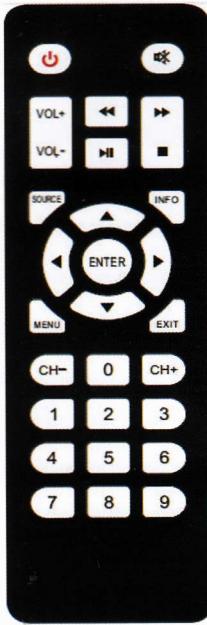

POWER	Turn on/off
MUTE	MUTE
VOL+/-	Volume to add and
►	Fase forward
◀	Fase backward
▶▶	Play/Pause
■	Pause
SOURCE	Source
INFO	Display information
▲	UP
▼	Down
◀	Left
▶	Right
MENU	Menu
EXIT	Exit
CH+/-	Channel to add and



Do not mix use old and new batteries.

If remote is not used for long time, Batteries should be removed.

Remote should target at the IR receiver.

## Operation Instruction

### 1.Startup and Shutdown


Connect the projector to DC Terminal of the power adaptor; switch on the power adaptor and the projector will be in standby;

Startup: press down POWER key or POWER key on the Remote Control; the power indicator light will be shining; and the projector starts to serve;

Shutdown: press the POWER key on the projector or Remote Control, and the projector will shutdown.

### 2.Multimedia boot screen

If choose USB or SD input, after open screen, a boot screen (as follows showed) for multimedia will be showed.

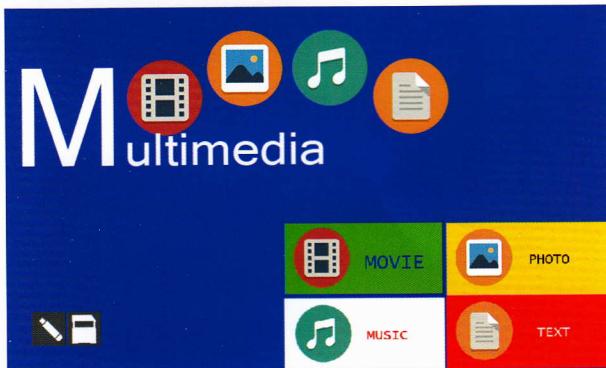


### 3. Image focusing

Put the projector with lens vertical to the wall or screen, turn on the projector and then adjust focus adjustment handle until the picture is clear.

#### 4. Keystone Correction


If projector is not vertically or horizontally placed, the image will present trapezoid twist. Keystone correction technology refers to a way normalizing the twisted image via digital or optical technology.

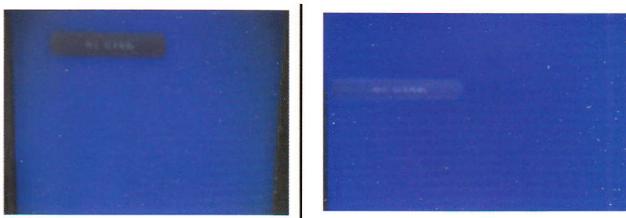

## Menu Operation


### 1. Signal Channel Menu

1.1 Remote Control Operation Press the "Source" key on the Remote Control; callout the input source menu (see figure on left); press the "Source" key again (or up \down key); choose the signal input channel as required; and press "ok" key or "Left or Right" key; 1.2 Operation of key on the projector body Press the "SOURCE" key on the projector; callout the signal Source menu; press "UP", "DOWN" key to choose the signal input channel as required; press "OK" key to confirm or "Left" "Rig ht" key; Warm tips: if it is connected to the computer lab, the computer output should be converted as well, in addition to the converting of the projector.

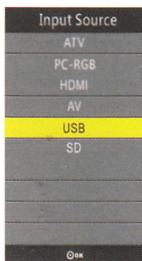

### 2. Multimedia Menu

2.1 When the USB or SD channel is called out, the following operating interface will be presented. To play the video file, please choose the "MOVIE" first and get into next menu for further selection; To play the audio file, please choose the "MUSIC" first and get into next menu for further selection; To play the image file, please choose the "PHOTO" first and get into next menu for further selection; To play the text file, please choose the "TEXT" first and get into next menu for further selection; if you want to play certain files, press enter to confirm, and then press "bofang" to display.

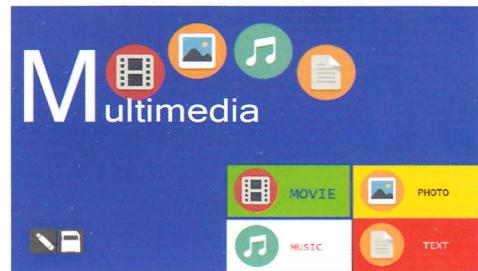

2.2 While play videos by USB or SD, press "OK" button, then we can get a submenu. By using this menu, you can achieve most of the play function you need.(as shown picture)



### 3. Main Menu Settings


#### 3.1 Picture Submenu

##### 3.1.1 Remote Control Operation

Press the "MENU" key on the Remote Control to callout the Main Menu; press " " key to callout the Picture Submenu; press " " key to select the items required to adjust and press "OK" key to callout the setting.

### 3.1.2 Operation of Keys on Projector

Press "MENU" key to callout the Main Menu; press the "V\|V+"key to callout Picture Submenu; Press "CH+", CH-"to select the items required to adjust and press "OK" key to callout the setting.

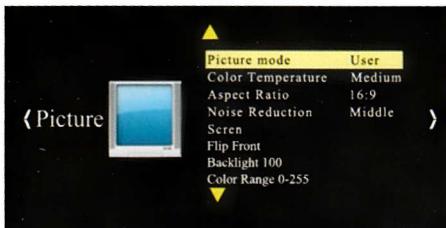

### 3.2 Sound Submenu


#### 3.2.1 Remote Control Operation

Press the "MENU" key on the Remote Control to callout the Main Menu; press "SOUND" key to callout the Sound Submenu; press "OK" key to select the items required to adjust and press "OK" key to callout the setting.

#### 3.2.2 Operation of Keys on Projector

Press "MENU" key to callout the Main Menu; press the "V\|V+"key to callout Sound Submenu; Press "CH+", CH-"to select the items required to adjust and press "OK" key to callout the setting.

Under the SOUND, you could set up the Sound Mode, Balance, Auto Volume off, Surround Sound Off, SPDIF MODE PCM and EQ.

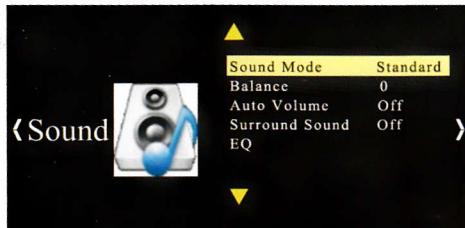

### 3.3 Time Submenu

Press "Menu" on the remote control, or "菜单" on the projector to get OSD, and then press "L/F" until you get time menu, then Use "上/下" to choose the submenu you need to adjust.


Under the TIME, you could set up the Clock, Off Time , On Time , Sleep Timer and Auto Sleep .



### 3.4 OPTION Setting

Press "Menu" on the remote control, or "菜单" on the projector to get OSD, and then press "L/F" until you get Option menu, then Use "上/下" to choose the submenu you need to adjust.

Under OPTION, you could set up the OSD Language English, Restore Factory Default, Rotate 1 and Osd Duration off.

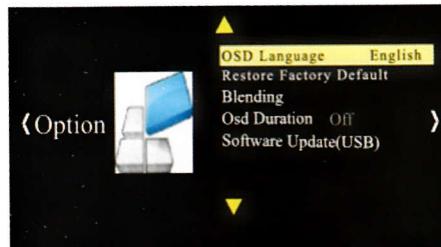

## Trouble Shooting

Problem	The possible causes
1.When turn on the power switch,the indicator light does not work	* Power cable did not connect well. * The power switch fuse is broken.
2.The remote control can not turn on the projector	* The power switch is turned off * The remote control has no batteries or the Batteries ate low * The remote control did not aim at the IR point
3.NoImage	* the choice ofthe input source may not be correct * no input signal * the input cable is not connected * ifunder PC mode. the PC output frequency is not 50-60Hz. Make sure that the PC output is connected with the projector.
4.Auto-off afteruse some times	* the projector venti1ation is blocked the * voltage is not stable * the projector is over heat .Check ifthe fan is broken

## Accessories List

Please check the full contains of accessories in the box after opening.

### Accessories List

Projector	.....	1pc
Remote control	.....	1pc
Adapter	.....	1pc
AV signal cable	.....	1pc
Manual(include Warranty card)	.....	1pc

### Purchasable accessories

1.Projector screen

2.Ceiling mount

# **Warranty card**

**Thank you for reading this manual to detail. If there are questions,  
please contact the company, we will provide you with quality services.  
I hope our products can give your life to bring joy!**

VALID FROM THE DATE OF PURCHASE
DAY/MONTH/YEAR
NAME
ADDRESS
PHONE
SERIES NO.
DISTRIBUTOR
SIGNATURE OR STAMP
ADDRESS
PHONE
Maintenance records

## Note:

1. The guarantee is not valid unless the card is correctly filled out.  
So please ask your distributor shop to fill here.
2. Guarantee card will not be re-issued if lost.

## TERMS

1. The guarantee is valid for one year for the projector dating from the date of purchase listed in the purchase receipt. It covers any faulty operation caused by defects in the manufacture of the projector.
2. This card and the purchase receipt should be presented when requesting a repair.
3. The guarantee does not apply to damages caused by
  - A. Misoperation, or any self reconstruction attempts.
  - B. Careless or improper placement, installation, transportation or handling of the unit after the purchase.
  - C. Fire, earthquake or other natural disasters, voltage changes in the AC-current, or operation that is different from that described in the Instruction Manual.
4. The guarantee does not apply, if the guarantee card is not properly filled out or cannot be presented.