









S 6



User Guide

Keys functions description















Functions Description	
1. Menu key	10. APK KEY
2. Home key/Answer Key	11. Volume up/down key
3. Back key	12. Camera/Torch key
4. USB jack	13. Rear camera
5. Proximity Sensor	14. Flashlight
6. Front camera	15. Rear cover screw
7. Power key/Reset	16. Hand strap insert
8. Earphone jack	17. Speaker
9. SOS key	





- | | |
|-------------------|--|
| Make a call | Phone(or in the standby mode)
Select  to enter dial screen
Input the number
Press  icon to dial |
| End a call | Press  icon |
| Add a new contact | Phonebook
Press  to add new contact
Edit
When finished editing, select Done to save |
| Send a msg | Messaging
Press  to write message
Edit recipient or select contacts from phonebook
Edit content
Once done typing, press  to send |
| Browser | Browser
Input URL
Select Go to open web page |
| Music | Music
touch & hold a listing (artist, albums, songs, or playlists)
Select a song to play |
| FM radio | Plug in your earphone
FM radio |

Take a picture	Camera Press  to switch to camcorder Press  to take pictures
Turn on Bluetooth	Settings Select Bluetooth to turn on/off
Wi-Fi	Settings Select Wi-Fi to turn on/off Press Wi-Fi Select one access point(AP) Connect(Input the password if the AP is locked)
Camera/torch key	When screen is locked, long press the key for 3 seconds to light the torch on Short press the key to enter Camera
SOS key	When the phone is on, long press the key for 3 seconds to enter SOS emergency call function

Accessories in package	
Phone	1 piece
Travel charger	1 piece
Headset	1 piece
USB Cable	1 piece

Safety Instructions

	Do not make or receive handheld calls while driving, and never text while driving.		Do not use at gas stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause choking.		Avoid contact with magnetic fields.
	Your phone can produce a loud sound.		Avoid extreme temperatures.
	Keep away from pacemakers and other electronic medical devices.		Switch off when near explosive materials or liquids.
	Switch off in hospitals and other medical facilities when requested.		Do not rely on your phone for emergency communications.

	Switch off in aircraft and airports when requested.		Do not disassemble your phone.
	Please do not dispose of used batteries in the trash. The proper disposal of your waste battery will help to protect the environment and human health.		Please use only authentic accessories with this phone, and do not use the battery with any other type of phone.

Warning

1. Please make sure the USB plug and earphone plug is plugged and tighten the battery cover screw before waterproof testing.
2. The waterproof function may be affected after the drop devastatingly.
3. Prominent Atmosphere pressure changing may cause the receiver/horn/mic unworking or noising, open the USB plug and earphone plug can restore the functions immediately.
4. Submerge the phone may affect the speaker/mic/hearing, cleaning the water will recover the functions.