



# USER GUIDE

## CONQUEST S8

[www.conquest-phone.com](http://www.conquest-phone.com)

## KEYS FUNCTIONS DESCRIPTION











- 1. Proximity Sensor
- 2. Volume +
- 3. Volume -
- 4. Customizable key
- 5. Menu key
- 6. Home key/Answer Key
- 7. Infrared Remote
- 8. Front camera
- 9. Rear camera
- 10. Docking Charger Connector
- 11. USB Jack /Earphone Jack
- 12. Back key
- 13. Wrist Strap Buckle
- 14. Power key/Reset
- 15. SIM & SD cards cover
- 16. Intercom key
- 17. RESET
- 18. Camera/Torch Key
- 19. Intercom antenna port

## SAFETY INSTRUCTIONS

	Do not make or receive handheld calls while driving, and never text while driving.		Do not use at gas stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause choking.		Avoid contacting with with magnetic fields
	Your phone can produce a loud sound.		Avoid extreme temperatures.
	Keep away from pacemakers and other electronic medical devices.		Switch off when near explosive materials or liquids.
	Switch off in hospitals and other medical facilities when requested.		Do not rely on your phone for emergency communications.
	Switch off in aircraft and airports when requested.		Do not disassemble your phone.
	Please do not dispose of used batteries in the trash. The proper disposal of your waste battery will help to protect the environment and human health.		Please use only authentic accessories with this phone, and do not use the battery with any other type of phone.

## FUNCTION DESCRIPTION

Make a call	Phone(or in the standby mode Select  to enter dial screen) Input the number Press  icon to dial
End a call	Press  icon,power key can terminate the call
Add a new contact	Press  to add new contact Edit When finished editing, select Done to save
Send a msg	Press  to write message Edit recipient or select contacts from phonebook Edit content Once done typing, press  to send
Browser	Input URL Select Go to open web page
Music	touch & hold a listing (artist, albums, songs, or playlists) Select a song to play
FM radio	Plug in your earphone FM radio
Take a picture	Press  to switch to camcorder Press  to take pictures
Turn on Bluetooth	Settings Select Bluetooth to turn on/off
Wi-Fi	Settings Select Wi-Fi to turn on/off Press Wi-Fi Select one access point(AP) Connect(Input the password if the AP is locked)

### Camera/ torch key

Short press into the shooting mode, then press the camera  
Long press to open the torch, long press again to close the torch.

## WARNING

1. Please make sure the USB Jack/earphone Jack cover is well plugged in and SIM cards/SD card cover is screwed tightly before making waterproof testing.
2. The waterproof function may be affected after the drop devastatingly.
3. Prominent atmospheric pressure changing may cause the receiver/speaker/microphone unworking or noising, open the USB jack/earphone jack cover can restore the functions immediately.
4. Submerge the phone may affect the receiver/speaker/microphone, swing the phone to dry the receiver/speaker/microphone will recover the functions.



官方微信公众号

## ACCESSORIES IN PACKAGE

Phone .....	1
Travel charger .....	1
USB Cable .....	1
Antenna .....	1