

Sports Cam

Waterproof · HD 720P



1.5-inch
LCD



140°
Wide Angle
Lens



720P
H.264
High
Definition

 
 


Waterproof
to 30m





1.5 Hours

Features

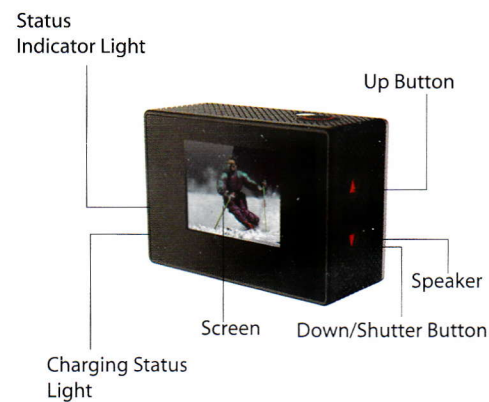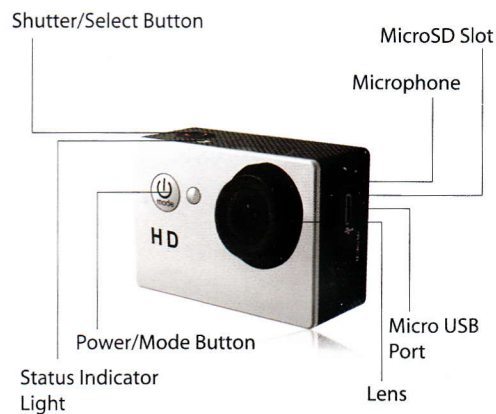

Waterproof Housing

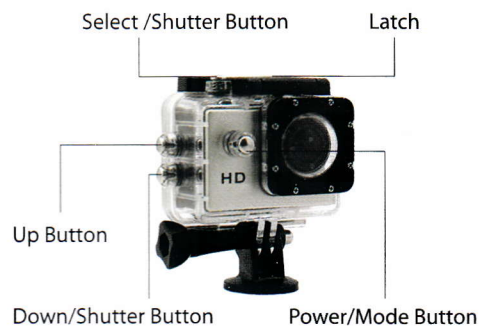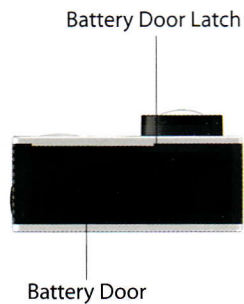  

Accessories



Waterproof
Housing



Handle Bar/
Pole Mount



Clip 1



Mount 1



Mount 2



Mount 3



Mount 4



Bandages



Adhesives



USB Cable



 
Battery



Manual

Mounting Your Camera

Attach your camera to helmets, gear and equipment.

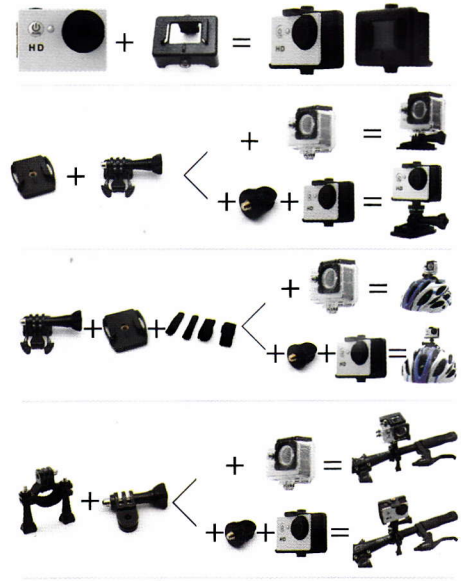

- 2) Date Stamp: Off/Date & Time
- 3) Loop Record
- 4) Exposure: +-2.0/+1.7/+1.3/+1.0/+0.7/+0.3/0

b. Photo Settings:



- 1) Resolution: 1M/2M/3M/5M
- 2) Single Shot: On/Off
- 3) Treble Shot (Burst Photo 3 photos): On/Off
- 4) Selftimer (Time Lapse): OFF/5 Seconds/ 10 Seconds/ Double Shoot a series of photos at set time intervals
- 5) Continuous (Burst Photo): 2, 3, 5, 10, 20, 30 or 60 second intervals

c. System Settings:



Hello

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

Getting Started

Turn camera ON and repeatedly press the Power/Mode Button to cycle through camera modes.

1. Video (720p 30fps/VGA 30fps)



Record Video

2. Playback (Video or JPEG)



View your videos and photos on the screen

3. Settings (Video Settings, Photo Settings, and System Settings)

Repeatedly press the Shutter/Select Button to cycle through three settings. Use the Up or Down Button to cycle through the Settings options and press Shutter/Select to select desired option.

a. Video Settings:



1) Movie Size: 720p 30fps / VGA(640*480) 30fps

MicroSD Card	720p 30fps	VGA 30fps
32 GB	320 mins	480 mins
16 GB	160 mins	240 mins
8 GB	80 mins	120 mins
4 GB	40 mins	60 mins

Storage/MicroSD Cards

This camera is compatible with 4GB, 16GB, and 32GB capacity microSD, microSDHC, and microSDXC memory cards. You must use a microSD card with a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

Charging the Battery

If recording is occurring when battery reaches 0%, the camera will save the file and power OFF. To charge the battery:

- 1. Connect the camera to a computer or USB power supply.
- 2. The Charging Status Light remains ON while the battery is charging.
- 3. The Charging Status Light will turn OFF when the battery is fully charged.

Capturing Video + Photos

Press the Shutter/Select Button to start/stop recording. Press the Down/Shutter Button to take a picture. You can also change video and photo settings in the Settings menu.