

Foreword

Welcome to VKWORLD and thanks for purchasing our products. For the best performance, we recommend you read the manual carefully, especially the "safety instructions". This manual just simple guide for your reference, if you have any doubt, please contact us. All rights reserved by VKWORLD. vkworld official: www.vkworld.cc

To know the phone

Home key: Press to back to the main interface of default.
Main key: Press to see the current interface
Return key: Return to the last interface
Power button: turn on/off the screen; press long to turn on/off the phone
Volume key+: increase the volume
Volume key-: reduce the volume
Screen shot: press volume key- and power key together

Starting to use

Insert the SIM

The is phone supports double SIM double standby. GSM/WCDMA
Insert the SIM/MicroSD card: before doing this, please make sure the device has shut down.
Pay attention to some SIM cards that mobile phones may not match, please consult the service provider to replace.
Make sure the phone is shut down when you open the back and take out the battery.

Charge battery

You'd better use original accessories to charge, or you shall take the responsibility if any damage caused by any improper charger.
Pay attention: Initial several times to use new battery, please after full charge and full discharge for several times, and for 10 hours, in order to achieve the best performance.

Application menu

Open and switching applications
1. Open: click its icon on the main screen.
2. Return to the main screen: click the Home button.
3. Quickly switch between applications that are using; Multitasking also allows some applications running in the background.
4. Click the Home button for 3 seconds for recently used application.

Run

1. Drag to move up or down to scroll the screen;
2. Drag to move finger to scroll will not select or activate any content on the screen.

Dial

Make and receive calls.

Contact

In "contacts" screen, quick to can make a phone call, to create a new E-mail, message, find the position of the other, and perform more operations.

Call logs

You can view your recent call situation.
Received calls: show all answered calls.
Dialed numbers: show all dialed calls.
Rejected calls: show all refused calls.
Missed calls: show all missed calls.

Backup and restore

Need to insert the TF card to backups of data and application.

E-Mail

Set up email account
Check and read email
In the Mail, "mailbox" screen allows you to quickly access all of your email in box and other. When you open the mail, E-mail will retrieve and display the latest, and at the top of the screen shows the number of unread mail

Browser

View the web page XE "Call:Making a call" ly "C.M" li

Google

Type any character to find information/use

Search

Type any character to find information/use

Multimedia

Music

With "music" application to enjoy music collection. According to the artist, album, song.

Camera

This machine is divided into front and back camera. Mainly on the back of the camera. You can use the screen to control the camera and view your photos or video. Gallery to view images

Video player

Use to play the video

Video recorder

Set the parameter of DV and then use this function

Sound recorder

Select this feature, press the center button for the recording
Check the file: view the current recording file

FM radio

Search channels

Messages

Send and receive messages
The messaging is a network service. Sending and receiving TEXT and MMS can only be used if the service is proposed by your network operator.

Calendar

The "calendar" allows you to access your calendar, and events.
View calendar
Light switch display mode: press the "day", "week", "month", "schedule".
By date show that slide up or down to see the one day of weekly events in view:
View: gently by one day to see the weekly event
View: to one day to see the events of the month.
Schedule shows: all the dates and events will appear in the scrolling list.

Add an Event

You can directly in the machine to create and update the calendar events, clicking on add a new activity.

File Manager

Can view the phone and SD card storage file, insert the USB line, mobile phone can be stored and stored in the SD card files
In the application of the website such as mobile Internet or MP3 and pictures will be shown in the download
Downloads

clock

You can view the world clock, alarm clock, stopwatch, timer

Play store

You can download it from play store that is directly applied to your phone.

Other functions

Count down

Mobile phone built-in countdown function. Set a time, you can click on the bottom of the screen icon in the start the countdown, time arrives, the phone automatically.

Seconds counter

Use a stopwatch to event timing: lightly press "stopwatch" select "start" to enable a stopwatch.
To record the time back and forth, back and forth in each light after press "would". If you want to suspend a stopwatch, please press "stop" light. Gently press "start" to continue.
If a stopwatch is to be reset, please light when a stopwatch to suspend the press the "reset".

Calculator

Light according to the number and function in the "calculator", just like you use the standard calculator. To add, subtract, multiply or divide button, the button will twist, to let you know to perform operations. . Recorded voice memos, gently press "play" button, then press "play" to suspend play.

Settings

To access the Settings menu: in the menu mode

Network

Wireless networks
SIM management
Can be set up single or double card master card and set the machine operation
Wi-Fi: Open or close the WiFi function

Bluetooth

Within 10 meters, you can set up a wireless connection between electronic devices via Bluetooth. to send pictures, video, digital data, etc.

Audio profiles

You can select the desired scene mode according to need. Scene mode option: standard, silent, meeting, outdoor model, this factory has done several patterns and Settings, you can customize the Settings.
1. Vibration: the bell won't ring
2. Volume: can be adjusted by rolling up and down the ball path to ring the bell and the volume of the sound
3. Ringtone: to set the phone ring
4. Notification ringtone: can be set to notify the bell
5. Choose sound: operation Settings screen to choose whether to play sounds
6. Prompt: screen lock lock and unlock the screen broadcast voice switch
7. Touch: If there is a touch, switch can touch screen

Display

Set the wallpaper
Automatic rotary screen
Set luminance
Font size
Dormancy: the mobile phone is not operating in a set of time automatically cut off screen

Storage

Show a mobile phone internal storage capacity and storage capacity of the SD card

Battery

Show a mobile phone battery has been used time and specific power consumption

Apps

To manage your applications, to delete the machine application, mobile storage location.
Location information access
Can set access my location information
Positioning system
A virtual private network Settings, you can set up wireless network or using a GPS satellite. At the same time open A - GPS can quickly locate your current position

Security

Screen lock: lock screen set to slide/voice unlocked/design/PIN/combination lock.
Main information: edit the information, in the locked state displays edit content.
Unknown sources: open allows installing applications from unknown sources, otherwise not Certificate of the credential storage: can be installed from the SD card.
Language and input method.
Can set the phone language and input method.

Backup & reset

Reset the phone to default.
Restore the factory Settings: remove all the data on the phone.

Accounts

Background data: when binding Google account or company account, the application can be automatically synchronized calendar calendar, contacts, email in the Google account.
Automatic synchronization: when binding account application will synchronize data.
E-mail: show email account

About phone

Show a mobile phone version of the system and hardware information

Battery maintenance

1. This phone is a rechargeable battery as a power source. When power weak, please send the battery. To maintain battery life, the best will run out the battery before charging ;
2. When the battery charger is not used, please with the power supply source separation. Do not connect the charger with battery more than a week, over charge will shorten the battery life ;
3. Temperature influence the limits of the battery to charge. So, before charging the battery may need to be cool or warm. If the battery more than 40 degrees Celsius temperature, the battery can't charge;
4. Temperature influence the limits of the battery to charge. So, before charging the battery may need to be cool or warm. If the battery more than 40 degrees Celsius temperature, the battery can't charge ;
5. Do not use the damaged cells ;
6. Put the battery in the extremely cold or hot place can lead to shorten the battery life, battery exposed to cold or hot place may lead to can't normal mobile phone function, even rushed out battery ;
7. Please don't put battery in the fire! Please according to the local regulation to deal with waste batteries.

Safety Instruction in multi-linguages

Please read this safety information carefully so that you can use your phone in complete safety

- Children :** Be very careful with children and your phone. A mobile phone contains a number of detachable parts. Exercise great care when children are in close proximity to the phone. The phone contains small parts that could be swallowed or cause choking. If your phone is equipped with a camera or lighting device, do not use it too near children or animals.
- Hearing :** Prolonged listening at full power using a lightweight headset or headphones can damage your hearing. Reduce the volume to the lowest possible level when listening to music or conversations. Avoid high volumes over extended periods.
- Driving :** Exercise care when driving. Driving requires maximum attention at all times in order to minimise the risk of accidents. Using a mobile phone can distract the user and result in an accident. You must fully comply with the local regulations and laws in force regarding the use of cell phones whilst driving. You are not allowed to use the phone whilst driving. A hands-free kit should not be regarded as an alternative solution. Flying : Turn your phone off when flying. Remember to turn your phone off when you are in a plane (GSM + Bluetooth) as it may cause interference.
- Hospitals :** Turn your phone off near any medical devices. It is extremely dangerous to leave a phone switched on near medical devices as it may cause interference. You must observe any instructions or warnings in hospitals and treatment centres. Remember to turn your phone off in service stations. Do not use your device in a petrol station near fuel. It is dangerous to use your phone inside a professional garage.
- Electronic implants and pace makers :** Users who wear a pacemaker or who are fitted with an electronic implant must hold the phone on the opposite side to their implant as a precaution when making a call. If you notice that your phone is causing interference with pacemaker, switch it off immediately and contact the manufacturer of the pacemaker for advice on what action to take.
- Fire hazard :** Do not leave your device near heat sources such as radiators or cookers. Do not leave your phone charging near flammable materials as there is a real risk of fire.
- Contact with liquid :** Do not expose the phone to liquid or touch it with wet hands - any damage caused by water may be irreparable.
- Use only VKWORLD-approved accessories.** The use of unauthorised accessories may damage your phone or cause a safety risk.
- Do not destroy the batteries and chargers.** Never use a battery or charger that has been damaged. Keep batteries away from magnetic objects as the latter might cause a short-circuit between the positive and negative terminals of your batteries and permanently destroy the battery or phone. As a general rule, you should not expose the batteries to very high or low temperatures (below 0°C or above 45°C). Differences in temperature may reduce battery autonomy and service life.
- Shocks and impact :** Handle and use your phone with the utmost care. Protect your phone : shocks and impact may damage it. Some parts of your phone are made from glass and might break if the phone is dropped or is subject to severe impact. Avoid dropping your phone. Do not touch the screen with sharp objects.
- Electric shock :** Do not try to dismantle your phone as there is a very real risk of electric shock.
- Maintenance :** If you want to clean your handset, use a dry cloth (do not use a solvent, such as benzene, or alcohol).
- Recharge your phone in a well ventilated area.** Do not recharge your device when it is resting on a soft surface.
- Damage to magnetic strips :** keep your phone away from credit cards as they may damage the data on the magnetic strips.

[ES] Seguridad

Para utilizar este teléfono en plenas condiciones de seguridad, lee atentamente las siguientes consignas de seguridad.

- Niños :** Presta especial atención a los niños. Los teléfonos móviles contienen numerosas piezas sueltas, por lo que deberás prestar especial atención cuando un niño esté en contacto con un teléfono móvil. Este producto contiene pequeñas piezas que pueden ser ingeridas o provocar la asfixia en caso de ingestión accidental. Si tu teléfono cuenta con cámara fotográfica o un dispositivo de iluminación, no los utilices demasiado cerca de los ojos de niños o de animales.
- Audición :** La escucha prolongada a fuerte potencia a través de cascos o auriculares puede provocar daños en la audición. Trata de regular el volumen al mínimo necesario cuando estés escuchando de música o durante una llamada. Evita la escucha prolongada a volumen elevado.
- Al volante :** Se cauto mientras conduces. La conducción exige una atención extrema e ininterrumpida, reduciéndose así el riesgo de accidentes. Utilizar un teléfono móvil puede distraer la atención del usuario y conducirle a un accidente. Es esencial respetar escrupulosamente la legislación y las normativas locales en vigor en materia de utilización de teléfonos móviles mientras se conduce. Por consiguiente está prohibido hacer uso de teléfono conduciendo, y la utilización de un kit manos libres no puede considerarse una solución. En avión : Apaga tu teléfono en el avión. No olvides a pagar tu teléfono cuando te encuentres en un avión (GSM + Bluetooth), ya que podrá producirse interferencias.
- En hospitales :** Apaga tu teléfono cuando haya próximo cualquier dispositivo médico. Es muy peligroso poner en marcha un teléfono habiendo próximo un dispositivo médico. Esto puede provocar interferencias con dichos dispositivos. Por consiguiente, han de respetarse todas las consignas y avisos en hospitales o centros de salud. No olvides apagar tu teléfono en las estaciones de servicio. No utilices tu móvil en una gasolinera, en la proximidad de combustibles. Es peligroso utilizar tu teléfono en el interior de un taller de reparación.
- Implantes electrónicos y marcapasos :** Las personas que tengan un implante electrónico o un marcapasos deben adoptar la precaución de colocar el teléfono en el costado opuesto al implante durante una llamada. Si percibes que tu teléfono provoca interferencias con un marcapasos, apaga inmediatamente el teléfono y ponte en contacto con el fabricante del marcapasos o con tu médico con el fin de informarte sobre qué conducta adoptar.
- Riesgos de incendio :** No dejes tu teléfono próximo a fuentes de calor como un radiador o cocina de gas. No recargues tu teléfono cerca de materias inflamables (el riesgo de incendio es incuestionable).
- Contacto con líquidos :** Evita todo contacto del teléfono con líquidos o con manos mojadas. El agua puede provocar daños irreparables.
- Utiliza exclusivamente accesorios homologados por VKWORLD.** La utilización de accesorios no homologados puede deteriorar tu teléfono o provocar riesgos.
- No manipules las baterías ni los cargadores.** Nunca utilices una batería o cargador dañados. No pongas en contacto con las baterías objetos magnéticos, ya que existiría riesgo de cortocircuito entre los bornes + y - de las baterías así como de dañar la batería o el teléfono de forma irremediable. En términos generales, no expongas las baterías a temperaturas muy bajas o muy elevadas (inferiores a 0°C o superiores a 45°C). Esas diferencias de temperatura pueden reducir la autonomía y vida de funcionamiento de las baterías.
- Caidas o impactos.** Utiliza y maneja tu teléfono con el mayor cuidado. Proteje tu teléfono de caídas o impactos que pudieran dañarlo. Algunos elementos de tu teléfono son de vidrio, por lo que podrían romperse en caso de caída o de fuertes impactos. Evita que se le pueda caer tu teléfono. Nunca toques la pantalla con objetos puntiagudos.
- Descarga eléctrica :** No intentes desmontar tu teléfono, podría darte una descarga eléctrica.
- Mantenimiento.** Si deseas limpiar tu teléfono, utiliza un trapo seco (nunca disolventes, como el benceno, ni alcohol).
- Recarga tu teléfono en una zona bien ventilada.** No lo recargues si está apoyado sobre una tela.
- Alteración de las bandas magnéticas :** No coloques tu teléfono al lado de tarjetas de crédito, ya que las bandas magnéticas de éstas podrían resultar dañadas y por tanto sus datos.

[PT] Instruções de segurança

Para utilizar este telefone com toda a segurança, leia atentamente as instruções de segurança.

- Crianças :** Esteja muito atento em relação às crianças. Um telefone móvel contém várias peças soltas. Por isso, convém ter cuidado quando uma criança está em contacto com um telefone móvel. O produto contém peças pequenas que podem ser ingeridas ou provocar a sufocação em caso de ingestão. Caso o seu aparelho tenha uma máquina fotográfica ou um dispositivo de iluminação, não utilize demasiado perto dos olhos das crianças ou dos animais.
- Audição :** Quando o som está na potência máxima, a escuta prolongada através de auscultadores leves pode provocar danos na sua audição. Reduza o volume até ao mínimo necessário quando ouvir música ou uma conversa. Evite os volumes elevados durante um período longo.
- Ao volante :** Tenha cuidado quando conduz. A condução exige uma atenção extrema e regular para a evitar os máximos riscos de acidente. A utilização de um telefone móvel pode distrair o seu utilizador e levá-lo a provocar um acidente. É necessário respeitar escrupulosamente a legislação e as regulamentações locais em vigor relativas às restrições de utilização de telefones sem fios ao volante. Por isso, é proibido telefonar quando se estiver a conduzir e a utilização de um kit de mãos livres não pode ser considerada uma solução. No avião : Desligue o seu telefone no avião. Pense em desligar o seu telefone quando estiver num avião (GSM + Bluetooth). Ele pode provocar interferências.
- Meio hospitalar :** Desligue o seu telefone se estiver perto de um aparelho médico. É muito perigoso ligar um telefone perto de um aparelho médico. Ele pode provocar interferências com aparelhos médicos. Por isso, convém respeitar todas as instruções e avisos nos hospitais ou centros de saúde. Pense em desligar o seu telefone nas estações de serviço. Não utilize o seu aparelho numa estação de serviço, perto de combustíveis. É perigoso utilizar o seu telefone no interior de uma garagem profissional.
- Implantes electrónicos e estimuladores cardíacos.** As pessoas que têm um implante electrónico ou um estimulador cardíaco devem por precaução posicionar o telefone no lado oposto ao do implante durante uma chamada. Se verificar que o seu aparelho provoca interferências com um estimulador cardíaco, desligue imediatamente o telefone e contacte o fabricante do estimulador cardíaco para se informar sobre os procedimentos a adoptar.
- Riscos de incêndio.** Não deixe o seu aparelho perto de fontes de calor como um radiador ou um fogão. Não carregue o seu telefone perto de matérias inflamáveis (os riscos de incêndio são reais).
- Contacto com líquidos.** Não ponha o telefone em contacto com líquidos, nem com as mãos molhadas. Todos os danos provocados pela água podem ser irreversíveis.
- Utilize exclusivamente os acessórios homologados pela VKWORLD.** A utilização de acessórios não homologados pode deteriorar o seu telefone ou provocar riscos.
- Não destrua as baterias e os carregadores.** Nunca utilize uma bateria ou um carregador danificado. Não ponha baterias em contacto com objetos magnéticos, devido ao risco de curto-circuito entre os terminais positivo e negativo da bateria e de destruir definitivamente a bateria ou o telefone. De uma maneira geral, não deve expor as baterias a temperaturas muito baixas ou muito elevadas (inferiores a 0°C ou superiores a 45°C). Estas diferenças de temperatura podem reduzir a autonomia e o tempo de vida das baterias.
- Choques ou impactos.** Utilize e manuseie o seu telefone com o máximo cuidado. Proteja o seu telefone dos choques ou impactos, que podem danificá-lo. Algumas peças do seu telefone são de vidro e podem quebrar-se em caso de queda ou de fortes impactos. Não toque no ecrã com um objecto pontiagudo.
- Descarga eléctrica :** Não tente desmontar o seu telefone. Os riscos de descarga eléctrica são reais.
- Conservação e limpeza :** se quiser limpar o seu aparelho, utilize um pano seco (sem dissolventes, como o benzeno, ou álcool).
- Recarregue o seu telefone numa zona bem arejada.** Não recarregue o seu aparelho se ele estiver em cima de um tecido.
- Alteração das bandas magnéticas.** Não coloque o seu telefone ao lado de um cartão de crédito, pois isso pode danificar os dados das bandas magnéticas.