

The User Manual

Foreword

Welcome to VKWORLD and thanks for purchasing our products. For the best performance, we recommend you read the manual carefully, especially the "safety instructions". This manual just simple guide for your reference, if you have any doubt, please contact us.

All rights reserved by VKWORLD.
vkworld official: www.vkworld.cc

Before using the phone, please read the "safety warnings and precautions", and then use the phone correctly. Safety warnings and precautions to prevent damage to the human body and property.

The following signs indicated that the extent of the danger and damage may be in the case of non-compliance with safety precautions.

"Danger" (DANGER) indicates that incorrect operation will cause serious accidents or failures.

"Warning" (WARNING) indicates that incorrect operation may cause serious accidents or failures.

"Caution" (CAUTION) indicates that incorrect operation may cause an accident or malfunction.

1.2 before using the attention

The mobile phone is to call the use of radio waves. Where the radio is not covered, or even within the range of its coverage, the electric wave propagation conditions are relatively harsh (e.g., behind the building's back or metal doors, electrical appliances, etc.), sometimes causing the call to break off.

The mobile phone is to communicate digitally, confidentiality good call. However, because the phone is the use of radio waves, so can not say absolutely no third from the side of the phone to receive the phone.

The users to use the mobile phone to try to leave the radio and TV far, otherwise it will affect the quality of the telephone receiver.

2 use information

2.1 mobile phone specification

Ring volume 10 levels: Volume 0, volume 1.....Volume 9

Receive the volume of 10 levels: Volume 0, volume 1.....Volume 9

The bell ringing mode in 5 ways: first, mute, vibration, vibration, and vibration after the bell ringing

Ring tones choose a fixed ring tones and more bells

The 500 records of the address book (each of which includes 1 names, 2 phone numbers and email, pictures, rings, and classification; SIM card comes with a phone book (usually 250).

Other game features, calendar, calculator, alarm clock, calendar, speed dialing, key prompt sound, light, time setting, radio, caller display, STK, audio playback, video playback, memos,

Power 3.7 V DC

Duration 2.5 hours - 6 hours

Duration 100 hours - 300 hours

Dimensions are subject to actual ID

Weight is the actual weight (including battery)

Accessory rechargeable battery pack, AC power adapter

* standby time and talk time, with the local specific network situation.

2.2 how to insert a SIM card

Insert the SIM1 card and SIM2 card along the direction of the slot (SIM1 and SIM2), and make sure that the SIM card is inserted. Pay attention to the correct insertion of the SIM card, the card of the golden touch down. (Note: this card for general intelligent card, SIM1 and SIM2 can be inserted into the GSM card).

2.3 battery

2.3.1 battery

Open the battery cover, right after inserting the SIM card, install the battery, then cover and battery cover.

2.3.2 charge

1) plug in the charger into the charger jack and plug the charger into the 220V power outlet. Light is lit, the battery icon flashing, said it is charging; if the shutdown charging, the display of green battery icon flashing.

2) when the charging is completed, the battery icon of the mobile phone stops flashing and the charging end. When the charge to complete the phone screen Show "green".

Tips:

J when the display screen of the mobile phone battery pattern that the battery is about to run out, then please according to the above steps for charging the mobile phone.

The new mobile phone to buy or replace the mobile phone battery, please charge immediately.

The starting condition and receiving charge, will not affect the normal call, but the power consumption will be more than normal, because This will prolong the charging time.

We propose to use the battery completely after charging, it can prolong the use time of the battery.

3 input method

In the input interface, you can enter the number, text or symbols, etc..

3.1.1 Pinyin input method

* press the number keys corresponding to the phonetic alphabet, the corresponding candidate Pinyin will appear in the pre selection area, sometimes appear on the same

The digital multi group Pinyin, can press the * key to select the desired pinyin. Press the right function key to delete a key type from right to left. Sound alphabet.

* when the characters are found in the Chinese character selection area, the number of Chinese characters can be identified by the keys of the key, the right or the lower direction. The Chinese character can be identified by the key or the OK key.

* in your choice of a Chinese character in the screen of the Chinese character selection area will appear in the word, you can choose the direction of the key words of the choice, then click the confirmation or OK key to enter the Chinese character.

For example: Pinyin input method input Chinese characters "Yo", press the number keys 9 and 6 input "Wo", the "I" for the silent screen Recognize Chinese characters, press * key will automatically switch "Yo", click the confirmation or OK key to complete the input.

3.1.2 stroke input method

Stroke input method is according to the direction of the stroke, that is, from top to bottom, from left to right.

The stroke of Chinese characters is divided into 5 basic categories: horizontal, vertical, left, point and fold. These five basic strokes are printed on the corresponding digital keys. The basic strokes and the corresponding control relations are as follows:

Button 12345

Basic stroke horizontal vertical

* press the number keys of the corresponding strokes in the order of Chinese characters, and if you can't determine the number of strokes you can press the "6" key to

*" in place of the stroke. Click the back button to remove the strokes from the right to the left. If you need to enter a punctuation mark, press "***"

Key selection.

Select the word area for the time when you click the back button to clear all the characters on the screen.

* the Chinese characters chosen by the left or right keys or their corresponding

*** key.

* click the confirmation key or the OK key to select the required Chinese character. Example, using the stroke input method input Chinese character "day", in turn by the number keys.

"1" "1" "3" "4". And the input stroke, select "days" in the candidate box, click the confirmation or OK key to finish input.

3.1.3 English and digital input method

General operation method of English input method:

* each key is used to enter a number of characters. Fast repeat button until you need the character to appear, etc.

After moving the subject, then enter the next character.

* "#" button to switch the input method.

* need to enter the space, in the case of capital letters or lowercase letters at a time by a key "0" key, the digital input method can not enter the space.

* click the return key to delete the input character.

Digital input method and input method.

Send a message: send SMS or MMS to the number;

Add contacts: save this number to the phone book;

Add the black list: set the number for the address book list;

Delete: delete the phone records;

All delete: delete all phone records;

Dialed and received calls and calls the same procedure;

Reject a call: the phone number added to the blacklist, the caller will be displayed on the inside of the incoming call.

4.3 Information

Information display format for writing information, inbox, hair pieces box, draftbox has been sent to the mailbox, safe mailbox, commonly used text messages, cell broadcast, voice mail, etc.

4.3.1 write information

New SMS or mms:

1 new text message: write text information (see the "input method" a chapter after sending

1) insert common language: enter the common language list, press up and down arrow keys to select the required language, press OK key to add to the information

2) add contact information: to add the required number to the information into the phone book;

3) to join the expression symbol: This machine provides a variety of facial expressions, and the same function of the mobile phone to fully receive the facial expression.

4) save: save sms.

2 new MMS: can send or receive MMS (multimedia message service) message. Through the MMS service, you can send a message containing a picture, sound and text. When sending MMS messages, your recipient must use a mobile phone with a MMS feature to see your message. Enter the information to write the menu, can be used to operate the menu options: 1) theme: edit the theme of mms.

2) edit content: edit information, pictures and sounds. Have text, add, delete, page timing (1-600) operation:

(1) text: edit the corresponding text content.

(2) add: add a new page, image, audio, video of the operation.

(3) delete: delete the current page (including pictures, audio, video)

(4) on a page: view the contents of the current page.

(5) the next page: view the contents of the next page of the current page.

(6) the page timing (1-600): edit the playback time of the page.

4.3.2 inbox

The short message received from this menu is displayed in a list and arranged in the order of the received time. When there is new information, not read SMS icon will appear in the status bar. If you have a short message, the status bar will display full of information, delete the old short message is conducive to the release of storage space to receive new messages. When a short message list is displayed, press the left function key to access the following menu options.

Reply SMS / MMS: MMS, SMS reply to the sender.

Delete: delete this message.

Call: a direct call or IP call to the sender of a message

Lock: lock the sms. You can't delete it when you do it. At the same time, it can also be canceled lock.

Delete: select the same number to delete.

4.3.3 box

You can see in the case that you have not successfully sent and has been sent to the successful information, you can send a message to edit or send. Specific operations with the inbox.

4.3.4 draft box

The short message is not sent to save this folder, the information in the draft box can be sent, edit, delete, delete all. Specific operations with the inbox

4.3.5 has been sent to the mailbox

When the message is set to open the message has been sent to save the menu, has sent the message is saved in your own hair message box, forwarding, delete, delete, etc.

4.3.6 security box

You can save the rest of the mailbox in the mailbox to secure the mailbox, the

default password is: 1234

4.3.7 commonly used text messages

Users can customize the common language, for the commonly used language, users can delete and edit. Select < > you can customize the common language.

4.3.8 information capacity

Users can view the information SIM card and the phone's memory.

4.4 multimedia

4.4.1 camera

Press OK or do function keys to enter the camera, the camera interface in the right direction can be

To take pictures of the functions of the setting

Photograph: enter the viewfinder interface through the screen viewing of the images, the frame object you want to shoot and press the OK button to shoot. You can do other options after you save it

1) delete: perform this operation to remove the newly saved images.

2) set to Wallpaper: will be saved in the U disk as a picture of the mobile phone background image displayed on the screen.

3) picture view: view all photos. And the photo can be as follows:

(1) a contact head is provided as a contact head;

(2) share the selected picture selection or Bluetooth to send mms.

(3) slide show: all photos will be played in a slide way.

In camera mode, press the right arrow key to enter the menu settings, switch on the lens, the image size, night mode, brightness, contrast, exposure compensation, picture frame mode, multiple burst, white balance, delay self.

Switching camera: front and rear camera.

Size: there are three resolutions for your choice: 1280*960, 240*320, 640*480, the default 1280*960.

White balance: can choose automatic, incandescent lamp, fluorescent lamp, sunny and cloudy.

Delay self timer: can choose to disable, 3 seconds and 10 seconds.

Photograph: enter to the camera viewfinder interface according to the left / right arrow keys to choose "switch to shoot", continue to press the right arrow key choice size (320*240/176*144/160*128/128*96), brightness, contrast, and special effects and like taking pictures, settings and press the OK button to shoot. Left function key stop shooting. Operation please refer to the camera. The following operation can be carried out on the video:

1) new folder: you can put the video into the specified folder.

2) use of video: set to boot animation or off animation.

3) send MMS or Bluetooth to send video.

4) delete: delete the video.

5) details: the file name, date, time, size, position, and resolution of the file can be viewed.

6) edit: rename or copy files.

4.4.2 recorder

Camera video features, operation and camera similar.

4.4.3 music

In the play interface, the key is to achieve the function of each function. Key functions are: in the play interface

To adjust the volume by the key or the key, the left and right keys for the next song, OK key to play, pause function.

4.4.4 video player

The key can adjust the volume at the bottom of the video player interface. In the video playback option, you can enter the column

Table, full screen player, sequence player, setting, file attribute operation. The play list can be used to perform the following operations: play, add video, update list, delete from the list, details, settings (can be set to open / off animation), marking.

4.4.5 radio

Enter the radio menu. Can be entered into the option to set up or view, according to the need. On the radio playing interface, the key is to turn the volume down.

Press OK key to turn off or turn on the radio. In the play interface, the left function key can choose to search and save, radio list, save, manual search, close the

speakers, help.

4.4.6 file management

The file directory and check the storage and storage card in the phone

4.4.7 image

Pictures are pictures and photos, camera and camera settings like; photos select any picture can be set as wallpaper, contact head, with Bluetooth and MMS to share with others, such as the function of.

4.5 charging treasure

The opening and closing of the two options, open to external charging, when charging the met call, telephone, MP3, MP4, charging open these is power function, charging function will be suspended, until the closure of the power function after the re opening; after reboot after charging treasure will default to off, to manually open before they can use external charging.

4.6 tools

4.6.1 calendar

You can view the date, and the current system date is displayed in the calendar table. You can make a new, edit, view, delete, and so on.

4.6.2 alarm clock

The clock in your set time, mobile phone will send out alarm or other vibration to remind you, out.

Body alert is determined according to the alarm clock in the scene mode.

4.6.3 calculator

The mobile phone has a built-in calculator; the keyboard keys corresponding to the keyboard keys, can be used to run the basic calculation. Calculator support scientific notation, support enter a negative number, if you want to enter a negative number as an operand, just prior to the digital input according to the # key input "#". Can be. Press the key to enter the decimal point. Can open and close the flashlight.

4.6.4 micro channel

GSM card can be used to start micro channel chat feature. Generate traffic will generate communication costs.

4.6.5 driving recorder

Operation and video similarity. (Note: you can only use it when you insert a memory card.)

4.6.6 Bluetooth

Can turn off bluetooth. For this machine visibility, matching device, file sharing settings, my mobile phone name and Bluetooth file storage location access settings.

4.6.7 tencent

Can log in QQ and browser. QQ chat with GSM 1 or GSM 2. You can also download the QQ browser to browse the web. (specific cost will be provided by the operator).

4.6.8 eBook

Can be set and read e-books.

4.6.9 clock

You can press left arrow keys in the world time, stopwatch, countdown list switch and set.

4.6.10 recorder

Use this feature to record sound, and can be set to a caller. Recording file support wav.

4.7 set

4.7.1 scenario model

general

1) start: start the selected scenario mode.

2) customize: you can set up various effects according to their own needs.

3) ring settings: you can set the GSM, CDMA, and CDMA, GSM

4) the volume adjustment: you can set up the volume of the incoming ring, the information ring, the call volume, the alarm bell ring and the switch machine.

5) call tip: you can set the GSM and CDMA calls tips. (hint: bell, vibration, mute, first

After the bell ringing, vibration and vibration).

6) information: you can set the GSM and CDMA information tips. (hint: bell, vibration, mute, first After the bell ringing, vibration and vibration).

7) alarm clock: setting alarm clock. (hint: bell, vibration, mute, ringing and vibration)

8) key: set the tone effect. (key: mute, bell 1, bell 2)

9) the screen lock tip: you can set the prompt sound when the screen is locked.

10) low voltage warning tone: you can set the alarm sound when you are setting a low voltage.

11) switch machine voice: you can set whether to open the switch machine when the bell.

12) re Name: modify the name of the scene mode.

Silence, meeting, indoor, outdoor" setting method with general mode.

4.7.2 telephone set

Can be time and date, voice dialing and restore factory settings.

Note: This machine all the default password is 1234

4.7.3 display settings

Set up the wallpaper, screen backlight brightness, key backlight time and automatic lock keyboard settings.

4.7.4 security settings

PIN code, privacy protection and hang up key to the screen for operation and settings.

Note: The PUK1 code is 10 times after the SIM card immediately scrapped.

4.7.5 call setup

Dual card setup

1) standby mode: GSM 1 standby, single GSM 2 standby, dual card dual standby, flight mode and power of choice.

2) reply: this card can choose in the call, Short Message, MMS, Internet, quick dial GSM 1, GSM2

Or tips. Or choose to call and reply reply SMS, MMS and Internet connection is No application of this card reply.

3) set the card slot Name: the name of the card slot two.

Call transfer: unconditional transfer, busy transfer, the transfer of non response, can't arrive at the transfer and cancel all transfer operation and set (set of GSM 1 or GSM 2)

Call restriction of all outgoing calls, all calls, roaming calls, international outgoing calls, international roaming breath, and other operation (only applicable to GSM card through limits outgoing, incoming call to reach the purpose of controlling the phone use. This feature requires network support and application services.

Call waiting: when a call is set up, when a call is made, it is time to receive or call another call, while the first phone is kept and the switch is realized between the two calls.

Other: to call every minute tone, after refusing to return messages, automatic redial and automatic call recording set.

Safety Instruction in multi-languages

Please read this safety information carefully so that you can use your phone in complete safety

1. Children: Be very careful with children and your phone. A mobile phone contains a number of detachable parts. Exercise great care when children are in close proximity to the phone. The phone contains small parts that could be swallowed or cause choking. If your phone is equipped with a camera or lighting device, do not use it too near children or animals.

2. Hearing: Prolonged listening at full power using a lightweight headset or headphones can damage your hearing. Reduce the volume to the lowest possible level when listening to music or conversations. Avoid high volumes over extended periods.

3. Driving: Exercise care when driving. Driving requires maximum attention at all times in order to minimise the risk of accidents. Using a mobile phone can distract the user and result in an accident. You must fully comply with the local regulations and laws in force regarding the use of cell phones whilst driving. You are not allowed to use the phone whilst driving. A hands-free kit should not be regarded as an alternative solution. Flying: Turn your phone off when flying. Remember to turn your phone off when you are in a plane (Gsm + Bluetooth) as it may cause interference.

4. Hospitals: Turn your phone off near any medical devices. It is extremely dangerous to leave a phone switched on near medical devices as it may cause interference. You must observe any instructions or warnings in hospitals and treatment centres. Remember to turn your phone off in service stations. Do not use your device in a petrol station near fuel. It is dangerous to use your phone inside a professional garage.

5. Electronic implants and pace makers : Users who wear a pacemaker or who are fitted with an electronic implant must hold the phone on the opposite side to their implant as a precaution when making a call. If you notice that your phone is causing interference with pacemaker, switch it off immediately and contact the manufacturer of the pacemaker for advice on what action to take.

6. Fire hazard: Do not leave your device near heat sources such as radiators or cookers. Do not leave your phone charging near flammable materials as there is a real risk of fire.

7. Contact with liquid : Do not expose the phone to liquid or touch it with wet hands : any damage caused by water may be irreparable.

8. Use only VKWORLD-approved accessories. The use of unauthorised accessories may damage your phone or cause a safety risk.

9. Do not destroy the batteries and chargers. Never use a battery or charger that has been damaged. keep batteries away from magnetic objects as the latter might cause a short-circuit between the positive and negative terminals of your batteries and permanently destroy the battery or phone. As a general rule, you should not expose the batteries to very high or low temperatures (below 0°C or above 45°C). Differences in temperature may reduce battery autonomy and service life.

10. Shocks and impact : Handle and use your phone with the utmost care. Protect your phone : shocks and impact may damage it. some parts of your phone are made from glass and might break if the phone is dropped or is subject to severe impact. Avoid dropping your phone. Do not touch the screen with sharp objects.

11. Electric shock : Do not try to dismantle your phone as there is a very real risk of electric shock.

12. Maintenance : If you want to clean your handset, use a dry cloth (do not use a solvent, such as benzene, or alcohol).

13. Recharge your phone in a well ventilated area. Do not recharge your device when it is resting on a soft surface.

14. Damage to magnetic strips : keep your phone away from credit cards as they may damage the data on the magnetic strips.

[ES] Seguridad

Para utilizar este teléfono en plenas condiciones de seguridad, lee atentamente las siguientes consignas de seguridad:

1. Niños : Presta especial atención a los niños. Los teléfonos móviles contienen numerosas piezas sueltas, por lo que deberás prestar especial atención cuando estés jugando con tu teléfono. No te permitas ni a tus hijos jugar con esas numerosas piezas que pueden ser ingeridas o provocar la asfixia en caso de ingestión accidental. Si tu teléfono cuenta con cámara fotográfica o un dispositivo de iluminación, no los utilices demasiado cerca de los ojos de niños o de animales.

2. Audición : La escucha prolongada a fuerte potencia a través de cascos o auriculares puede provocar daños en la audición. Trata de regular el volumen al mínimo necesario cuando estés escuchando de música o durante una llamada. Evita la escucha prolongada a volumen elevado.

3. Al volante : se cauto mienrto conduces. La conducción exige una atención extrema e ininterrumpida, reduciéndose así el riesgo de accidentes. Utilizar un teléfono móvil puede distraer la atención del usuario y conducirle a un accidente. Es esencial respetar estrictamente la legislación y las normativas locales en vigor en materia de utilización de teléfonos inalámbricos al volante. Por consiguiente está prohibido hacer uso de teléfonos conduciendo, y la utilización de un kit manos libres no puede considerarse una solución. En avión : Apaga tu teléfono en el avión. No olvides a pagar tu teléfono cuando te encuentres en un avión (Gsm + Bluetooth), ya que podrían producirse interferencias.

4. En hospitales : Apaga tu teléfono cuando haya próximo cualquier dispositivo médico. Es muy peligroso poner en marcha un teléfono habiendo próximo un dispositivo médico. Esto puede provocar interferencias con dichos dispositivos. Por consiguiente, han de respetarse todas las consignas y avisos en hospitales o centros de salud. No olvides apagar tu teléfono en las estaciones de servicio. No utilices tu móvil en una gasolinera, en la proximidad de combustibles. Es peligroso utilizar tu teléfono en el interior de un taller de reparación.

5. Implantes electrónicos y marcapasos : Las personas que tengan un implante electrónico o un marcapasos deben adoptar la precaución de colocar el teléfono en el costado opuesto al implante durante una llamada, si percibes que tu teléfono provoca interferencias con un marcapasos, apaga inmediatamente el teléfono y ponte en contacto con el fabricante del marcapasos o con tu médico con el fin de informarte sobre qué conducta adoptar.

6. Riesgos de incendio : No dejes tu teléfono próximo a fuentes de calor como un radiador o caja de gas. No recargas tu teléfono cerca de materias inflamables (el riesgo de incendio es incuestionable).

7. Contacto con líquidos : Evita todo contacto del teléfono con líquidos o con manos mojadas. El agua puede provocar daños irreparables.

8. Utiliza exclusivamente accesorios homologados por VKWORLD. La utilización de accesorios no homologados puede deteriorar tu teléfono o provocar riesgos.

9. No manipules las baterías ni los cargadores. Nunca utilices una batería o cargador dañados. No pongas en contacto con las baterías objetos magnétizados, ya que existiría riesgo de cortocircuito entre los bornes + y - de las baterías así como de dañar la batería o el teléfono de forma irremediable. En términos generales, no expongas las baterías a temperaturas muy bajas o muy elevadas (inferiores a 0°C o superiores a 45°C). Estas diferencias de temperatura pueden reducir la autonomía y vida de funcionamiento de las baterías.

10. Caidas o impactos Utiliza y maneja tu teléfono con el mayor cuidado. Proteje tu teléfono de caídas o impactos que pudieran dañarlo. Algunos elementos de tu teléfono son de vidrio, por lo que podrían romperse en caso de caída o de fuertes impactos. Evita que se le pueda caer tu teléfono. Nunca toques la pantalón con objetos punzaduos.

11. Descarga eléctrica : No intentes desmontar tu teléfono, podría darte una descarga eléctrica.

12 Mantenimiento si deseas limpiar tu teléfono, utiliza un trapo seco (nunca disolventes, como el benceno, ni alcohol).

13 Recarga tu teléfono en una zona bien ventilada. No lo recargas si está apoyado sobre en una tela.

14 Alteración de las bandas magnéticas : No coloques tu teléfono al lado de tarjetas de crédito, ya que las bandas magnéticas de éstas podrían resultar dañadas y por tanto sus datos.

[PT] Instruções de segurança

Para utilizar este telefone com toda a segurança, leia atentamente as instruções de segurança :

1. Crianças : Esteja muito atento em relação às crianças. Um telefone móvel contém várias peças soltas. Por isso, convém ter cuidado quando uma criança está em contacto com um telefone móvel. O produto contém peças pequenas que podem ser ingeridas ou provocar a sufocação em caso de ingestão. Caso o seu aparelho tenha uma máquina fotográfica ou um dispositivo de iluminação, não utilize demasiado perdo deslohos das crianças ou dos animais.

2. Audição : Quando o som está na potência máxima, a escuta prolongada através de auscultadores leves pode provocar danos na sua audição. Reduza o volume até ao mínimo necessário quando ouvir música ou numa conversa. Evite os volumes elevados durante um período longo.

3. Ao volante : Tenha cuidado quando conduz. A condução exige uma atenção extrema e regular para reduzir ao máximo os riscos de acidente. A utilização de um telefone móvel distrair o seu utilizador e levá-lo a provocar um acidente. É necessário respeitar escrupulosamente a legislação e as regulamentações locais em vigor relativas às restrições de utilização de telefones sem fios ao volante. Por isso, é proibido telefonar quando se estiver a conduzir e a utilização de um kit de mãos livres não pode ser considerada uma solução. Em avião : Apague o seu telefone no avião. Não olvides a pagar o seu telefone quando se encontrares em um avião (Gsm + Bluetooth), ya que podrían producirse interferencias.

4. Meio hospitalar : Desligue o seu telefone se estiver perto de um aparelho médico. É muito perigoso ligar um telefone perto de um aparelho médico. Ele pode provocar interferências com aparelhos médicos. Por isso, convém respeitar todas as instruções e avisos nos hospitais ou centros de saúde. Pense em desligar o seu telefone nas estações de serviço. Não utilize o seu aparelho numa estação de serviço, perto de combustíveis. É perigoso utilizar o seu telefone no interior de uma garagem profissional.

5. Implantes electrónicos e marcapasos : As pessoas que têm um implante electrónico ou um estimulador cardíaco devem por precaução posicionar o telefone no lado oposto ao do implante durante uma chamada. se verificar que o seu aparelho provoca interferências com um estimulador cardíaco, desligue imediatamente o telefone e contacte o fabricante do estimulador cardíaco para informar sobre os comportamentos a adoptar.

6. Riscos de incêndio : Não deixe o seu aparelho perto de fontes de calor como um radiador ou um fogão. Não carregue o seu telefone perto de matérias inflamáveis (os riscos de incêndio são reais).

7. Contacto com líquidos : Não ponha o telefone em contacto com líquidos, nem com as mãos molhadas. Todos os danos provocados pela água podem ser irreversíveis.

8. Utilize exclusivamente os acessórios homologados pela VKWORLD. A utilização de acessórios não homologados pode deteriorar o seu telefone ou provocar riscos.

9. Não destrua as baterias e os carregadores. Nunca utilize uma bateria ou um carregador danificado. Não ponha baterias em contacto com objectos magnéticos, devido ao risco de curto-circuito entre os terminais positivo e negativo da bateria e de destruir definitivamente a bateria ou o telefone. De uma maneira geral, não deve expor as baterias a temperaturas muito baixas ou muito elevadas (inferiores a 0°C ou superiores a 45°C). Estas diferenças de temperatura podem reduzir a autonomia e o tempo de vida das baterias.

10. Choques ou impactos : Utilize e manuseie o seu telefone com o máximo cuidado. Proteja o seu telefone dos choques ou impactos, que podem danificá-lo. Algumas peças do seu telefone são de vidro e podem quebrar-se em caso de queda ou de fortes impactos. Não toque no ecrã com um objecto puntiagudo.

11. Descarga eléctrica : Não tenses desmontar o seu telefone. Os riscos de descarga eléctrica são reais.

12 Conservação e limpeza : se quiser limpar o seu aparelho, utilize um pano seco (sem dissolventes, como o benceno, ou álcool).

13 Recarregue o seu telefone numa zona bem arejada. Não recarregue o seu aparelho se ele estiver em cima de um tecido.

14 Alteração das bandas magnéticas : Não coloque o seu telefone ao lado de um cartão de crédito, pois isso pode danificar os dados das bandas magnéticas.

[FR] Consignes de sécurité

Afin d'utiliser ce téléphone en toute sécurité. Veuillez lire attentivement les consignes de sécurité :

1. Enfants : soyez très vigilant avec les enfants. Un téléphone portable contient de nombreuses pièces détachées, il s'agit donc d'être très vigilant quand un enfant est en contact avec un téléphone portable. Le produit contient des petites pièces qui peuvent être ingérées ou entraîner une suffocation en cas d'ingestion. Dans le cas où votre appareil est équipé d'un appareil photo ou d'un dispositif d'éclairage, n'utilisez pas trop près des yeux des enfants ou des animaux.

2. Audition : À pleine puissance, l'écoute prolongée au moyen d'un casque léger, ou d'écouteurs peut endommager votre audition. Veillez à réduire le volume au minimum nécessaire lorsque vous écoutez de la musique ou une conversation. Évitez les hauts volumes sonores pendant une longue période.

3. Au volant : Prudence lorsque vous conduisez. La conduite demande une attention extrême et régulière pour réduire au maximum le risque d'accident. Utiliser un téléphone portable peut distraire l'utilisateur et le faire conduire à un accident. Il s'agit de respecter scrupuleusement la législation et les réglementations locales en vigueur relatives aux restrictions de utilisation de téléphones sans fil au volant. Pour cela, il est interdit de téléphoner en conduisant et l'utilisation d'un kit main-libre ne peut pas être considérée comme une solution. En avion : Éteignez votre téléphone dans l'avion. Pensez à éteindre votre téléphone lorsque vous êtes dans un avion (Gsm + Bluetooth). Celui-ci peut provoquer des interférences.

4. Milieu hospitalier : Éteignez votre téléphone à proximité de tout appareil médical. Il est très dangereux de laisser allumer un téléphone à proximité d'un appareil médical. Celui-ci peut créer des interférences avec l'appareil médical. Il faut également respecter les consignes et avertissements dans les hôpitaux ou centres de soin. Pensez à éteindre votre téléphone dans les stations-service. N'utilisez pas votre appareil dans une station essence, à proximité de carburants. Il est donc dangereux d'utiliser votre téléphone à l'intérieur d'un garage professionnel.

5. Implants électriques et stimulateurs cardiaques : As pessoas que têm um implante electrónico ou um estimulador cardíaco devem por precaução posicionar o telefone no lado oposto ao do implante durante uma chamada. se verificar que o seu aparelho provoca interferências com um estimulador cardíaco, desligue imediatamente o telefone e contacte o fabricante do estimulador cardíaco para informar sobre os comportamentos a adoptar.

6. Risque d'incendie : Ne laissez pas votre appareil à proximité de sources de chaleur comme un radiateur ou une cuisinière. Ne mettez pas votre téléphone en charge à proximité de matières inflammables (les risques d'incendie sont réels).

7. Contact avec des liquides : Ne mettez pas le téléphone en contact avec des liquides, ni avec les mains mouillées, tous les dégâts provoqués par l'eau peuvent être irrémédiables.

8. Utilisez que les accessoires homologués par VKWORLD L'utilisation d'accessoires non homologués peut déteriorer votre téléphone ou provoquer des risques.

9. Ne détruisez pas les batteries et les chargeurs. N'utilisez jamais une batterie ou un chargeur endommagé. Ne pas mettre en contact les batteries avec des objets magnétiques, risque de court-circuit entre les bornes plus et moins de vos batteries et de détruire la batterie ou le téléphone de manière définitive. D'une manière générale, il ne faut pas exposer les batteries à des températures très basses ou très élevées(inférieures à 0°C ou supérieures à 45°C) Ces différences de température peuvent réduire l'autonomie et dure de vie des batteries.

10. Chocs ou impacts : Utilisez et manipulez votre téléphone avec le plus grand soin. Protégez votre téléphone, des chocs ou impacts vous pourriez l'endommager. Certaines parties de votre téléphone sont en verre, et pourraient donc se briser en cas de chute ou de gros impacts. Éviter de laisser tomber votre appareil. Ne touchez pas l'écran avec un objet pointu.

11. Décharge électrique : Ne cherchez pas à démonter votre téléphone, les risques de décharge électrique sont réels.

12. Entretien : si vous voulez nettoyer votre combiné, utilisez un chiffon sec (pas de solvant, tel que du benzène, ou de l'alcool).

13. Rechargez votre téléphone dans une zone bien aérée. Ne pas recharger votre appareil si il est posé sur du tissu.

14. Altération des bandes magnétiques : Ne placez pas votre téléphone à côté de carte de crédit, cela peut endommager les données des bandes magnétiques.

[IT] Precauzioni di sicurezza

Leggere attentamente le informazioni sulla sicurezza prima di utilizzare il presente dispositivo :

1. Bambini : Prestare molta attenzione con i bambini. Un dispositivo mobile contiene numerosi pezzi assemblati, è quindi consigliabile fare molta attenzione se un bambino entra in contatto con un dispositivo mobile. Il prodotto è composto da piccole parti che possono causare il soffocamento. Nel caso in cui il dispositivo sia dotato di fotocamera o di un dispositivo d'eclairage, non utilizzatevi troppo vicino agli occhi dei bambini o degli animali.

2. Uditivo : L'eccessiva esposizione a un livello di volume troppo elevato, in particolare quando si utilizzano le cuffie o l'auricolare, può causare danni all'udito. Si raccomanda di abbassare il volume al minimo necessario quando si ascolta la musica o durante una conversazione. Evitate l'esposizione a un livello di volume troppo elevato per lunghi periodi di tempo.

3. Alla guida : Essere prudenti quando si è alla guida. L'uso di un dispositivo mobile durante la guida può causare distrazione con il rischio di provocare incidenti. Rispettare scrupolosamente le disposizioni di legge in vigore in materia di restrizioni di utilizzo di dispositivo mobile quando si è alla guida di autoveicoli. È perciò consigliato telefonare durante la guida e l'utilizzo di un dispositivo «hands free» (voce voce) può essere una valida soluzione. In aereo : si raccomanda di spegnere il dispositivo durante la permanenza in un aereo (Gsm + Bluetooth). Celui-ci peut provoquer des interférences.

4. Ambiente ospedaliero : Èteignez votre téléphone à proximité de tout appareil médical. Il est très dangereux de laisser allumer un téléphone à proximité d'un appareil médical. Celui-ci peut créer des interférences avec l'appareil médical. Il faut également respecter les consignes et avertissements dans les hôpitaux ou centres de soin. Pensez à éteindre votre téléphone dans les stations-service. N'utilisez pas votre appareil dans une station essence, à proximité de carburants. Il est donc dangereux d'utiliser votre téléphone à l'intérieur d'un garage professionnel.

5. Impianti elettronici e stimulatori cardiaci : Les personnes équipées d'un implant électronique ou d'un stimulateur cardiaque doivent par précaution positionner le téléphone sur le côté opposé à l'implant lors d'un appel. si vous remarquez que votre appareil provoque des interférences avec un stimulateur cardiaque, éteignez immédiatement le téléphone et contactez le fabricant du stimulateur cardiaque pour être informé de la conduite à tenir.

6. Risque d'incendie : Ne laissez pas votre appareil à proximité de sources de chaleur comme un radiateur ou une cuisinière. Ne mettez pas votre téléphone en charge à proximité de matières inflammables (les risques d'incendie sont réels).

7. Contact avec des liquides : Ne mettez pas le téléphone en contact avec des liquides, ni avec les mains mouillées, tous les dégâts provoqués par l'eau peuvent être irrémédiables.

8. N'utilisez que les accessoires homologués par VKWORLD L'utilisation d'accessoires non homologués peut déteriorer votre téléphone ou provoquer des risques.

9. Non détruisez pas les batteries et le chargeur. N'utilisez jamais une batterie ou un chargeur endommagé. Ne pas mettre en contact les batteries avec des objets magnétiques, risque de court-circuit entre les bornes plus et moins de vos batteries et de détruire la batterie ou le téléphone de manière définitive. D'une manière générale, il ne faut pas exposer les batteries à des températures très basses ou très élevées(inférieures à 0°C ou supérieures à 45°C) Ces différences de température peuvent réduire l'autonomie et la durée de vie des batteries.

10. Urto o impatti : Utilizzare e maneggiare il dispositivo con grande attenzione e cura. Proteggere il dispositivo da urti o impatti che potrebbero danneggiarlo. Alcune parti del dispositivo sono di vetro e potrebbero quindi rompersi in caso di caduta o di impatti violenti. Non lasciare cadere il dispositivo. Non toccare lo schermo con oggetti appuntiti.

11. Scariche elettriche : Non tentare di smontare il dispositivo, i rischi di scariche elettriche sono reali.

12. Manutenzione : Per pulire il dispositivo, utilizzare un panno asciutto (senza solventi quali benzene o alcol).

13. Ricaricare il dispositivo in un ambiente ben aerato. Non ricaricare il dispositivo se è appoggiato su tessuto.

14. Alterazione delle bande magnetiche : Non posizionare il dispositivo vicino a carte di credito, ciò può danneggiare i dati delle bande magnetiche.