

Romantic lighting Bluetooth speaker



User Manual

Please read this user manual before using the speaker.

Packing list



The speaker



user manual



 
 
USB data cable

Specifications


- Name: Romantic lighting Bluetooth speaker
- Charging Input: DC5V --- 1000mA
- Battery Capacity: Polymer Lithium Battery, 3.7V/1800mAh
- Charging Time: 2.5-4 Hours
- Speaker Specifications: $\Phi 40 \times 18\text{mm}$ (Power: 4Q3W)
- Frequency Range: 70Hz-20KHz
- Distortion: $\leq 0.5\%$
- Whole Signal to Noise Ratio: $\geq 65\text{dB}$
- Main Material: ABS/PP
- Size: $\Phi 86 \times 113\text{mm}$
- Weight: About 230G
- Playing time: 11 hours (playing Bluetooth music only)
- Lighting time: 5 hours on high brightness.

brightness (**Note:** battery life will be less when speaker and light are both turned on at the same time).

Button Functions

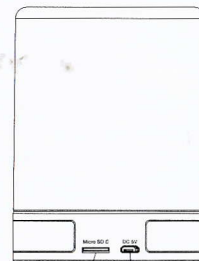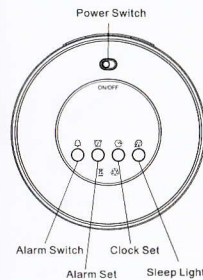

TF Card Slot USB Jack

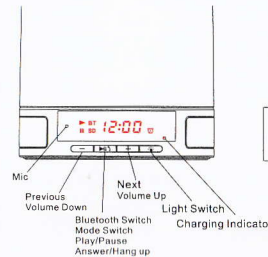 

Display Functions



Button Icon

	Long press: Bluetooth Switch Short press: Play/Pause		Calendar, clock setting
	Volume up/Next Clock time setting Setting mode		Alarm setting
	Volume Down/Previous Clock time setting Time setting mode		Alarm switch
	Long press: Light Switch Short press: Dimming		Sleep Light. Delay 20mins to turn off

Charging

Please make sure the speaker is fully charged in first use. The light and display will Flash, indicating that the speaker needs to be recharged.

Charge the speaker with the provided USB cable which is compatible with any computer or cell phone charger.

The charge indicator light will be red while charging, then when the battery is fully charged it will turn off.

 
Switch

Slide the switch on the speaker base to turn it on or off. When the speaker is first turned on the dome light will be on its lowest light level. You can toggle through various light brightness levels.

Notice: The clock and alarm function are only available once the speaker is turned on. Turning off the speaker will preserve the battery life.

Calendar and clock setting

Click the clock setting button “⌚” on the bottom to activate the calendar and clock settings. The display will flash indicating the current option being set in the order of: year, month, day, and time. In each case press press “+” “-” to adjust the right number. Press “⌚” to exit after setting each option.



Alarm Setting

Click the alarm setting button “⌚” on the bottom to active the alarm. The display will flicker to show which numbers are being changed, click “+” “-” to adjust the clock number you want to set, click “⌚”, turn to the minute setting, then adjust the minute number you want, click “⌚”, then the alarm setting is finished.



Alarm on/off switch

Press the alarm switch button “⌚” on the bottom to turn on the alarm. The alarm symbol on the lower right corner will light up showing that the alarm is active. Pressing the button once more will deactivate the alarm.

Speaker function

Bluetooth Mode

First turn on the speaker. Then press and hold the “▶||” button for 3 seconds to enter bluetooth detect mode. The Bluetooth indicate character “BT” will flash rapidly when in bluetooth detect mode for 10 minutes. During this time you should connect the bluetooth speaker to your bluetooth enabled device.

Bluetooth connection

Step 1: Open the Bluetooth setting on your phone or tablet and click “search device”. iPhones will search for Bluetooth devices automatically.
Step 2: You have found the Bluetooth speaker when the screen displays the character “Lightspeaker1”, click on it in your device to pair the connection.
Step 3: Enter “0000” and click OK if there's a prompt that requires you to enter a password.
Step 4: The phone or tablet will indicate when the pairing is successful. The “BT” character on the display of the speaker will stop flickering.

Music Playing

Open the player device when the connection is successful. Click to play music, and the Bluetooth speaker will play the music. You can operate the player with the buttons on the Bluetooth speaker:
▶|| “to play/pause .
Short press “+” “to play the next song and long press to volume up.
Short press “-” “to play the previous song and long press to volume down.

Bluetooth Hands free Call

Answer and hang up the phone:
There will be an alert sound from the speaker when there is a phone call. Click “▶||” to answer the call, and click “▶||” again to hang up .

In Bluetooth mode, when you long press “▶||”, it will be switched to the TF card mode.

TF Card Mode

Insert the TF card when the speaker is turned on. The speaker will enter itself into the TF card mode. It can play the music (MP3/WMA/APE format) from your TF card. You can operate the player with the buttons on the Bluetooth speaker:

short press “▶||” to play/pause .
Short press “+” “to play the next song and long press to volume up.
Short press “-” “to play the previous song and long press to volume down.
In TF mode, the display can only show the playing time of songs but not the clock.

Bluetooth pairing and connection

- 1.If the speak has been connected with Bluetooth devices before, it will connect with the last Bluetooth device automatically once it is turned on.
- 2.Other phones or tablets can not be connected with the Bluetooth speaker when the speaker is being connected with a phone or tablet.
- 3.The phone or tablet can not be connected with the Bluetooth speaker if it is connected with other Bluetooth devices. You should turn off your Bluetooth connection and connect your phone with the Bluetooth speaker again.

Lamp Function

Slide the switch of the speaker on the bottom. Turn on the speaker, and the lamp will light on in the dimmest grade. The brightness can be adjusted by clicking the lamp button “☀”. The brightness has four grades: micro brightness, low brightness, intermediate brightness, and high brightness. Long press “☀” to turn on or off the lamp.

Bluetooth Mode

When the lamp is on, click the button “⌚” on the bottom. The lamp will blink twice, and the sleep light function will be activated. The light will go out after 20 minutes.

Frequently Asked Questions

Question	Solutions
Unsuccessful pairing and connection	1.Check the speaker and make sure it is in the searching state or reboot the speaker. 2.Connection is difficult when there are too many Bluetooth devices nearby. Turn off other Bluetooth devices. Turn off the Bluetooth device that was connected with the Bluetooth speaker last time, and reconnect the speaker .
Muted or distorted sound	1.Check the volume of your phone or the speaker, and adjust the volume. 2.The battery is low. Please charge it.
Choppy music play	1. Check if the device is beyond the effective connection distance. 2. Check if there is any obstacle between the speaker and your device.
The indicator not shining in Bluetooth mode	1.The battery is low. Please charge it. 2.Please reboot the speaker.

Precautions

- 1.Please store and use the product in room temperature environment.
- 2.Do not expose this product in rain or wet conditions.
- 3.Do not drop or bump this product.
- 4.Do not disassemble, repair, or modify the product.
- 5.Please use the power charge with rated voltage for the speaker.
- 6.It may cause hearing damage if playing music in high volume for a long time. Consider avoiding excessively high volume when playing music for a long time.
- 7.Disassemble this product will invalidate the warranty.