
Bluetooth Mini Speaker

Respectful users:

Thank you for purchasing our Bluetooth Mini speaker. In order to operate it correctly, please read this user manual carefully before using it.

- * Keep speaker away from water and moisture, do not get it wet.
- * Keep speaker away from any heat source.
- * Please adjust to a suitable volume to avoid damaging your speaker

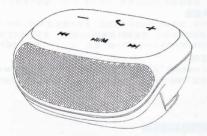

Technical Parameters

Rated Impedance: 4 Ohm Rated Power: 2x3W Rated Voltage: DC 5V SNR:≽50dB Sensitivity:800mV Distortion: ≤10% Weight:327g

Loud speaker: 1.6 inches Aux in:3.5 mm audio jack

RMS: 1.5Wx2

Frequency scope:180Hz-16KHz Size: 128x95x56mm

Power supply: USB DC 5V Built-in Li-ion battery

Items list

Speaker, USB cable, manual. 3.5mm audio cable

Functions Introduction

- Built-in Bluetooth 2.1+EDR wireless module
- Bluetooth audio sound perfect sound quality and bass effect
- 10M Bluetooth transmission distance
- Support iPhone, iPad and other decives with bluetooth function
- Bluetooth hands free function answer call easily
- FM Radio function
- Support TF card
- Bluetooth music controlling functions
- · Built-in li-ion battery, with micro USB interface
- 3.5 audio input jack
- · All functions are based on touching operation on the speaker

Quickly know the functions well

1.Turn on Bluetooth Speaker:



2. Turn on the power switch, indicator light will be blue, it indicates that the speaker is re-connecting the Bluetooth equipment matched on the last time. If the indicator light flashes quickly, indicates that it is searching new bluetooth equipment.



3. Turn on Bluetooth equipment to search and connect. For first time use, please enter password "0000" (high versions may not requires password, will connect directly). When well connected, the indicator light will flash slowly and have indicating sound.

Product images:





Operation directions

- 1. Connect to Telephone
- Turn on the back power switch, the speaker will have a "tinkle" warning sound, speaker indicator light is flashing slowly, 3 seconds later, speaker will have "honk" warning sound, indicator light becomes to quickly flash, it indicates that Bluetooth is under searching status.
- Turn on telephone bluetooth setting to enter searching status (different brand of telephones will have different methods to turn on Bluetooth setting), searching result will display "AJ-81", use the password" 0000" (4 zeros), then confirm well the speaker bluetooth is connected or not, if the speaker will have warning sound, it indicates well connected between bluetooth speaker and telephone. 30 seconds for whole operation. The second time to use, not necessary to enter password foridentification of telephone and speaker, directly click "AJ-81" on the menu of telephone to connect.
- After well connected, play music from telephone, then use bluetooth touching keys to operate
- Adjust to suitable volume level by volume knob" + "and" ".
- Answer call: When call coming from telephone, shortly touch " \(\sigma\) " directly
 can answer. To make sure call quality, it should keep bluetooth within 50 CM
 distance: touch \(\sigma\) " directly to hang up call.
- 2. Connect to flat computer

please refer to telephone operation directions

3. FM Radio

Touch the key" ► IJM " for two seconds more to switch to FM mode, shortly touch key "► IJM " for two seconds more to switch to FM mode, shortly touch key" ► IM " or "► IM" to switch previous or next channel, the green light flashes during searching state, it will be in longgreen light when play channel in the normal state. Adjust volume by touching key "+ " and " - "."

4. TF Card

Inserting TF card, it will automatically switch to music play mode and and play music(support MP3/WAV/WMA), the green light flashes slowly in the normal play mode, touching key" MM "for pause or play, the green light flashes quickly under pause state. Shortly touching key " M "or " M "can switch to previous or next song. Addiust volume by touching key" " " and" — ".

5.LINE IN

Inserting 3.5mm audio cable, touching key "M|M" to switch to LINE IN mode, under this state, keys" ||M" and "|M" are not available, adjust volume by touching key " + "and" — ", shorty touching key" "||M" for mute or play.

Solutions for common questions

1. Bluetooth can not connect to device

Please confirm the bluetooth is under searching status, bluetooth equipment of connected device has already turned on

2.No sound

Please check if the volume switch turned off, please also check input of the connected device is bluetooth and bluetooth input volume if common

 Bluetooth can not be turned on Please charge the speaker

Attentions:

- When the power is weak, it will have "tinkle" warning sound in every 20 seconds, please charge it in time
- When the battery built-in speaker is totally used up, it will enter to protection state, at this time, it can work under charging,
- When do not use speaker, please push the button switch to "OFF", in case to power consumption.