

Bluetooth Mini Speaker

Respectful users:

Thank you for purchasing our Bluetooth Mini speaker. In order to operate it correctly, please read this user manual carefully before using it.

- ※ Keep speaker away from water and moisture, do not get it wet.
- ※ Keep speaker away from any heat source.
- ※ Please adjust to a suitable volume



Technical Parameters

Rated Impedance: 4 Ohm	Weight: 216g
Rated Power: 3w	Speaker: 2 inches
Rated Voltage: DC 5V	Aux in: 3.5 mm audio jack
Frequency response: 3dB	SNR: ≥ 78 dB
RMS: 1.2W	Distortion: $\leq 10\%$
Frequency scope: 170Hz-15KHz	Size: 95*95*90mm
Power supply: DC 5V Built-in Li-ion battery	

Items list

 
Speaker, USB cable, manual, 3.5 mm audio cable

Functions Introduction


- Built-in Bluetooth 2.1+EDR wireless module
- Bluetooth audio sound, perfect sound quality and bass effect
- 10M transmission distance
- Support iPhone, iPad and other devices with bluetooth function
- Bluetooth hand free function, answer call easily
- Bluetooth music controlling functions
- Built-in li-ion battery, with micro USB interface
- 3.5 audio input jack

Quickly know the function well

1. Turn on Bluetooth Speaker:



 2. Turn on the power switch, indicator light will be blue, it indicates speaker re-connecting the bluetooth equipment matched on the last time. Bluetooth indicator light flash quickly is searching new bluetooth equipment, if fail to search, press "M" for more than two seconds to force matched and then press "M" key again to turn on speaker or toggle power switch once more to re-search the bluetooth. bluetooth search and connect:



3. Turn on bluetooth equipment to search and connect. For first time use, please enter passport "0000" (high versions may do not need passport, can connect directly). When well connected, the indicator light will flash slowly and have indicating sound.

Product Images:



Positive side

Back side

Top

Operation directions

1. Connect to Telephone

- Turn on the button switch on the back, after 3 seconds, speaker will have a "tinkle" warning sound, at this state, speaker indicator light is flashing slowly, 3 seconds later, speaker will have "honk" warning sound, blue indicator light becomes to quickly flash, it indicates bluetooth is under searching status.
- Turn on telephone bluetooth setting to enter searching status (different brand telephones will have different methods to turn on bluetooth setting) searching result will display "AJ-69", use the passport "0000" (4 zeros), then confirmed well connected to the speaker bluetooth, the speaker will have warning sound, it indicates well connected between bluetooth speaker and telephone. 30 seconds for whole operation (difference in different brand telephones) First time it is necessary to use passport for identification of telephone and speaker, for the second time, no need passport just click "AJ-69" to connect.
- After well connected, play music from telephone, then use bluetooth buttons to operate. Press "◀" or "▶" button for two seconds to fast backward or forward
- Adjust the volume button to suitable level, volume increase "+", volume decrease "-".
- Answer call: When call coming from telephone, short press "📞" directly can answer. To make sure call quality, it should keep bluetooth within 50 CM distance, press "📞" directly to hang up call. Double pressing "📞" button can repeat the last time number you called

2. Connect to flat computer
please refer to telephone operation directions

3. Connect to laptop

Due to many bluetooth versions about laptops, connected methods will be different. If can not connect for the first time, it should be installed new version bluetooth driver in the laptops.

Solutions for common questions

1. Bluetooth can not connect to device

Please confirm the bluetooth is under searching status, bluetooth equipment of connected device has already turned on

2. No sound

Please check if the volume switch turned off, please also check input of the connected device is bluetooth, bluetooth input volume is common

3. Bluetooth can not be turned on

Please charge the speaker

Attentions:

- When the power is weak, it will have "tinkle" warning sound in every 20 seconds.
- speaker can continue to use when charging.
- When do not use speaker, please push the button switch to "OFF", in case of power consumption.