

















Table of Contents

1. ICONS.....	3
2. FUNCTIONAL MENU.....	5
3. FAQS AND SOLUTIONS.....	9

1 ICONS

Icon	Description
	Indicate the intensity of network signals.
	Show missed calls.
	Location by satellite.
	Receive a new message.
	An application is being downloaded.
	The downloading is over.
	The alarm clock has been set and activated.
	A call is in progress.
	The phone is playing a song.

	Show battery level.
	Enable USB.
	The access is blocked.
	Get connected to the wireless network
	Turn on the Bluetooth.
	No SIM card is installed in the phone.
	GPRS data connection is on.

2 FUNCTIONAL MENU

2.1 Dialing

When dialing, you can have a quick access to the call records, contacts and digit dial keyboard (used for manual dialing) by the menu key on the screen.

2.2 Browser

The browser allows you to surf on the internet and browse the page just like on the computer. You can create on the phone a bookmark. You can have a quick access to your favorite sites on the main screen.

You could view web pages in longitudinal or transverse mode. The page rotates according to the rotation of the phone and automatically adjusts to fit the page.

2.3 Settings

Bluetooth: Bluetooth can be turned on and off and settings are made.

Data usage: It makes you in full awareness of the usage of the information.

Select a mode and enter the customized setting-up, operational are vibration, volume, ring tones, notifications and key beep, etc.

Display: Customized setting-up of the phone luminance, wallpaper, the screen and screen time-out and font size is allowed.

Storage: The internal memory of the storage card and of the phone is shown.

Battery: The usage detail of the battery's shown.

Applications: View, manage and delete the applications on your phone.

Account: Set the synchronization of your phone account with your phone.

Location service: Set the service during the locating.

Security: Set unlocking pattern; lock the SIM card; set the SD card.

Language & input: Select a language and input method.

Backup & reset: Reset DRM and restore factory settings to clear all personal data on your phone.

Date & time: Set current time and date.

Schedule power on/off: set the time to turn on or off your phone.

Accessibility: Some auxiliary functions can be set.

2.4 Clock

■ Alarms

Your phone provides many groups of alarm clocks. Select one of them to edit and customize alarm clock.

■ World Time

You can set a different time zone.

■ Stopwatch

Single time you can also record multiple times.

■ Timer

You can turn the dial to set down time.



A brand of HOMETOM
DG HOMETOM TECHNOLOGY CO., LTD

Designed by HOMETOM in Hong Kong

All Rights reserved

Unique Design by HOMETOM

CE 0700

MADE IN CHINA

2.5 Camera

Your phone provides the camera and video recorder features. Wherever you go, you can take high-resolution photos and videos. It also supports advanced camera features such as face Defection, panorama shooting, high dynamic range and zero delay shutter, which can also be customized.

2.6 Notification Menu

Slide and pull down menu on the main interface, you can see the message notice and choose whether to turn on or off WIFI, Bluetooth, GPS, off-line mode. In the data connection, the current SIM is available to make data connection of GPRS. Slide it around you can see the options of profile for your convenience.

2.7 theme

Click on the theme of your mobile phone to choose your favorite theme, you can also set the local picture as wallpaper.

3 FAQs and Solutions

If you have any questions about the phone, please find the solutions from the table below.

FAQs	Causes	Solutions
Poor reception	When you use your phone at poor reception areas, for example, near high rise buildings or base rooms, the radio wave cannot be transmitted effectively.	Avoid this as far as you can.
	When you use your phone at network traffic congestion, such as working time and off-duty time, the congestion can result in poor reception.	Avoid this as far as you can.
	This is related to the distance to base station in question.	You may ask the network service provider to provide service coverage map.
Echoes or noises	The trunk line of network is in bad condition. It is a regional problem.	Hang off the call and dial again. Choose another better line.
	In some areas, the call lines are in bad condition.	

Shorter standby time	The standby time is relevant to network settings.	In poor reception areas, turn off your phone temporarily.
	Replace the batteries	Change with a new battery.
Failed to turn on your phone	When no signals are received, your phone will continue searching for base stations, thus consuming a large amount of battery power and reducing standby time.	Use your phone at strong signal areas or Turn off the phone temporarily.
	The battery power is used up.	Check the battery power level or charge the battery.
SIM card error	The SIM card is damaged.	Contact your network service provider.
	The SIM card is not properly installed.	Ensure the SIM card is properly installed.
	The metallic face of the SIM card is contaminated.	Wipe the face with a clean cloth.
Failed to connect to the network	The SIM card is invalid.	Contact your network service provider.
	Beyond the GSM coverage.	Consult the network service provider for service areas.
	The signal is feeble.	Retry at a stronger signal area.
Failed to make a call	The call barring feature is used.	Cancel the call barring settings.

	The fixed dialing number feature is used.	Cancel the fixed dialing number settings.
PIN code error	Enter incorrect PIN codes for three times in succession.	Contact your network service provider.
Failed to charge the battery	The battery or the charger is damaged.	Change a new battery or charger.
	Charge the battery when ambient temperature is lower than -10℃ or above 55℃.	Change the environment.
Failed to add contacts to phone book	Poor connection.	Check whether the plug is properly connected.
	The storage space of phone book is used up.	Delete some contacts from the phone book.
	Your network service provider does not provide the services, or you haven't subscribed them.	Contact your network service provider.

HOMTOM HT3

User Guide