 
 



**zopo**

# *Speed**7** plus*

 
QUICK GUIDE  
GUIDE DE D MARRAGE RAPIDE  
GUIDA RAPIDA  
GUIA RAPIDA  
KURZANLEITUNG

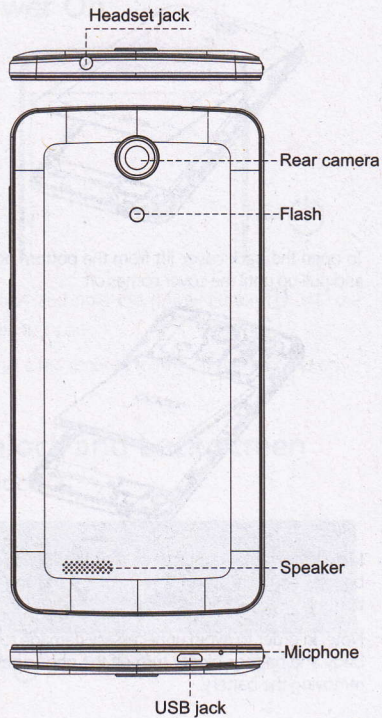

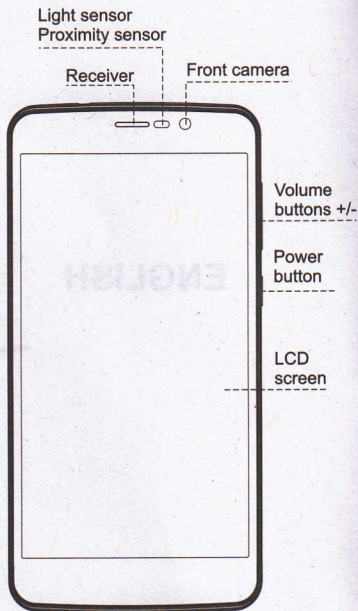

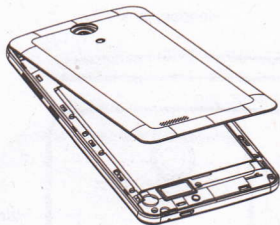

 
To open the back cover, lift from the bottom notch and pull up until the cover comes off.

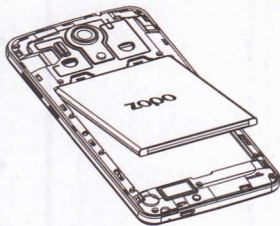


Match the metal contacts of the phone with the battery contacts when inserting / removing the battery.

Note: In order to avoid unnecessary damage to the body and battery, please turn off the phone before removing the battery.


## Power On

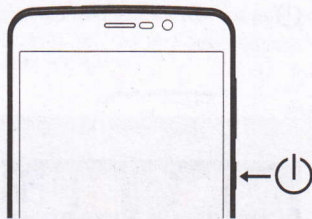 


1. Press and hold the power button  until the screen turns on.
2. Wait a few seconds for the phone to power on.


## Unlock and Lock screen
 
### Unlock



Press  and swipe up on screen to unlock.

## Lock Screen

Press  at any time and the phone will lock and enter standby mode.

## Keys



- ◁ Back Button : Return to previous screen
- Home Button : Return to home screen.
- Recent Apps button : Displays recently used applications

## Home screen

You can tap the icons to open the corresponding applications. You can also swipe left and right to see more applications.






## Applications Menu

You can enter the applications menu from the home screen by pressing .


### Start Applications

In the applications menu, tap the app you want.

## Dial






Press  then search contacts or enter the phone number then press  to dial out. If you want to delete the number, press .

## End calls

Press  during the call.

## Messages (SMS/MMS)

### Sending

1. Press  to enter the messaging app.
2. Press  to create a new message.
3. Press  to add one or more contacts.
4. Press  to insert pictures, audio and video.
5. Press  to send your message.