

Attention:	2
1. Desk:	3
1.1 Touch panel	3
1.2 POWER	3
1.3 BACK	3
1.4 MIC	4
1.5 Volume +, Volume-	4
1.6 earphone jack	4
1.7 Video output interface	4
1.8 TF card	4
1.9 Mini USB	4
1.10 DC Adapter	4
1.11 Recovery	4
2. First use	4
2.1 Battery management and charge	4
2.2 Connection with PC	5
3. Equipment operation interface	5
3.1 Main interface describe	5
3.2 status bar describe	7
3.3 Use touch panel	7
4. Equipment basic set	8
4.1 Silent mode,Volume,Notification ringtone,Audible selection,Screen lock sounds	9
4.2 Application	10
4.3 Privacy	10
4.4 Storage	11
4.5. Language & keyboard	11
4.6. Date & time setting	12
4.7 Developer options	12
4.8 About tablet	13
5. Apps Install and manage	13
5.1 App installer	13
6. Problem solution	14
6.1 Device can't open	14
6.2 After startup the screen or the opening picture has been appear , the the device appear shutdown	14
6.3 Can copy file or paly music and so on	14
7. Basic function	14

## Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Pls make sure to reading the manual carefully before use the device.

- Please don't be in high temperature, moisture or very dust place
- Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones shoulds not be too big volume, If feel tinnitus, Lower the volume or stop using it
- please charge in the following condition,
  - A. The battery power ICONS shows have no power
  - B. The system automatically shut off, startup after power off soon
  - C. Operation buttons no response
  - D. The machine that the top right corner show red icons

- When the device in the format or ongoing upload and download file, please don't suddenly disconnect, This could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol、Thinner or benzene to scrubbing products
- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
- Please don't using the Tablet PC when you in driving or walking down the street,
- USB just only be used for data transmission

The company reserves the right to improve product, products specification and design have any change, The information is subject to changes without prior notice.

(This tablet is no waterproof function)

**[Remark]** All pictures in this manual is just for your reference, products specification and design have any change, The information is subject to changes without prior notice.

## 1. Desk:



### 1.1 Touch panel

Capacitive touch panel: In The Operation, to click,dragging on the touch panel

### 1.2 POWER

startup: Long Press and hold the power button, the system will enter the main interface

shutdown: In the main menu interface, Press the power button about 5 second to shutdown, The system can hint "power off" option, Clike"ok", you can safely shut down.

Lock screen: Short press Power button to lock screen or unlock screen.

Remark 1:When power is empty,system will shut down automatically.

Remark 2:Illegal turn off the device,restart will scan and restore the disk,it may take longer time to enter into system


**1.3 BACK**

Short Press BACK button will return the last interface,




In the main interface, you can :

Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.

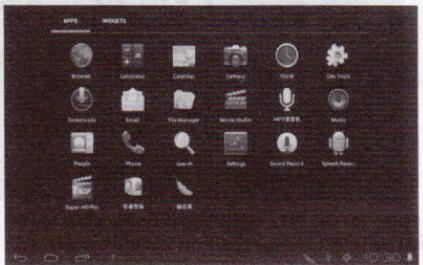

Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red. Loosen your hand, after that you can delete icon.

You touch the screen keep a time, appear the dialog box "Add yo Home screen" as shown below:

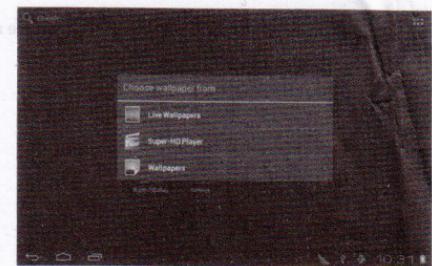

### 3.2 status bar describe



- The status bar above of the screen  
Top left display main interface software, T-Flash card, USB connection status and so on  
Top right display the battery, battery charge icons, current time, set time, Settings Menu, ESC button.

### 3.3 Use touch panel

Device equipped with a 7" touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, can go back to main screen through pressing the soft key on the bottom right corner of the main screen.

**【Attention】** The main screen soft key functions as the machine back key .

In different applications, by tapping the back soft key on the bottom right corner on the touch screen, you can return to its interface on the upfloor.

In different applications, by tapping the menu key on the upper right corner of touch screen, the screen will appear the operation setting interface as follows,

【Remark】: The main screen soft key functions as the machine menu




In the main interface, you can touch the icon to open the APPs



In different browser(file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.

#### 4. Equipment basic set

Setting: Click setting icons , enter setting interface

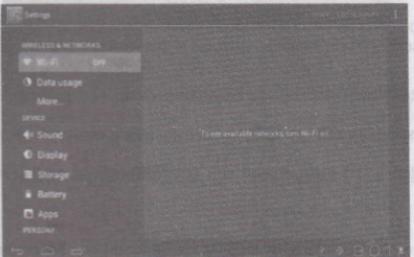


#### 4.1 Silent mode,Volume,Notification ringtone,Audible selection,Screen lock sounds

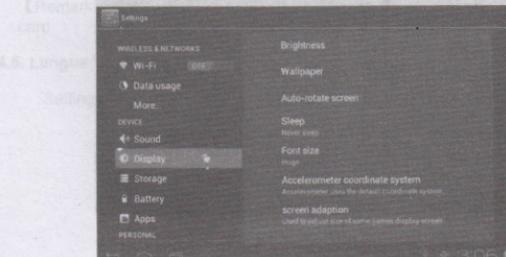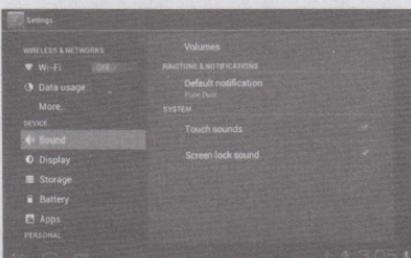

## 4.2 Application

Manage applications

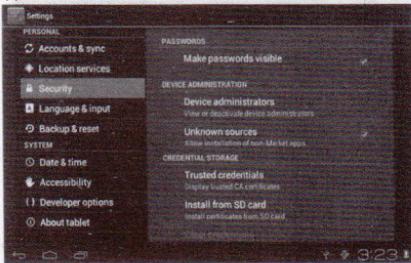


Unknown sources: Click "Unknown Sources", then click "OK"

Manage application: manager and uninstall Application

【Remark】: when you Firmware Upgrade, pls close the USB connect


How to uninstall?

1. enter [ ] "setting">"Application">"Manage application" And then there will be installed the program list
2. Click you want to uninstall icons, will enter the following interface
3. Click Uninstall, then you can felete the application

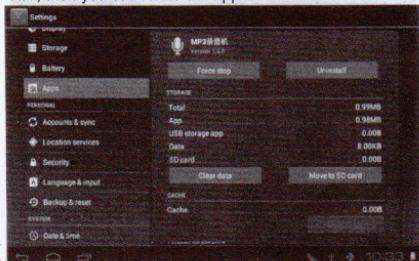


## 4.3 Privacy

Factory data reset

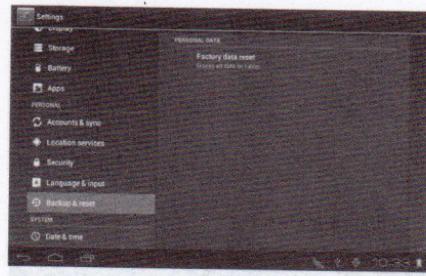

## 4.4 Storage

Remove TF card, view of the available storage space

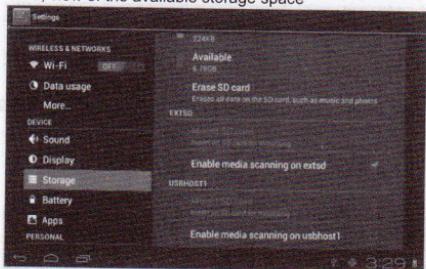


【Remark】: pls touch option"delete SD card", so that can safety to romove SD card

## 4.5 Language & keyboard

Setting: (Language), text input and automatic error correction options;



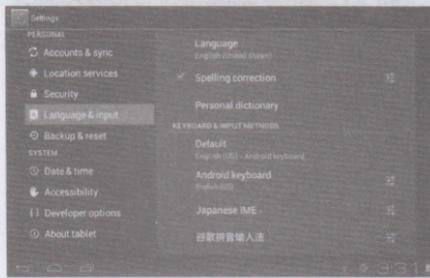

Select Language: 54 kind of national languages are available

Remark: Android system can support 54 kind of language, now manu interface just supor 14 language,

Android keyboard: Android keyboard setting

Sound on Key-press


Auto-capitalisation

Show suggestions: Display suggested words while typing

Auto-complete: Specebar and punctuation automatically insert highlighted word


#### 4.6. Date & time setting

Set date, set time, Select time zone and select date format

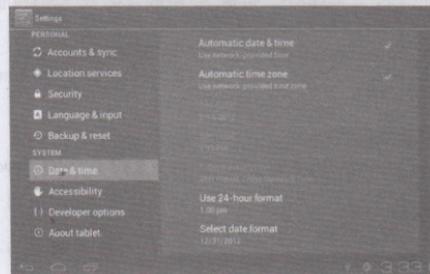


#### 4.7. Developer options

Choose USB work pattern: OTG/HOST/SLAVE.....

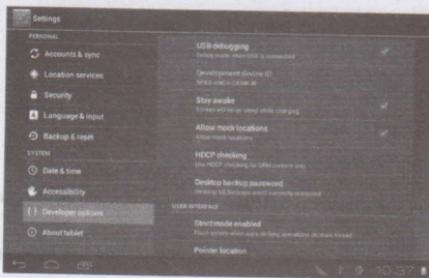

#### 4.8 About tablet

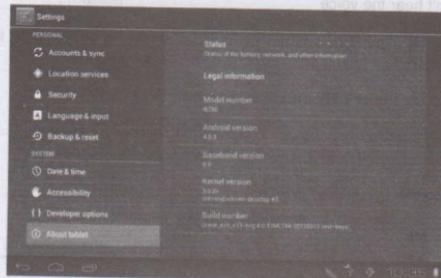

### 5. Apps Install and manage

#### 5.1 App installer

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click Appinstaller icon, will appear Install, manage, Exit options.

Install: Click install, enter App install interface

Separately for Internal Memory disk and SD Card disk.

Select the APK you would like to install, click it to install, go back to main menu, will display the installed app you just selected.

Remark: some 3<sup>rd</sup> APP must install properly by memory card, downloaded 3<sup>rd</sup> party app may not install properly on device.

Manage: click manage, enter third party interface  
Click install icon, will enter Action interface

## 6. Problem solution

### 6.1 Device can't to open

1. Check the battery power
2. Connect adaptor first, then check again
3. After charging then can't to open, pls contacy with the supplier

### 6.2 After startup the screen or the opening picture has been appear , the device appear shutdown

1. Power is not enough, please charge  
Headset can't hear the voice  
2. Pls check the volume whether set to 0  
3. Check the music file wherther damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

### 6.3 Can copy file or paly music and so on

1. Pls check between computer and device is correct connection
2. check the memory storage space is already full
3. checl the USB cable is good or not
4. USB connection is disconnected

## 7. Basic function

OS	Android 4.2~4.4
CPU	ARM Cortex-A8 1GHz-1.5GHz.
RAM	512M-1GB(optional)
ROM	Nand Flash 4GB/8GB/16GB(Optional).
LCD	7' 8' 9.7' (option) HP display
Touch panel	Capacitive/Resistance Touch panel(Optional).
2D/3D	AMD graphic acceleration, full support .
Graphic	OpenGL ES2.0(AMD Z340)and Open VG1.1(AMD Z160)@27M Tri/sec .
WIFI wireless	Support 802.11b/g/n standard, highest transmission get to 300Mbps, support local WAPI wireless protocol standard .

3G	Built-in 3G Module(option), WCDMA/HSDPA,support calling、 message. Wifi ad hoc
TF expansion	for optional 3G module to realize 3G communication.External MICRO SD(TF)slot,Max. 32GB TF card.
USB	USB high speed 2.0 .Can be connected to the computer to copy files.
VPU	Maximum support hardware decoding 720P and 1080i, and 480 video encoding.
Gravity	Built-in 3D gravity sensor, to make screen realize 360 degree rotation.
Audio	support gravity sense operation game. AC'97 full-duplex codec, support AAC\AMR\MP3\WMA\WAV\MIDI and so on.
Video	WMV\ASF\MP4\3GP\AVI\MKV\VC-1\DIVX\MPEG-2\MPEG-4 /H.263/ H.264 720P HD 1080i
Game	Support several of entertainment games based on Android platform.
Web	Support many internet applications like web, social, video, chatting and so on.
E-book	Assemble e-book tool to read based on Android platform.
Photo Frame	Built-in photo player, and take it as a photo frame or calendar.
Office	Support various of office software based on Android platform, to realize office functions, Such as Word\Excel\PPT\PDF.