



W10



User Manual

CONTENT

1.WARNINGS.....	2 -
2.GETTING STARTED.....	3 -
3.YOUR PHONE.....	5 -
4.FUNCTION MENU.....	6 -
4.1 .CONTACTS.....	6 -
4.2.MESSAGE.....	6 -
4.3.MULTIMEDIA.....	8 -
4.4. CALL LOGS.....	8 -
4.5. TOOLS.....	8 -
4.6.PROFILES.....	10 -
4.7. SETTINGS.....	10 -
4.8. MY FILES.....	11 -
4.9. GAMES.....	11 -
5.ENTRY MODE.....	11 -
6. CARE AND MAINTENANCE.....	12 -
7. TECHNICAL INFORMATION.....	13 -
8. WARNINGS:.....	14 -

1.Warnings

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

TURN ON SAFELY

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

ROAD SAFETY

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

INTERFERENCE

All wireless phones may be sensitive to interference, which may affect performance.

TURN OFF IN HOSPITALS

Follow all restrictions. Turn off the phone near medical equipment.

TURN OFF ON AIRCRAFTS

Follow all restrictions. Wireless devices can cause interference on aircrafts.

TURN OFF WHEN REFUELING

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

USE SENSIBLY

Only qualified personnel may install or repair this product.

ENHANCEMENTS AND BATTERIES

Use only appropriate enhancements and batteries. Do not connect incompatible products.

WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.

BACKUP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.

2.Getting Started

2.1 SIM Card Installation

When you subscribe to a cellular network, you will receive a plug-in SIM card complete with your subscription details, such as your PIN, and available optional services.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

Tips: Face the gold color contact point of SIM card towards the cell phone and push the SIM card into the slot.

2.2 Battery Installation

Caution: Install according to the illustration above to avoid breaking the battery connectors.

2.3 Charging the Battery

Insert the charger; the flash symbol on the charger plug must face upwards.

2.4 T-flash Card

Insert the T-Flash card into phone. This will expand the Flash memory of the phone. Tap Multimedia menu, you can browse MP3, MP4, picture, etc.

2.5 USB Cable

You can transfer and store files, such as MP3, MP4 and pictures from PC, through USB cable, to the U-disk in phone or identified SD card that is inserted.

3. Your Phone

3.1 Making a Call

In standby mode, press numerical keys to input phone number to dial phone number. When you finish inputting phone number, press the dial key、SIM2 key to make a call. If you're making a long distance call, add the area code preceding the telephone number. During a call, you can press up/down keys to adjust volume. Press left soft key to access Options.

3.2 Emergency Service

You can dial an emergency call without the SIM card. Contact your service provider to get the emergency call number.

3.3 Answering a Call

When you receive a call, the phone will ring or vibrate and will display an incoming call indicator. Press the dial key, SIM2 key or left soft key to answer. Press left soft key to access options.

3.4 Rejecting/Ending a Call

Press end key to reject an incoming call or

end current call.

3.5 Keypad Definition

1. OK key: To menu
2. Right soft key: To contacts
3. left soft key: To enter numbers and letters
4. Red key: Hold down this key to power On/Off.
5. up/down key: Adjusting the volume
6. Camera: A key to enter the camera viewfinder interface

4. Function menu

4.1 .Contacts

You can store contacts' personal information and numbers while also search for previously stored contacts. Press left soft key to access Options.

4.2. Message

After entering Messages, in: Templates, Voice Mail Server, Broadcast Message, SMS/MMS Settings and Message capacity.

4.2.1 Write Message

This function can begin a new SMS. After completing the SMS, press left soft key to

access to options.

4.2.2 Inbox

To check received messages in inbox.

4.2.3 Outbox

Checks the information of unsuccessfully sent message in outbox .

4.2.4 Drafts

Checks the information of unsuccessfully sent message in drafts .

4.2.5 Sentbox

Checks the information of unsuccessfully sent message in sentbox .

4.2.6 Security inbox

You will like information collection in the security in the box

4.2.7 Templates

10 a template for choice

4.2.8 Broadcast message

Edit broadcast message list

4.2.9 Voice mail server

Edit speech number

4.2.10 Settings

SMS Broadcast message

4.2.11 Message capacity

SIM1, SIM2, Phone

4.3. Multimedia

Camera, DV, Image, Audio, MP4, FM radio, Recorder

4.4. Call logs

In the call history menu, you can check dialed calls, received calls, missed calls, rejected calls, delete all, call timers, call cost, and GPRS counter.

4.5. Tools

4.5.1 MRP store

You can play it whenever or wherever you want, Talkcat.

4.5.2 Whatsapp

Choose need network landing page.

4.5.3 Internet

Your mobile phone supports wireless application protocol (WAP) service. You can access many different WAP services such as news, weather reports, flight information and so on. These services are especially designed for mobile phones and

maintained by WAP service providers.

4.5.4 Bluetooth

This mobile phone support Bluetooth wireless connection. You can establish wireless connection between mobile phone and device to realize voice communication, data exchange and synchronization. Press left soft key to do options

4.5.5 Alarm

The alarm clock feature sounds an alert or makes a vibration alert at a time you specify. There are 3 alarm clocks can be edit and set.

4.5.6 Calendar

You can use this feature to view the year, date and solar term easily. Use navigation keys to navigate other date. Press left soft key, you can enter to submenu to do options.

4.5.7 Calculator

This feature can use your phone as a calculator for simple calculations. Press corresponding keys to enter the numbers.

4.5.8 STK

If your SIM card supports STK function, This function needs the network provider support. If user finds STK function can't operate normally, please contact the network provider.

4.6. Profiles

This phone provides several profiles, by pressing left soft key, you can enter to set: Active, Customize, Rename, and Enhance Sound.

4.7. Settings

4.7.1 Call settings

Dual-SIM, Call divert, Call barred, Call waiting, Hide ID, Others.

4.7.2 Phone settings

Time & date, Language Settings, Auto power on/off, Slide operation, Restore factory settings.

4.7.3 Display

Wallpaper settings, Idle display settings, Contrast, Backlight, Keypad backlight time.

4.7.4 Security

PIN, Modify PIN2, Phone locked, Modify the cell-phone password, Privacy, Auto keypad lock, Lock screen by end-key, Guard-lock, Fixed dialing, Blacklist.

4.7.5 Connections

Network account, GPRS service, Data connection setting, Network selection.

4.8. My Files

Enter this menu; you can check the files store on T-flash card. Press left soft key, you can do options.

4.9. Games

Your phone supplies built-in game, you can play it whenever or wherever you want.

5. Entry mode

You can use several methods for entering text and numbers. By selecting a Text Entry Mode, the phone provides a few Text Entry Mode for new adding, editing contact records, finding contacts, editing SMS and writing memos. Select Text Entry Mode:

5.1 Letter entry mode

Editing interface, click on the appropriate soft keyboard subtitles.

5.2 Number entry mode

Click the top left corner of the input image to switch to digital input, through the point of the soft keyboard to enter the corresponding number.

6. Care and maintenance

Battery care

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery.
- Leaving the battery in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C).
- Battery performance is particularly limited in temperatures below freezing. Cellphones are not considered household waste.

Mobile phone maintenance


- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices. All of the above suggestions apply to your device, battery, charger.

7. Technical Information

Mobile phone hardware version number:

SC6531

Size Length ×Width ×Depth

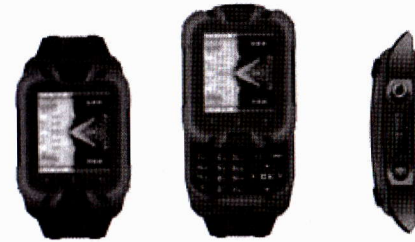

Exclusions:

Subject to the exclusions contained below:

1. Damage due to the improper use.
2. User does not follow the manual.

Explanation:

The company has the final right of the explanation for this document.

8. warnings:

1. please used original matched battery. If wrong battery is used, there will be danger of explosion.
2. Disused old battery, please handle it according to local environmental

protection law and don't throw it at random.

All pictures are for reference only in the instruction book; please refer to the actual phone.