

User's Manual

- **Specification:**

Support software: Laser_Carver;

Image formats: jpg;

Image Size: 512x512 pixels;

Image engraving pattern: Bitmap engraving;

Power mode: Dual USB powered;

Input voltage: 4.2V-5.5V;

Input Current: 1A;

Support xp, win7, win8, win10;

Can be carved items included: Hard wood, plastic, bamboo, rubber, leather and so on.

Can NOT engrave Metal/Aluminum/Acrylic. Please wear protective glasses before carving

- **Software download link:**

www.trusfer.com

- **NOTE! IF can't Print Please check:**

- **1.Connect:**Make sure your system is right, and connect the right com port.
- **2.Power:**Make Sure the input power is 5V1A, if Stop when in the process of carving,
This kind of phenomenon is because the computer usb power supply shortage.
- **3: FOCUS:**Carving the focal length of the different object is different, need to adjust
the focal length of the laser

