 


User Manual

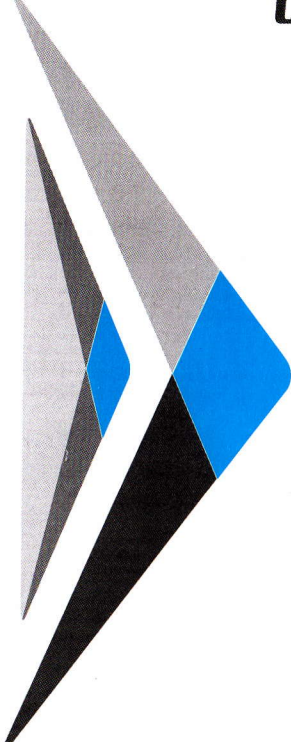

OTT
TV BOX



Preface

Thanks very much for choosing our TV Box. In order to make it more convenient for you to use proficiently, we provide you with a user manual. Please read it carefully before using and properly keep it for reference.

Statements

We have made every effort to provide the most current information about the product.

We do not grant any guarantees as to the contents of the present instruction manual and disclaim any implied guarantees concerning market value or suitability for specific purposes.

The information contained here is an instruction intended to enable the correct usage and maintenance of the receiver.

We reserve itself the right to introduce amendments, changes or translations of the user manual without prior notification thereof. For this reason, we recommend you regularly visit our website in order to obtain the latest information.



Contents

Chapter 1 System Introduction

1.1 Key Features	02
1.2 Environment for System	02
1.3 Package Contents	02

Chapter 2 Remote Controller

2.1 Introduction of Remote	03
----------------------------	----

Chapter 3 System Connection

3.1 Startup	04
-------------	----

Chapter 4 Home

Chapter 5 Apps	05
----------------	----

5.1 Email	05
-----------	----

5.2 PPPoE	06
-----------	----

5.3 Browser	06
-------------	----

5.4 Movie Player	07
------------------	----

5.5 Media Centre	07
------------------	----

5.6 Gallery	08
-------------	----

5.7 File Browser	08
------------------	----

5.8 Download	09
--------------	----

5.9 Music	09
-----------	----

5.10 App Installer	10
--------------------	----

5.11 Miracast	10
---------------	----

Chapter 6 Settings

6.1 Network	11
-------------	----

6.2 Display	11
-------------	----

Chapter 7 Trouble Shooting	12
----------------------------	----

Chapter 1 System Introduction

1.1 Key Features

- Android 5.1 operating system with Quad-Core Cortex-A53.
- Support many kinds of IPTV and OTT TV programmes.
- Support three main HD formats: VC-1, H.265, H.264, MPEG-2 and many other normal formats such as MPEG-1, MPEG-2, MPEG-4, DIVX, REALMEDIA and so on.
- Video formats include avi, mpg, vob, rmvb, mkv, m2ts, ts and so on.
- Photo formats include JPEG, BMP, and PNG up to 80M pixels.
- Audio formats include MP3, WMA, WAV, AC3, DTS, AAC and so on.
- Support SD/SDHC/MMC cards.
- Support two USB 2.0 host connectors with maximum output current of 2A/5V.
- Support standard RJ45 cable network connection and wireless network connection.
- Support infrared remote controller operation.

1.2 Environment for System

Operation : Temperature limitation: 0~40°C; Humidity limitation: 20~80%.

Storage : Temperature limitation: -20~50°C; Humidity limitation: 10~90%.

1.3 Package Contents

Accessories	Quantity
Power adaptor	1
Remote control	1
HDMI cable	1
User manual	1



Chapter 2 Remote Controller

2. 1 Introduction of Remote

 


- Power: Press to turn on/off
- Website: Press to enter the browser
- Mute: Press to turn down the volume
- Vol: Press to increase/decrease the volume
- Navigation: Press to navigate left/right/up/down.
Press OK to confirm your choose.
- MENU: Press to choose function menu of corresponding application in video, music, photo and website.
- Home: Press to get back the main menu.
- Return: Press to return back to previous menu
- Number: Press to choose the number.
- Backspace: Press to backspace the input.
- Mouse: Press to use the navigation button as mouse.

Chapter 3 System Connection

3.1 Startup

Turn on the TV box while indicator light is blue. Enter into main menu at about 30 seconds.

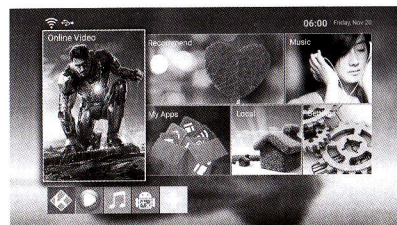

Chapter 4 Home

There are apps which you usual use.

You can add the apps according to your own preference.

 
Please tick the apps you need. Tick it again when you don't need it.






5.8 Download

Move to "Downloads". Press OK to enter in. You can check the status here when downloading apks from the internet.

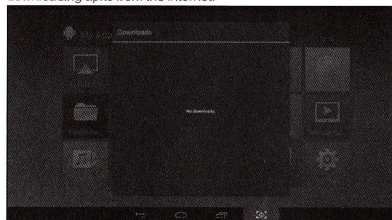

5.9 Music

 Move to "Music". Press OK to enter into the music list. This is for local media player. Here you can enjoy beautiful music.

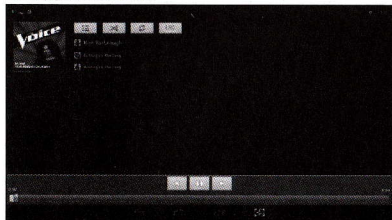


5.10 App Installer

Move to "Appinstaller". Press OK to enter in.

You can install software by this appinstaller function. Please first download your desired software by apk formats from the computer to the USB. You will choose your desired device in order to scan the apks.


Press OK to install your desired software.

 After the installation finished, the software icon will be shown on the applications menu.

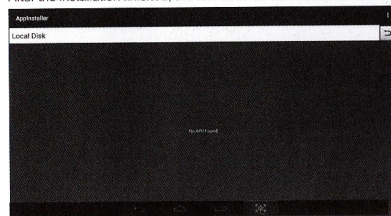

5.11 Miracast

 Miracast: Please make sure the android TV box and mobile phone are under the same WIFI environment. Press "Miracast" on android TV box, it will find peers automatically, and click "setting" on your mobile phone, enter into "WLAN", Click "Menu" to choose "WLAN Display" on your phone. Choose to share files.

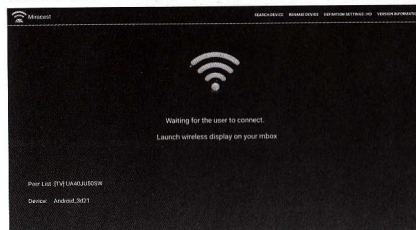




Chapter 6 Settings

6.1 Network

Wi-Fi

 
Select "Network" Click "OK", Select "Wi-Fi" Click "OK" to confirm.

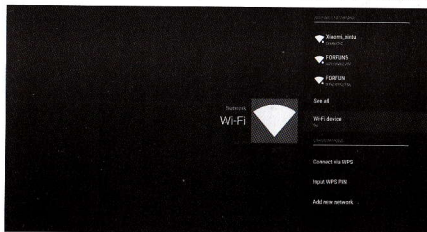

6.2 Display

Move to "Display".

 Here you can set wallpaper, HDMI audio output mode, turn on/off hide status bar, display position, choose the time of start screen saver.

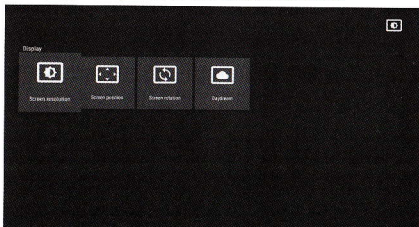

Chapter 7 Trouble Shooting

Under no circumstances should you try to repair the TV Box by yourself, as this will invalidate the warranty. Do not open the TV Box as there is a risk of electric shock. If a fault occurs, first check with points listed below before taking the TV Box for repair. If you are unable to remedy a problem by following hints, consult your dealer for help.

Problem	Solution
No power	-Check if the power adaptor is properly connected to the power and the TV Box. -Press the power on the remote controller to turn on the power.
No picture	-Reconnect with HDMI cable or AV cable. -Check if the TV is switched on.
No sound or distorted sound	-Adjust the volume. -Check that the speakers are connected correctly.
No audio or digital output	-Check the digital connections. -Check if your amplifier is set correctly.
The box does not respond to the Remote Control	-Aim the remote control directly at the sensor on the front of the TV Box. -Reduce the distance to the TV Box. -Replace the batteries in the remote control.
Player does not respond to some operating commands during playback	-Operations may not be permitted. Refer to the user manual. -Possibility of system halted, re-insert with power adaptor to restart.
No sound during movies playback	-The audio codec may not be supported by the TV Box. You can change to the supported audio on playing menu. -Check the volume.
The contents of the USB flash drive cannot be read	-The USB flash drive format is not compatible with the box. -If one of the USB can not be read, please turn off the TV Box for 30 seconds and restart the TV Box.
Slow operation of the USB flash drive	-Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen.
No sound with HDMI connection	-Check the connection between the TV and the HDMI jack of box. -Check your TV system setup. -Check the volume.
The TV screen is blank and the player LED is blinking	-Turn off your TV Box, wait 30 seconds, turn it on again. -If under HDMI status, check if HDMI connection is correct or change another HDMI cable set the output resolution of this TV Box into 720p.