



INSTALLATION DIAGRAM

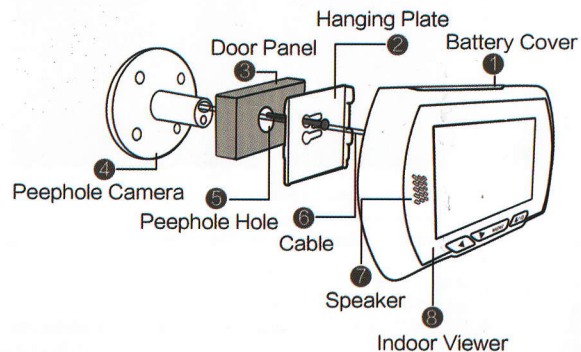


PACKING LIST



Appearance Function Diagram

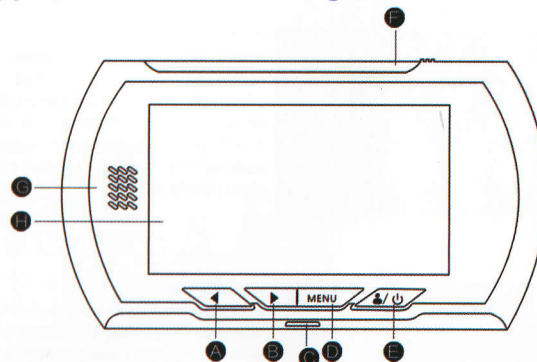


- A: Left/Up B: Right/Down
 C: USB Interface D: Menu Button (when the camera is on then press menu button into the main interface)
 E: Power On/Off. Viewing key. Press power on for 3S power off. Press power on key open the camera on the standby mode. In Viewing interface, Press power on again taking picture or taking video. Press power on back to the main interface
 F: Battery Cover G: Speaker H: LCD Display

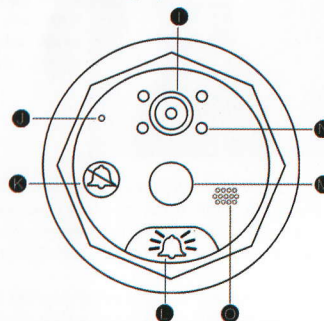


- I: Camera J: MIC K: No disturb indicator light (In this mode, Press doorbell button no disturb indicator lights up. It means under No disturb mode)
 L: Doorbell button M: PIR sensor (when the visitor near the door 1m to 2m, the doorbell lights up)
 N: IR LED O: Peephole Camera


Installation Steps

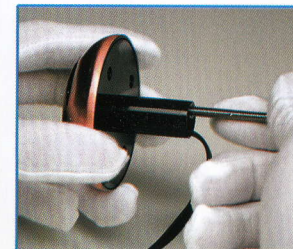

Choose screws (suitable for thickness of the door) and screw them into the handset

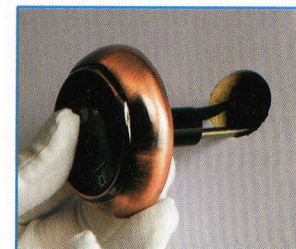

Pass the cable through the doorway outside

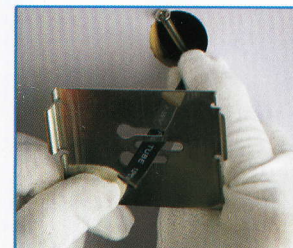


Pass the cable through the hanging plate inside




After straightening out the cable, pass the screw through the hanging plate



Tighten the screws, fix the hanging plate

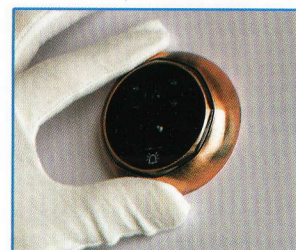

Fixed Peephole Camera plate

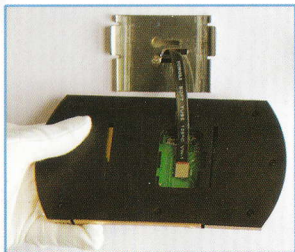

Rationalize the cable and aligned host back slot to hanging board.



Buckle cable plug into slot



Keep host close to hanging board and buckled



Buckle cable protective cover

Safety Notice

Do not put the product in high temperature, humidity, dust and salt spray and other harsh environments, and do not expose to rain. Otherwise it is easy damage machine.

Please do not squeeze the lens and black ball on the top hard, or it will damage the hardware.

When installation, please don't pull the flat cable too hard, and avoid scratch the date cable (it will not within the guarantee range for improper operation to lead flat cable damage)

Door Thickness Requirement


Door Hole Size: 14mm-50mm Door Thickness Size: 45mm-95mm

When choose screw to install the outdoor machine, please confirm the door's thickness. According the door thickness to choose the right screw

Note: Door thickness 45mm-60mm choose 35mm screw Door thickness 60mm-75mm choose 50mm screw Door thickness 75mm-85mm choose 60mm screw Door thickness 85mm-95mm choose 70mm screw

Function Operation


01

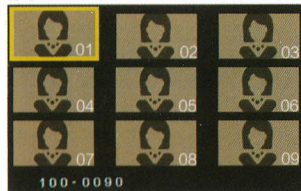

A. Picture Viewing

Press Left or Right key to select function. Press Menu key into picture, Press Menu key to check each picture. Press up or down key into last picture or next. Press Menu key again delete the pictures. Press power key back into the main interface.

02

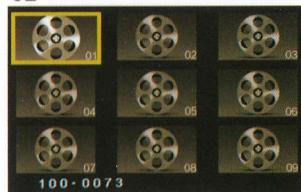

B. Video viewing

Press Left or Right key to select function. Press Menu key to confirm into video. Press Menu key to check each video files. Playback automatically. Press up or down key into last video or next. Press Menu key back into the main interface.

03





C. Mode Switch

Press Left or Right key to select function. Press the Menu key enter into mode switch. At home Leave Home and No Disturb.

1. At home Mode. In this mode press doorbell key. The indoor machine bells ring, and the display lights on at the same time. Open the camera automatically. You can see the visitor directly. Click the switch key to take pictures or video when necessary. 10s for video recording time. Into standby mode if no other options after it.
2. Leave home mode. In this mode press doorbell key. The indoor machine bells ring and the display lights off. Taking picture or recording video automatically. 10s for video recording time. will into standby mode if no other options after it.
3. No disturb Mode. In this mode Press doorbell key the lights on. it means no disturb mode. The indoor machine bells won't ring and the display lights off. Taking picture or recording video automatically. 10s for video recording time. Into Standby mode. No Disturb lights off.

SETTING:

Press Left or Right Key into select function, Press menu key confirm into settings for each Parameters of function.

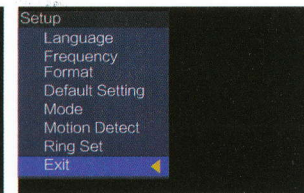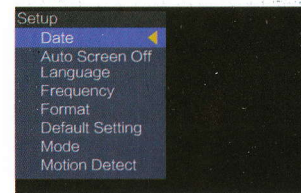

1. Date and Time Settings: Press up or down key to set. Press menu key confirm it then back into viewer interface.
2. Automatic shutdown (Into standby Mode). The Default Settings is 10S for power saving.
3. Language Setting
4. Frequency setting: default setting 50HZ
5. Pay Attention to the T card: All of the picture and video files will be deleted after Formatted.
6. Default setting, select confirm to restore factory settings.
7. The selection of video recording, after setting finished, the recording mode of video will be opposite it.
8. Motion Detection Settings. Select on. when the visitor near the door 1m to 2m after 5s will start to taking picture or taking video automatically
9. Ring setting: three selection of ring volume, high, middle and low, the last one is the ring set, you can choose different built-in ring music as the doorbell.
10. Exit the setting return to the viewer interface.