

Contents

Warning and Precaution.....	1
Introduction	1-3
Installation of the Float, Fishhook and Monitor.....	4-7
Accessories	8
Specification	9

Warning and Precaution

WARNING


Please use the adaptor together with the product only! We are not responsible for the problem caused by any other adaptor

Precaution

- 1.A good image is not available when camera just opposite to the sun, also for safety do not put the camera under the blazing sunshine for quite a long time;
- 2.Put the camera at a appropriate position for a good image;
- 3.To keep it well-preserved, please wash the camera and cable by soap or warm water after using,;
- 4.Warranty is not available if the unit being opened;

Introduction

CR110-7HB (4.3")

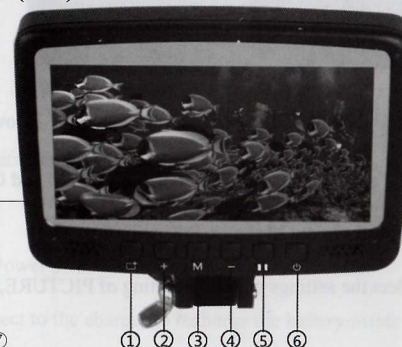

① COLOR ② + ③ MENU ④ - ⑤ MODE ⑥ ON/OFF ⑦ TF Card

MENU: To access the settings menu of PICTURE, SYSTEM and CLOCK

LCD ON/OFF: To Power On & Off the LCD screen

+ - : To select the settings under the setting of PICTURE, SYSTEM and CLOCK

CR110-7H (3.5")

⑧: M

⑩: ◀

⑫: ▼



⑨: ⏻

⑪: ▶

⑬: ▲

⑧ MENU ⑨ LCD ON/OFF ⑩ Decrease ⑪ Increase ⑫ Down ⑬ UP

MENU: To access the settings menu of PICTURE, SYSTEM and CLOCK

LCD ON/OFF: To Power On & Off the LCD screen

◀ ▶ ▲ ▼: To select the settings under the setting of PICTURE, SYSTEM and CLOCK


CR110-7HB (4.3")

CR110-7H (3.5")

⑭: AV IN

⑮: Power ON/OFF

 
⑯: DC 9V



⑭: AV IN

⑮: Power ON/OFF

⑯: DC 9V

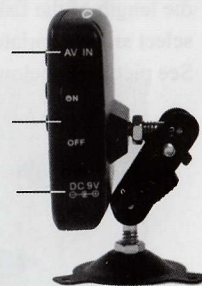

⑭ AV IN ⑮ ON & OFF ⑯ DC 9V

AV IN: Connect to the camera to have the video input, also provide power for the camera

ON & OFF: Power switch to power on & off the monitor

DC 9V: Connect to the charger to recharge the battery inside the monitor

Installation of the Float, Fishhook and Monitor


Float

Firstly use a fishing line to fasten the float across the hole on top of it, the length of the fishing line is according to your own choice. And then select an appropriate place on the wire of the camera to fasten the float. See picture as below




Fishhook


1.Connection in series: Normally fix 2pcs or at most 3pcs fishhook on the fishing line in a line, and each at 5cm distance, which can make sure all are clear when show on screen. The distance of the Lead can be a litter longer than the last fishhook on the line. See picture as below

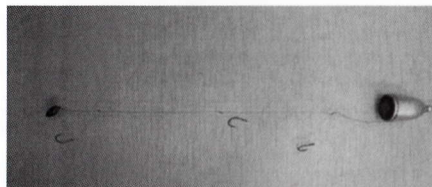

2.Connection in parallel: normally fix 2pcs fishhook just under the camera, the length of the fishing line is according to the clarity of the water. Lock the metal ring on the groove part of the camera body, and make sure to fix one fishhook on the loop to avoid the mixing with another one. See picture as below

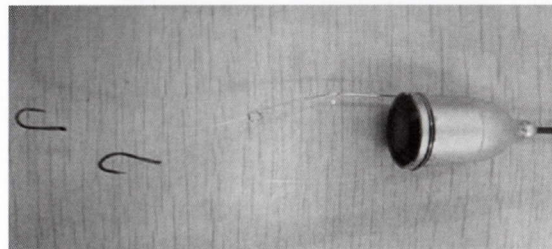

3.Notice: DO NOT fix the fishing line of the fishhook on the wire of the camera, which can destroy it. Make sure to fix the fishingline on the groove part at the end of the camera body. See picture as below

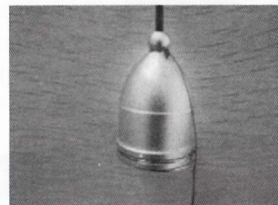

Monitor

Firstly fix the metal strip onto the fishing rod as picture 1 shows, and then install the holder together with the monitor onto the metal strip & fix it, as picture 2 shows. Adjust the monitor to an appropriate position to enjoy the fishing delight.

CR110-7HB (4.3")

picture 1



picture 2



CR110-7H (3.5")

picture 1



picture 2



Also you can choose not to fix the monitor on the fishing rod, but just put it on the ground, see picture at side



Accessories

CR110-7HB (4.3")



4.3 inch monitor



Camera with cable and reel



Metal clip



Float



Charger



Clip

CR110-7H (3.5")



3.5 inch monitor



Camera with cable and reel



Holder



Float



Charger



Metal clip



Wrench

Specification

Monitor

Screen size: 3.5" or 4.3" Digital TFT Screen

TFT Resolution: 960*240 (3.5") 480*272 (4.3")

Language: English, Japanese, Russian, Chinese

Power supply: DC 9V

Battery inside: 2600 mAh Lithium Battery

Battery working time: about 5-7 hours at 20 degree centigrade

Working Temp.: -20 ~ 60°C

Storage Temp.: -30 ~ 70°C

Camera

Lens: Color CMOS / CCD, HD 800TVL

Focus: 3.6 or 4.0mm

Visible distance (clear water): 1- 5 m

Working Temp.: -20 ~ 60°C

Storage Temp.: -30 ~ 70°C