

## **Contents**

Warning and Precaution..... 1

Introduction ..... 1

Installation of the Float, Fishhook and Monitor..... 5

Accessories ..... 10

Specification ..... 12

## Warning and Precaution

### WARNING

Please use the adaptor together with the product only! We are not responsible for the problem caused by any other adaptor

### Precaution

1. A good image is not available when camera just opposite to the sun, also for safety do not put the camera under the blazing sunshine for quite a long time;
2. Put the camera at a appropriate position for a good image;
3. To keep it well-preserved, please wash the camera and cable by soap or warm water after using,;
4. Warranty is not available if the unit being opened;

## Introduction

### 7H (3.5")

① : M

③ : ◀

⑤ : ▼



② : ⏻

④ : ▶

⑥ : ▲

 
① MENU ② LCD ON/OFF ③ Decrease ④ Increase ⑤ Down ⑥ UP

MENU: To access the settings menu of PICTURE, SYSTEM and CLOCK

LCD ON/OFF: To Power On & Off the LCD screen

◀ ▶ ▲ ▼ : To select the settings under the setting of PICTURE, SYSTEM and CLOCK

### 7HB 7HBS (4.3")

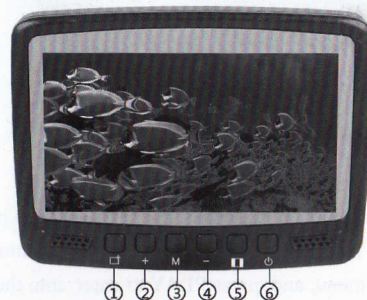


① COLOR ② + ③ MENU ④ - ⑤ MODE ⑥ ON/OFF

MENU: To access the settings menu of PICTURE, SYSTEM and CLOCK

LCD ON/OFF: To Power On & Off the LCD screen

+ - : To select the settings under the setting of PICTURE, SYSTEM and CLOCK

## 7HB 7HBS with DVR

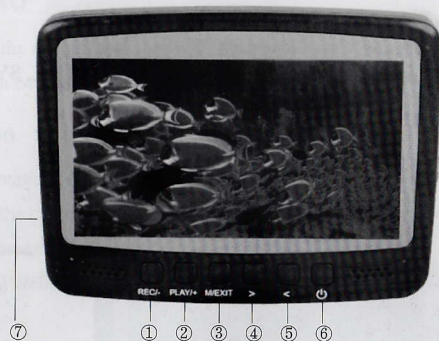 


① REC/- ② PLAY/+ ③ M/EXIT ④ > ⑤ < ⑥ ⏻ ⑦ SD card

### Operation of DVR

 1. Settings: Press MENU button to access the settings, and press it again to change the different menu of settings. Press the > & < buttons to change the items under the each menu, and press PLAY to enter into the settings of the each item. The REC/- & PLAY/+ buttons are to decrease & increase the numerical value of settings. In settings of Time & Date, press PLAY to enter into the settings, then press the > & < buttons to change the value of the time & date;
2. Video Recording: Press REC to record the video, and press it again to finish the recording;
3. Play the Video: Press button of PLAY to play the recorded video continuously, and press it pause. Press > & < buttons to display the next and previous recorded video;

4. Take & Play the Picture: Press > button to take the picture. Press < button to display the pictures taken by the camera, and press > & < buttons to display the next and previous pictures;

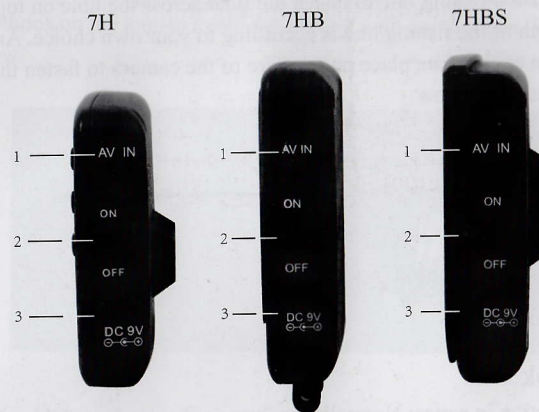

⑭ AV IN ⑮ ON & OFF ⑯ DC 9V

AV IN: Connect to the camera to have the video input, also provide power for the camera

ON & OFF: Power switch to power on & off the monitor

DC 9V: Connect to the charger to recharge the battery inside the monitor

## Installation of the Float, Fishhook and Monitor

 
### Float

Firstly use a fishing line to fasten the float across the hole on top of it, the length of the fishing line is according to your own choice. And then select an appropriate place on the wire of the camera to fasten the float. See picture as below




### Fishhook


1.Connection in series: Normally fix 2pcs or at most 3pcs fishhook on the fishing line in a line, and each at 5cm distance, which can make sure all are clear when show on screen. The distance of the Lead can be a little longer than the last fishhook on the line. See picture as below

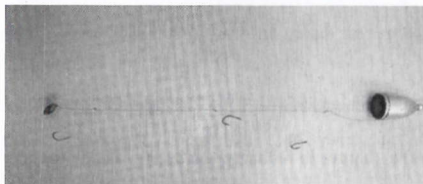

 2.Connection in parallel: normally fix 2pcs fishhook just under the camera, the length of the fishing line is according to the clarity of the water. Lock the metal ring on the groove part of the camera body, and make sure to fix one fishhook on the loop to avoid the mixing with another one. See picture as below

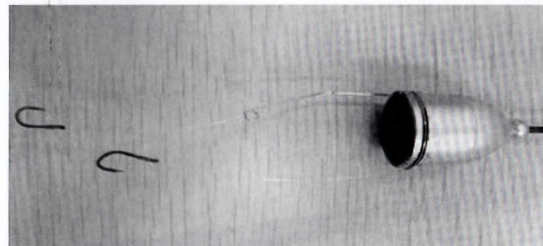

 3.Notice: DO NOT fix the fishing line of the fishhook on the wire of the camera, which can destroy it. Make sure to fix the fishingline on the groove part at the end of the camera body. See picture as below

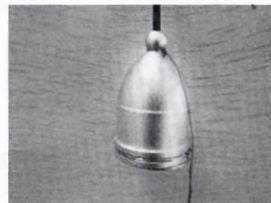

## Monitor

Firstly fix the metal strip onto the fishing rod as picture 1 shows, and then install the holder together with the monitor onto the metal strip & fix it, as picture 2 shows. Adjust the monitor to an appropriate position to enjoy the fishing delight.

7HB

picture 1



picture 2



7H & 7HBS

\* 7H, 7HBS bottom are the same as 1 / 4-20 standard screw holes, installation.

Installed in a fishing rod here

1. Insert bracket into the fishing rod.



1. Place the screw holes on the back of the stand to lock the display.





Installed in a ground here

1. Place the screw holes on the back of the stand to lock the display.



2. The stent is inserted into the ground rod lock.



## Accessories

### 7H (3.5")



3.5 inch monitor



Camera with cable and reel



Fixation



Float



Charger

 


Metal clip



Inserted to lever  
\* Not included, Optional

### 7HB (4.3")

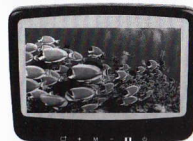

4.3 inch monitor



Camera with cable and reel



Metal clip



Float



Charger



Clip

## 7HBS (4.3")



4.3 inch monitor



Camera with cable and reel



Metal clip



Float



Charger



Fixation



Inserted to lever  
\* Not included, Optional

## Specification

### Monitor

Screen size: 3.5" or 4.3" Digital TFT Screen

TFT Resolution: 960\*240(3.5") 480\*272(4.3")

Language: English, Japanese, Russian, Chinese

Power supply: DC 9V

Battery inside: 2600 mAh Lithium Battery

Battery working time: about 5-7 hours at 20 degree centigrade

Working Temp.: -20 ~ 60°C

Storage Temp.: -30 ~ 70°C

### Camera

LENS: COLOR 1/3 CMOS , HD 1000TVL

Focus: 1.8mm, 3.6mm, 4.0mm optional

Visible distance (clear water): 1- 5 m

Working Temp.: -20 ~ 60°C

Storage Temp.: -30 ~ 70°C