


**U200**

\* The contents of this manual may differ in certain respects from the description  
of your phone depending on its software version and your telephone operator.

## Getting to know your mobile

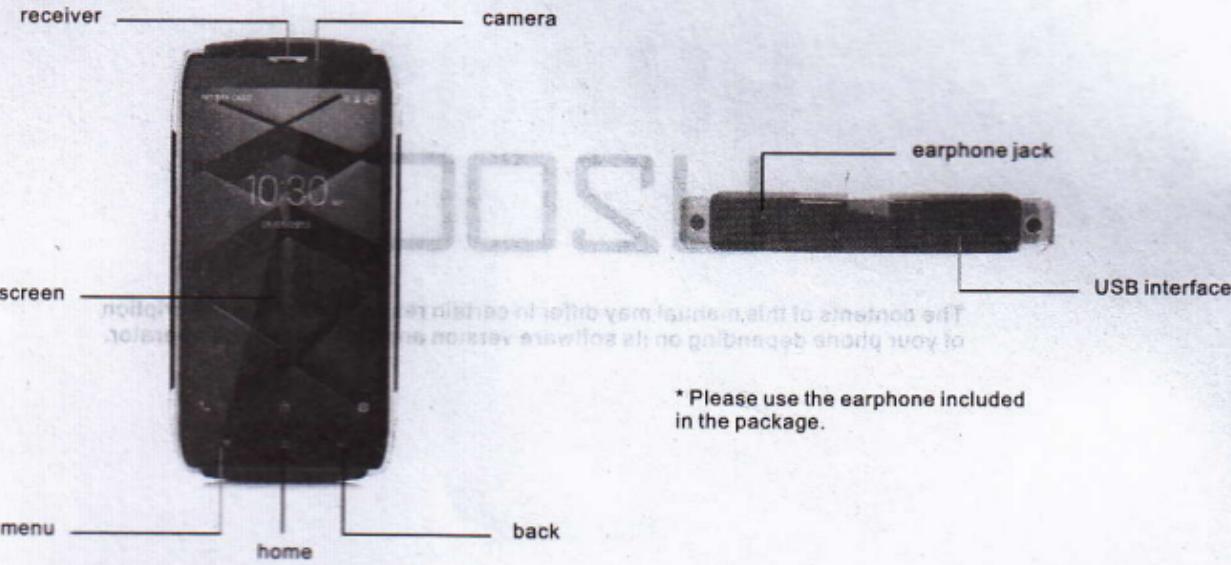

## How to use the phone keys

In any screen,

Tap "⬅", to return to previous screen or to exit the application.

Tap "➡", to return to the main menu.

Tap "≡", to display the settings/option list.

Tap the "on/off" button, to turn on or off the screen and block the screen.

Long press "on/off" to shut down or to restart your mobile.

Press and hold the "on/off" button and then press the volume down key to take a screen capture.


## Language

Tap the settings icon. Scroll down and tap the "Language and input", then choose language in the field "language".

## A new Generation of Transmission

Born to be delicate

High Performance of the most advanced aviation aluminum rim which can be fully prevent from oxidation. Smooth hand-feeling spread from the finger, smoothness feeling limitless. Just like born with it. Bring you luxury and exclusive moment.

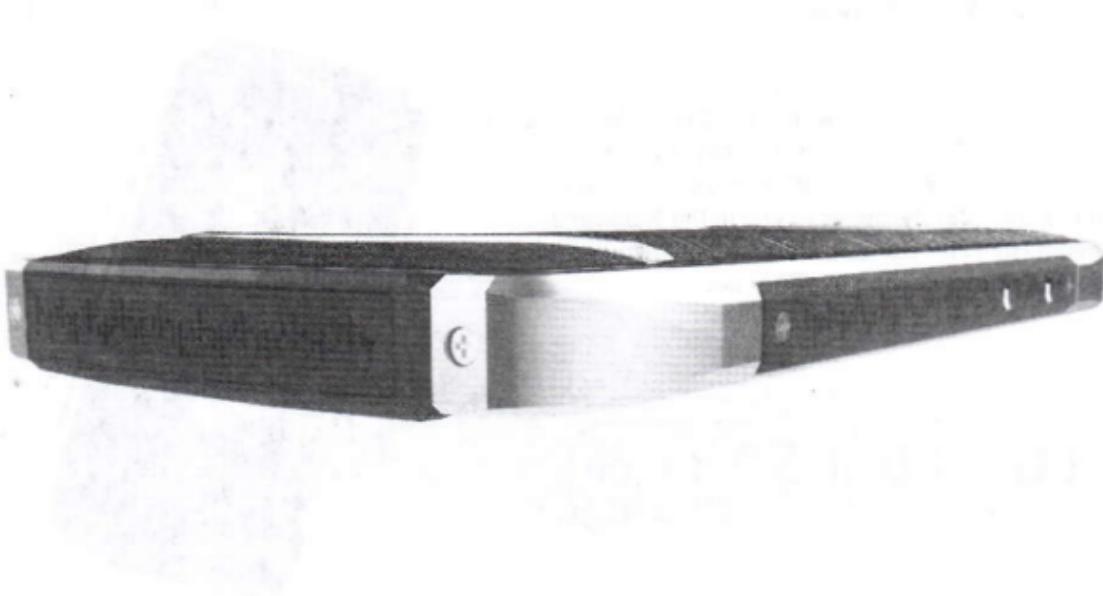

### Amazing 5.0" HD Screen

Bigger and enjoy more!

The display is covered by Korea LG Glass. Anti-scratch and anti-drop. The screen offers beautiful color rendition, brightness, saturation and great viewing angle, to completely immerse you in the Pioneer's premium HD 720P Screen. U200 will give you perfect video and photo viewing experience.

**LG**

Glass

**80%**

Screen

**5.0**

Inch

**720P**

Resolution



### The Latest MTK 64-Bit 4 Core Chipset

Smart MT6735

The network speed is up to FDD-LTE Cat 4, 4-core, and 1.0GHz per core, Graphics performance is increased by 80% compared with the previous generation, power consumption is less by 50%.



### **Designed for the On-the-Wind Lifestyle**

With 2GB RAM & 16GB ROM, Dual card, dual standby. The SD Card is extended to 64 GB. You can't miss any call. What's more, you can store your favorite songs, photos, TVs etc. U200 will be with you everywhere.

2GB RAM

16GB ROM

64 GB  
Max MicroSD Card




### **One of the world's best camera assembly**

#### **13MP Rear Camera**

The Pioneer packs with 13MP SONY IMX 164 Camera Sensor, allowing you to capture memories in amazing details for the faster focusing speeds and better color rendition, with its larger f/2.4 aperture you can take stunning photos even in low light, but also allows for more creative imagery.

#### **5.0MP Front Camera**

The Pioneer's 5MP Front camera is perfect for selfie and video calling, with its wide angle lens you can ensure that even group shots are perfectly framed.

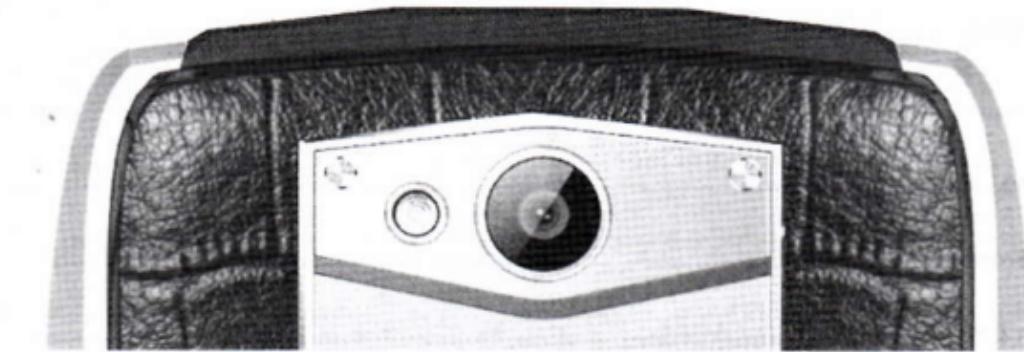

## **Table of Contents**

Safety Information.....	10
Appearance and Key Function.....	12
Introduction.....	14
Call Functions.....	16
Contacts.....	18
Messaging.....	22
Internet Browser.....	24
Bluetooth & Wi-Fi.....	26

Camera.....	29
Gallery.....	31
Music.....	33
Sound Recorder.....	34
Alarm Clock.....	36
FM Radio.....	37
Settings.....	39
Storage.....	45

## **Safety Information**

Please carefully read the terms below:

### **Use Safely**

Do not use the phone in situations where it might cause danger.

### **Transportation Safety**

Please observe all transportation laws and regulations.

Please drive with both hands on the wheel.

**DO NOT TEXT AND DRIVE**

### **Hospitals**

Please follow limitations.

Please turn off your mobile phone when near medical instruments.

### **Airports**

Remember to follow all airport and flight safety regulations.

Please do not use your phone during flight.

### **Toxic Chemicals**

Do not use your mobile phone around fuels or chemicals.

### **Hazard**

Do not use in hazardous areas where explosions may occur.

### **Accessories and Batteries**

Use only U100 authorized batteries and accessories.

### **Backup**

Remember to keep a written record of all important information.

### **Water**

Your phone is not waterproof. Keep it away from water and liquids.

### **SOS Emergency Calls**

Make sure your mobile phone is switched on and in a service area. In home screen, tap the phone key and dial 911 and send.

## Appearance and Key Function




Front Camera

Power key

Back

Home

1

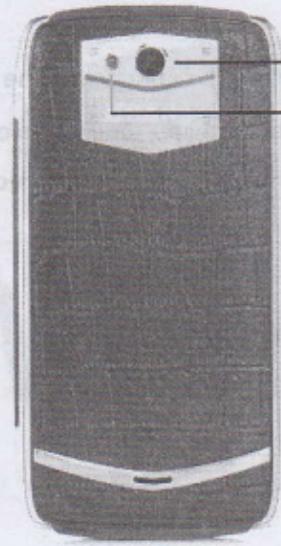

Rear Camera  
Flash

2

## **Introduction**


Please carefully read the terms below:

### **Installation of the SIM Cards**

**Note:** Please keep the SIM card out of the reach of children. The SIM card and its contacts are easily damaged due to scratching or bending. Please be cautious when carrying, installing or taking out the SIM cards. SIM: Contact your cellular phone service provider directly to obtain the SIM card.

#### **To insert SIM cards:**

1. Remove the rear cover. Insert the SIM card(s).
2. Insert the SD card. (For additional storage capacity)
3. Replace the rear cover of the phone and power on.

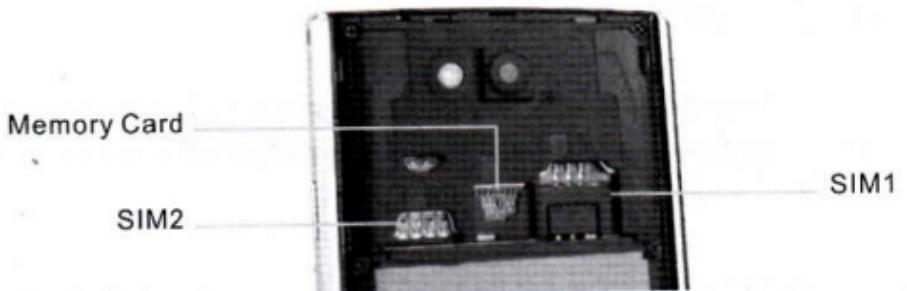

## **Power On and Off**

**On** - Please ensure the SIM card has been properly inserted into the phone. Long press the Power key to switch on the phone.

**Off** - In standby mode, long press on Power key until an options menu appears. Select Power Off in the menu and confirm.

## **Security**

You may set a security lock feature as a security measure for the phone. For further information regarding password locks, password revision and other functions please enter into the security option in system settings.

## **Call Functions**

At the dial keyboard, enter the phone number and then click the dial key. If dialing an extension, you may click the dial pad icon in the bottom of the screen to open the interface and enter the number of the extension. You may also press and hold the 0 key to add a (+) sign when adding an international dialing prefix.



11:27 AM



11:27 AM

Enter a name or phone nu...

13631553825

SPEED DIAL RECENTS CONTACTS

13631553825

### **Call history**

Every telephone number called and received will be saved in the history. All numbers in the history can be dialed directly by clicking the CALL BACK on the screen. When the number appears on the list, click it to view details.

### **Call Options**


There are different options that can be used in the history and dialing interface. You may press the MORE while in the dial interface and adjust speed dial and call settings. In the dialing interface, you may press the search button to browse through contacts list or set default contact resources.

### **Contacts**

**Enter:** Click on the applications menu and select contacts.

The default display is the phone contacts and SIM card contacts.

The contacts are organized alphabetically by default.

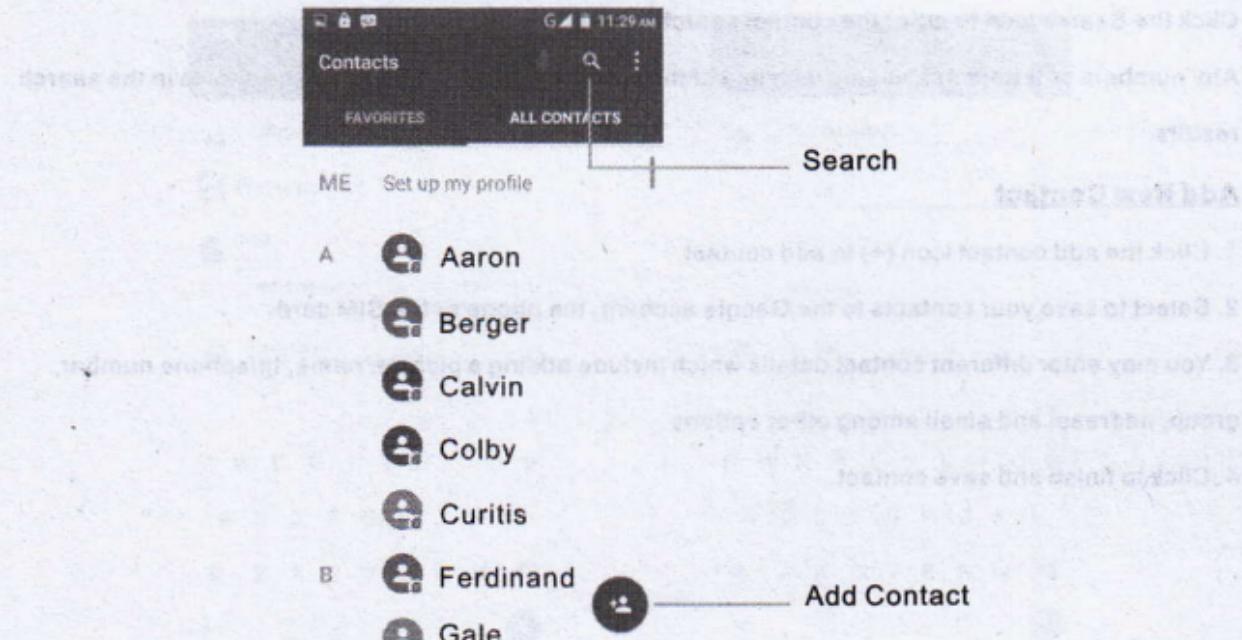

Click the Search icon to enter the contact search interface.

Any numbers or letters associated with any of the contacts saved in the list will be shown in the search results.

### Add New Contact

1. Click the add contact icon (+) to add contact.
2. Select to save your contacts to the Google account, the phone or the SIM card.
3. You may enter different contact details which include adding a picture, name, telephone number, group, address, and email among other options.
4. Click to finish and save contact.



## **Messaging**

You may use this function to exchange text messages and multimedia messages with your family and friends. The messages to and from the same contact or phone number will be saved into a single conversation so you may see the entire message history conveniently.

### **Send an SMS**

Application Menu » Messaging » New message (or shortcut icon)

1. Click to enter recipient      (You may enter contacts from contact book or enter a new number)
2. Compose Message
3. Send

### **Send an MMS**

When creating message, the default message style is SMS. The message will automatically convert to MMS when adding an attachment.

1. Click the attachment icon in the messaging interface.
2. Click to add attachments and create an MMS message.



Attachment Type  
for MMS Message

## **Internet Browser**

### **Menu Functions**

#### **Windows**

- . You may view all windows open by clicking the windows icon in the upper right part of the browser.

#### **History**

- . Click the history option to make the current URL as a saved Bookmark.


#### **Bookmarks**

- . Click Bookmarks to opened saved bookmarks.

#### **More:**

**Settings:** Contains a variety of browser settings.

**Help&feedback:** help you to use better and any problem can feedback to google.

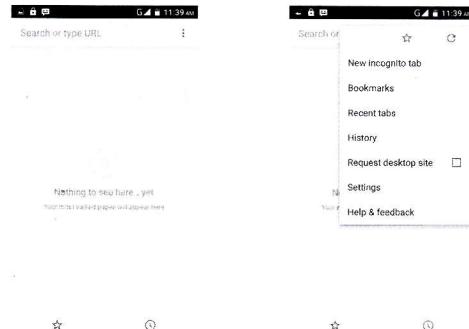


## **Bluetooth & Wi-Fi**

Bluetooth is a short-range wireless communications technology that devices can use to exchange information and connect to different types of devices which include headsets and other devices.

### **Power on Bluetooth**

- 1) Settings » Bluetooth and select to power on bluetooth.
- 2) The bluetooth icon will appear in the notification bar, and the phone will start to scan for all devices within range.
- 3) In bluetooth settings all the devices found will displayed in the list under the icon.

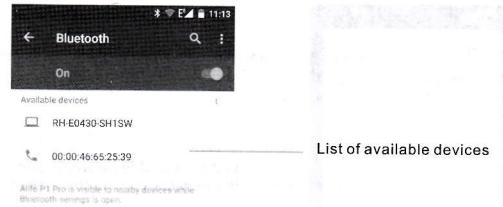

### **Power on Wi-Fi**

- 1) Settings » Wi-Fi and select ON to power on Wi-Fi
- 2) Click on the desired Wi-Fi network to be connected. Unsecured networks can be connected to directly - secured networks require a password or credentials prior to connection.



List of available networks and the network connection screen

camera interface. When in the camera viewfinder mode, you can switch to video or photos' gallery.



Select between Camera & Video

## Camera

### Camera

Prior to use: Insert SD card before using the camera or video camera. All photos or videos taken by the phone are typically stored in the memory card for large storage capacity of images.

#### Open Camera

1 Applications Menu » Camera

2 Switch to video mode if you want to record videos.

Note: You may place a camera shortcut icon on any of the screens

#### Take Pictures

1 Aim the object that the picture will be taken.

2 Press the "Shutter" button on the screen.

3 After taking the picture, the file will be saved in the camera's gallery folder.

4 You can view the photos by clicking the preview box button.

You may adjust various settings for the camera by pressing Menu while in the



Pictures and videos are stored in separate albums

## Gallery

### Open Images

Applications Menu » Gallery

## **Share Pictures**

You may share pictures by sending them through different types of installed applications. You may also send pictures through the MMS message function by composing a message and attaching the picture. Any image can also be sent via the U100etooth function by selecting U100etooth equipment that has been paired.

## **Adjust Image**

Press Menu and Edit to adjust images

You may select from different effects that may include: Vintage, Black and White, Instant, Latte, Litho, X-Process, Crop, Rotate, Mirror, Straighten, Vignette, Contrast, Exposure, Auto color, Shadows, Vibrancy, among other settings that can be used to adjust picture images.

## **View Images**

In the picture interface, click on an album to view images

In the photo album, scroll the picture towards left to view the next picture or towards right to view the previous one.

## **Search Music**

You may choose to search for music from media folder through artist name, song name, album name. The following formats are available: AMR, MIDI, MP3, WAV, and OGG.

## **Sound Recorder**

The Sound Recorder can record voice or any audio.

You may send any recorded audio via Bluetooth or MMS and also have the option to make any recorded audio the phones default ring tone.

The recorder uses 3GPP format.

### **Record**

- Keep the phone's microphone near the voice source.
- Click the record button to record the audio.
- Click the stop button to stop recording the audio.

## **Crop Pictures**

If you want to adjust the size of the picture, use the crop tools. Once the arrow appears, pinch your fingers in or out to adjust the size. If you want to adjust the image and keep its proportion, please hold down any of the four corners of the image and adjust accordingly.

## **Music**


### **Open Music**

Application Menu » Music




All recordings will be saved in the recording folder in the default music program and can be accessed from the sound recorder application.

### **Recording Controls**

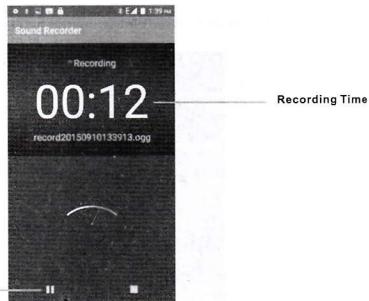

## Alarm Clock

1. Click on the Clock icon in the application menu
2. Click set alarm button and enter the alarm clock set interface where you may delete and edit alarms

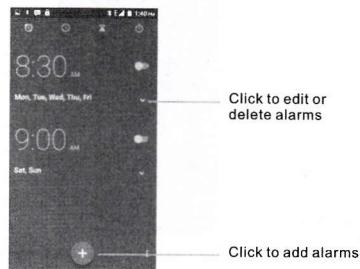

37

## FM Radio

### FM Radio

Through this function, you may listen to FM radio on the device. The FM radio uses the wired headphones as an antenna in order to receive signal. Before using this function, connect the original equipment headphones that came with the phone.

#### Open FM radio


Press the FM Radio icon to open the application.

1. Click "Search" automatic scans of FM channels.
2. Click to add favorite radio stations.

#### FM Radio as Background

Click on the Home key to move the FM Radio to the background.

38

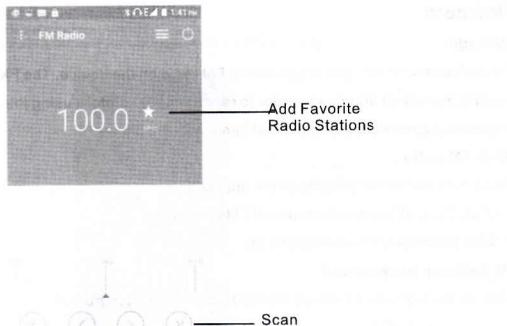

27

## Settings

### Wi-Fi

**Settings** » **Wi-Fi** to power on. When on, the Wi-Fi will automatically search for available networks. Any unsecured network can be used directly and any secured network requires a password or credentials prior to connection.

### Bluetooth

Press the switch to power on Bluetooth. Once on, the Bluetooth will automatically scan for any nearby open equipment.

### SIM cards

Press the switch to power on SIM cards. When insert two cards, click to set cellular data Calls/SMS messages.

### Data Usage

Mobile and Wi-Fi Data Usage

28

## More

- Airplane Mode
- Default SMS app
- Tethering, Portable Hotspot, VPN, APN
- VPN

### Cellular networks

 **Note:** When in flight mode, all network connections will turn off automatically.

### Display

Brightness, Auto rotating screen, Wallpaper, Screen Timeout.

### Sound&notification

This option sets the phone tone settings for receiving calls and notifications. Some of the settings include:

Vibrate, volume, ring tones, ring tones notification, dial touchpad, and haptic feedback and tones

41

## Storage

.View the phone memory usage.

### Battery

.Click to switch to power saving mode

### Apps

.Manage applications - Manage and delete installed applications.

.Running services - Press the 'Force Stop' button to stop any of the services listed and removes from the running services list.

### Location

.Mobile Network Location - Use wireless services to find locations in applications.

.When using the GPS, power on to set satellite positioning for accuracy.

### Security

.Set up screen locks: Use slide, face/voice unlock, pattern, PIN or password to lock the screen.

42

.Pattern: The first time there will be simple unlock instructions and examples. Click "next step" to continue the security pattern step.

.PIN: Enter PIN number to unlock the screen.

.Password: Use password to unlock the screen

You may stop the security feature at any time.

## Set up SIM card PIN lock

.SIM card PIN (Personal Identification Number) is used to prevent unauthorized use of SIM card. To change a blocked PIN code, you will need to unlock the SIM lock then go to the Change Password screen. The phone will automatically prompt you enter the old PIN code and ask to enter a new PIN code twice. The phone will then prompt you that the change was successful. If you enter the PIN incorrectly three times, the SIM and PIN codes will be automatically locked. You will need the PUK code to unlock the phone which is available through your service provider. If you enter the PUK code incorrectly 10 times, the SIM card will be permanently locked. Please see your service provider for a new SIM card.

.Password visible – Make the password visible when it's typed.

.Use security credentials - Allow applications to visit security credentials or other credentials.

## Accounts

.Add accounts, include Facebook, Google, IMAP, POP3, Twitter.

## Language & Input

.Language – Change the language of the phone.

.Custom Dictionary - Add or delete words to the custom dictionary.

.Keyboard Settings – Haptic vibration, Haptic tones, Capitalizing, Speech Input, Inputting words, Predictive text function, Auto-Text, Input keyboard method

## Backup & reset

.Backup Data – Will back up all application data, WLAN passwords, and other settings to Google's servers

.Restore to Factory Settings - Clear all data stored on the phone.

31

32



## date & time

- .Date and Time adjustment.
- .Time Zone - Select Time Zone according to where your location.
- .Select Date Format - There are 3 kinds of formats you can choose from:  
Month-Day-Year, Day-Month-Year and Year-Month-Day, and  
Year-Month-Day which is the default setting



## Scheduled power on & off

- .Schedule power on and off




## Accessibility

- .Power button ends call and auto rotate screen
- .Speak Passwords and large text



## Printing

45

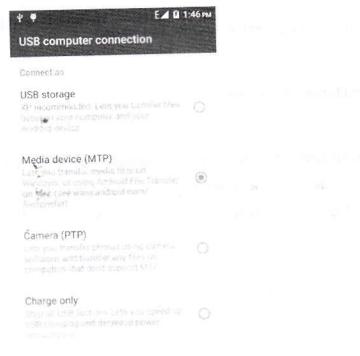

Need to download the "CloudPrint.apk" from the Internet and install.



## About phone

- .Phone information status and firmware updates

## Storage

Connect the phone with the USB cable provided. Once connected, a connection interface will appear. In the connection mode interface, select MTP and turn on from the connection screen to be able to transfer files. Other storage options are also available.

46

Some system settings, hardware, and UI options may vary depending on final version.

## Additional Information

The information provided in this user manual is subject to change without notice and U200 Products reserves the right to modify the manual at any given time. U200 Products has made every effort to ensure that this user manual is accurate and disclaims responsibility and liability for any inaccuracies or omissions. U200 Products makes no commitment to keep current the user manuals, however, does reserve the right to make improvements to the user manual at any given time without notice.