

ThiEYE

Action Cam i60

— 4K Version —

QUICK START GUIDE

Packing Details - 1

■ QUICK START GUIDE

09 快速操作指南 (简中)

■ 快速操作指南 (繁体)

25 Guide de démarrage rapide

■ Deutsche Anleitung

41 Petunjuk Penggunaan

■ スポーツカメラ

57 Инструкция по быстрой установке

 
■ Guia de Inicio Rápido



Waterproof housing



i60 action cam



Quick release buckle



 
Adapter




Switch support 1



Switch support 2




Curved adhesive mount

 

Flat adhesive mount

 Packing Details - 2




Vertical quick release buckle




Adhesive sticker x2



 USB cable



Battery

 

Wiper



Quick Start Guide




Cloth bag



Additional skeleton backdoor

The Appearance

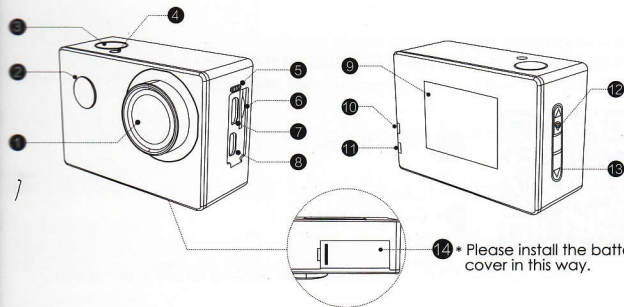

14 * Please install the battery cover in this way.

① Lens

② Power/Mode Button

③ Shutter/Select Button

④ Indicator Light

⑤ MIC

⑥ Micro SD Slot

⑦ USB Slot

⑧ HDMI Slot

⑨ 1.5' LCD

⑩ Charging Indicator

⑪ Status Indicator

⑫ Up/WiFi Button

 
⑬ Down Button

⑭ Battery Cover

Connect Your Smartphone to Camera

1 Download ThiEYE App.

Please scan the QR code below to download ThiEYE App, or download it from our official website www.thieye.com.



2 Hold UP/Wi-Fi Button for 2-3s, the LCD will show 'Waiting for WiFi Connection...'. 3 Connect your smartphone to Wi-Fi Network (Name: ThiEYE*i60, Password: 1234567890), then open the App and click the "Connect" button.

4 View and control your camera on smartphone via App.

Basic Operation


1 Charge the camera

Connect the camera with power plug or PC via USB cable, the charging indicator remains red while the battery is charging, and the charging indicator will turn off when the battery is fully charged.

2 Insert Micro SD card

Insert a Micro SD card. (Class 10 or UHS-I required, sold separately.)


3 Turn on/off the camera


Hold the Power/Mode Button "  " for 2-3s to power on/off the camera.

4 Mode Switching

Repeatedly press Power/Mode Button "  " to switch mode, there will be modes: Video Recording, Photo, File, Video Settings, Photo Settings, System Settings.

5 Video and Photo

Video Recording: Choose Video Recording mode, press Shutter/Select Button "  " to turn on/off. There will be a red dot flashing on the camera screen, and the status indicator will flash during recording. (*When you record videos via App control, the screen will automatically turn off)

Take Photos: Choose Photo mode, press Shutter/Select Button "  " .

6 Video Recording Mode

Timelapse: To take continuous photos at the interval of 3/5/10/30/60s of a changing

scene, then form into a time lapse video when play at normal video speed.

Slow Motion: Make a slow motion footage at 1080P 60fps or 720P 120fps/60fps when selecting Slow Motion Mode

Quick Shooting: Automatically start recording videos when turn on the camera.

Looping Record: Record and save videos every 1/3/5min, the latest video will overwrite the oldest video when Micro SD card is full.

7 Photo Mode

Self-Timer: Support self-timer at 3/5/10s setting.

Photo Burst: Support photos to 3/5/10 frames per time, press-and-hold for continuous shot.

Timelapse Photo: Support photos at the interval of 3/5/10/30/60s.

8 Car Mode


With the camera off and automotive charger connecting, when the car is started or a crash happened the camera will turn on and record automatically.

Accessories | Accessories details




Standard Backdoor

 Provides waterproof protection to 131' (40m).



Additional Skeleton Backdoor

Not waterproof, enables enhanced audio capture during activities.

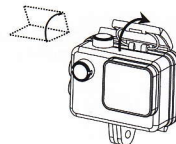



Waterproof Housing

Open the cover from the front


Accessories | Accessories Installing



 Flat Surface
Installing

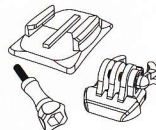


物品清单-1

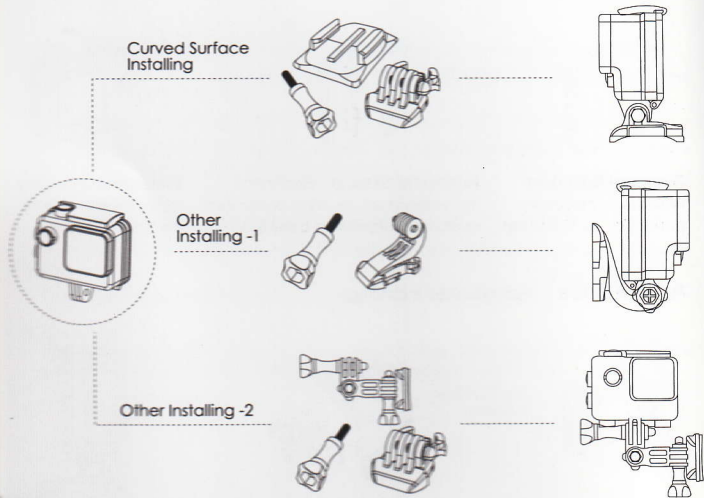

防水壳



 
运动摄像机 i60



标准卡扣



 
1/4英寸通用转接头




长转轴



 短转轴



平面粘贴底座

 

弧面粘贴底座