操作说明

Operation instruction

■ 触摸按键:灯光调节说明(如图)

Touch buttons: lighting adjustment instructions (pictured)

M	O	+	
模式	电源	加亮	减弱
M	O	+	-
Model	Power	Enlarge	Reduce

- 开启台灯:直接按电源开启或者关闭台灯
 To open the lamp: press the power to open or close the lamp
- 调整亮度: 在灯刚插电的时候按下电源触控开关灯这时是最亮,按加亮或减弱键(亮度+跟-是 5 档每档 20%),增加或减弱台灯的亮度 Brightness adjustment: the light just in full light when you turn on the light, press the Enlarge or reduce(Five file that move light, each a brightness decreased 20%), increase or decrease the brightness of lamp.
- 灯光模式:按键 M 调节色温,有三种模式:
 - 1. 冷光
 - 2. 暖光
 - 3. 自然光

Lighting Mode: Press M to adjust the color temperature, it has three models:

- 4. Cold white
- 5. Warm white
- 6. Nature white