 


1 Production Features

- 1.1 All sealed design, release you from daily internal
- 1.2 Using of the 20 thousand hours long life RGB-LED lamp, which makes it more colorful and abundant details.
- 1.3 Professional trouble shooting and protection design.
- 1.4Small in size and light in weight.
- 1.5Free exchange from 16:9 to 4:3.
- 1.6Low noise design and dust free design, free you from internal cleaning.
- 1.7Power consumption lower to 24W.
- 1.8Multi input interface: AV, VGA, USB, SD, HDMI.
- 1.9 Vehicle power supported.
- 1.10The projector designs are extraordinary and attractiv

7, Button function



move up and confirm the Multi-media item

Left: move left and vo down. Right: move right and volume up.

Down: move down and repeat by the Multi-media item Menu: OSD Menu.

Source: choose the signal input source.

Power: power on and off

8. Remote Button Function

- 1.Power 2.Menu 3.Mute
- 4. Photo button
- 5. Music button
- 6. Movice button
- 7. Source button 8.Repeat
- 9.UP\Down\left\right
- 10.OK button
- 11.Stop button
- 12.Exit button
- 13. Volume plus
- 14. Volume minus
- 15.Next
- 16.Forward 17.Back ward
- 18.Previous

2ATTENTION

- 2.1Please read this manual carefully before using it.
- 2.2To ensure stable power supply, please use good supply line and outlet with grounding.
- 2.3Please use the power supply indicated on the projector and the wire provided with the projector.
- 2.4Please do not dismantle the projector without authorization; ot herwise the supplier bears no responsibility for maintenance ser
- 2.5Do not look into the lens while the projector is on working to prevent eyes from hurting.
- 2.6Do not place the projector on the articles which may becom e obstacles for ventilation.
- 2.7This projector has no waterproof function; you need to keep it 5. Multi-media support files away from water. And vessels with water should not be placed around it
- 2.8To avoid electric shock, plaese keep the projector from rain and dampness.
- 2.9Please shut off the projector and unplug the wire if the projector will not be used for a long time.
- 2.10When the projetor is transpoted, please use the plastic foam and other anti-shock materials provided with the projector.
- 2.11If the projector is found to be damaged, please do not try to repair by yourself and please contact the distributor.

3 Fittings

_	Technique .			1
	User manual	1pc	3in 1 AV cable	1pc
	Power adaptor	1pc	Remote control	1pc

9Function operation

9.1 Switch-on and off

After powering though the power adaptor, then projector is under standby status.

Switch on: Press the power button or the power button on the remote control once, and then the projector is powered on.

Switch off: When you want to shut the projector ,please press the power button beside the indicate light or the power button on the remote control once, and then the projector is off.

9.2 Image focus

Place the projector vertical to the projector screen ,and then rotate the lens slightly,until the brilliant image presented.

Attention

Please connect the power adapter with the projector first ,then plug the socket into the outlet. Finally power on the projector.

9. 3 Menu Operation

9.3.1Input source selection



-12

-17

-18

-16

Press "source" button on the remote control or "input" on the projector to get the source menu, then press "OK" button on the remote control to confirm the input source you need

4 Specifications

Model		Image system	Lcd
Native Resolution	320x240	Supported resolution	1920x1080
Lamp	led	Input Witage	12V
	chinese/Engih/ect	Brightness	500lumen
Image szize	20-80inchs	Projection Distance	1-4meters
Color	16770k	Projection mode	Front projection
Power waste	24W	Speaker	1.0W*2
Contrast	400: 1	Lens	F=125
Weight	0.4kg	Size	137x136x56.6 mm
	Manual remote control	Working temp	-10-35°C
Output	Head phone	Input terminal	AV,VGA,USB/SI

File	Format	Sub-fix	Decoding	
Audio	WMA	.wma		
	MP3	.mp3		
files	M4A	.m4a		
	JPEG	. jpg		
Image files	BMP	. bmp		
illes	PNG	. png		
	MPEG1	.Dat\mpg\mpcg		
	MPEG2	. mpg		
Video files	MPEG4	.avi\mp4	DIVX, XVID	
IIICS	RM. RMVB	.rm\.rmvb	RV8\9\10	
	H264	. mkv\. mov	MPEG1,2,4	
	MOV	.avi.mp4		
	MJPEG	. avi		
	FLV	. flv	H264	
	VC1	.wmv\asf	VC1	
	DIVX	. divx\. avi	MPEG. DIV	


File	Format	Sub-fix	Decoding
	WMA	.wma	
Audio	MP3	. mp3	
files	M4A	.m4a	
	JPEG	. jpg	
Image files	BMP	. bmp	
mes	PNG	. png	
	MPEG1	.Dat\mpg\mpcg	
	MPEG2	. mpg	
Video files	MPEG4	.avi\mp4	DIVX, XVID
IIICS	RM. RMVB	.rm\.rmvb	RV8\9\10
	H264	. mkv\. mov	MPEG1,2,4
	MOV	.avi.mp4	
	MJPEG	. avi	
	FLV	. flv	H264
	VC1	. wmv\asf	VC1
	DIVX	. divx\. avi	MPEG. DIVX

9.3.2Picure menu operation and sub-menu adjustment



Press "OSD MENU" to enter into the main menu and press "◀/▶" "▲/▼" toeash

 sub-menu Picture sub-menu Available adjustment: picture mode, color temperature Aspectratio, noise reduction, screen rotate R/Land rotate up or down zoom



Sound sub-menu available adjustment: sound mode, balance auto volume sound, SPDIF mode Eq.



 
Time sub-menu available adjustment: clock offtime, Ontime, auto sleep



Setting sub-menu OSD Language English, restorefactory default, colorrange, bluescreen, osd

6. Product details







9.3.3 Multi-media menu operation

msert the USB or SD first, and then choose Media from source. Them choose the icon for different files and press OK to confirm.



By this menu, you need to play video, photo and music correspondently with the icon shoeing.

Remarks: You can only insert the USB or SD on at a time, or the projector can not recognize any of them