 


Rear view TFT-LCD Monitor

User's Manual


WITH READ USB/SD SLOT & MP5

■ Key Function (Without Bluetooth)

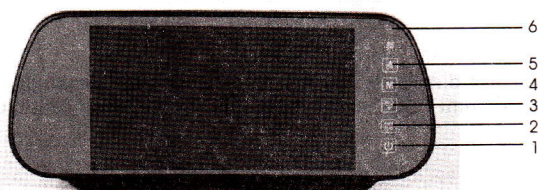

- | | |
|--------------------|--------------------|
| 1. Power | 4. Menu |
| 2. V1/V2 Switch | 5. Volume increase |
| 3. Volume decrease | 6. Remote Window |

 □ Remote Control:

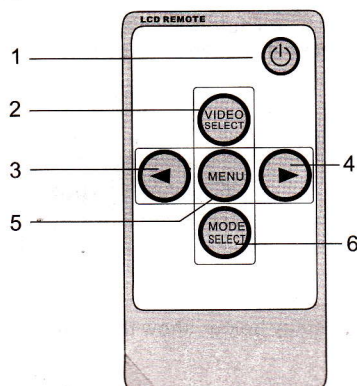

- | |
|--------------------|
| 1. Power |
| 2. V1/V2 Switch |
| 3. Volume decrease |
| 4. Volume increase |
| 5. Menu |
| 6. 16:9/4:3 Switch |

 
1

2

3


4

■ Key Function (With Bluetooth)

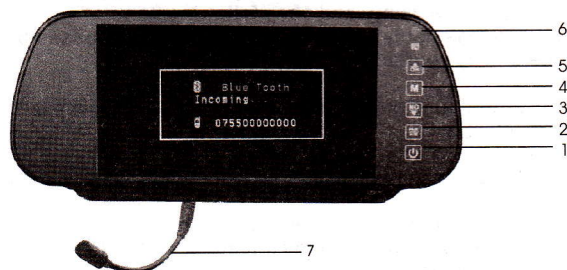

- | | |
|--------------------|--------------------|
| 1. Power | 5. Volume increase |
| 2. V1/V2 Switch | 6. Remote Window |
| 3. Volume decrease | 7. MIC Phone |
| 4. Menu | |

 □ Remote Control:

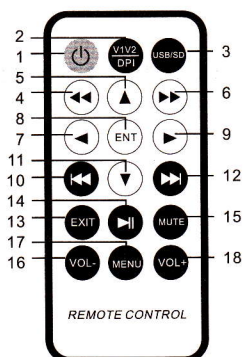


- | | |
|------------------|---------------------|
| 1. POWER | 2. V1/V2 |
| 3. USB/SD SWITCH | |
| 4. FAST BACKWARD | |
| 5. UP | 6. FAST FORWARD |
| 7. LEFT | 8. ENTER |
| 9. RIGHT | 10. PREVIOUS |
| 11. DOWN | 12. NEXT |
| 13. EXIT | 14. PLAY/PAUSE |
| 15. MUTE | 16. VOLUME DECREASE |
| 17. MENU | 18. VOLUME INCREASE |

■ Main specifications and functions

- *Panel size: 7 inch(16:9)
- *Resolution:480(W) X RGB X 234(H)
- *System:PAL/NTSC(AUTO)
- *Power:DC 12V
- *Consumption:6W
- *Video:Two way Viideo input,Blue screen when no signal
- *Rear watching: When Parking the car, the rearview image appears onto the screen automatically
- *Operate mode: Keys and remote control

 
■ Installation and Connection:

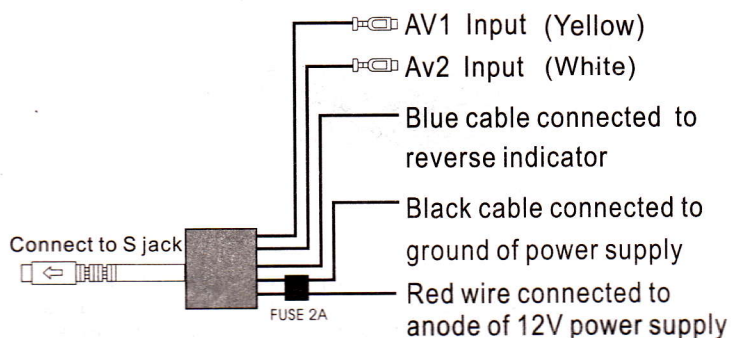

■ Main specifications and functions


- *Panel size: 7 inch(16:9)
- *Resolution:480(W) X RGB X 234(H)
- *System:PAL/NTSC(AUTO)
- *Power:DC 12V
- *Consumption:6W
- *Video:Two way Viideo input,Blue screen when no signal
- *Rear watching: When Parking the car, the rearview image appears onto the screen automatically
- *Operate mode: Keys and remote control

 ■ Installation and Connection:

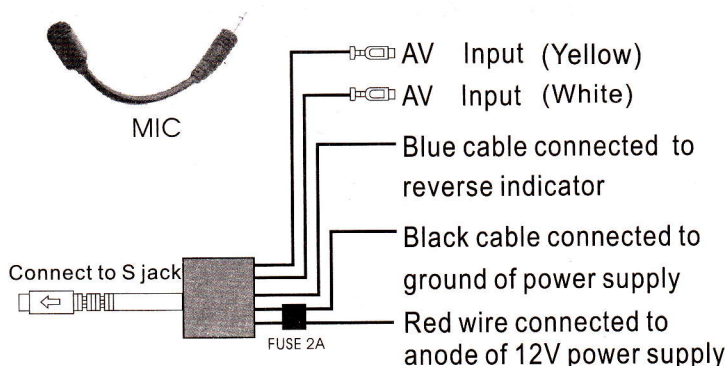


■ Blue Tooth operating description

 1. After connecting power supply monitor is on, that display below menu, then will be off automatically in 3 seconds



2. Roopen monitor

 3. Turn on mobile Blue Tooth function to search monitor, simultaneity press "PAIR" button for 3 seconds on monitor and display below




4. Mobile will display monitor model number "CAR BT" after serching successfully, then choice "connect" button on mobile to enter Blue Tooth password "8888" to connect monitor Blue Tooth function display below



5. Monitor display below after connecting successfully, and utter "beep" hint voice, at the moment, monitor Blue Tooth function is ON




 6. When call coming, monitor will be on automatically, and display below, Press "OK" button to receive call, end call by pressing "NO" button



7. After receiving call monitor display below, show this unit is on normal receiving state.

 
5 6
7 8



8. End call monitor display below, indicate this unit Blue Tooth connect normally



 □ Instructions for Remote control (shown as pictures)

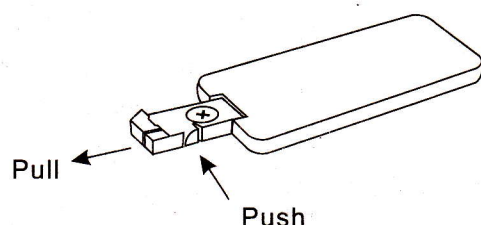

⚠ Warning: Be sure your safe, Don't watch video figure when drive a car.